



# Audiovox Tri-mode CDM-9000 Keypad Replacement

This guide will help assist you on how to replace the keypad on your Audiovox cell phone.

Written By: Summer Sines



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Keypad




- Flip your phone over so the screen is facing down.
- About half way down there is a small button with a few grooves. Push this button in an upward fashion. This will release the battery from the back of the cell phone.

## Step 2

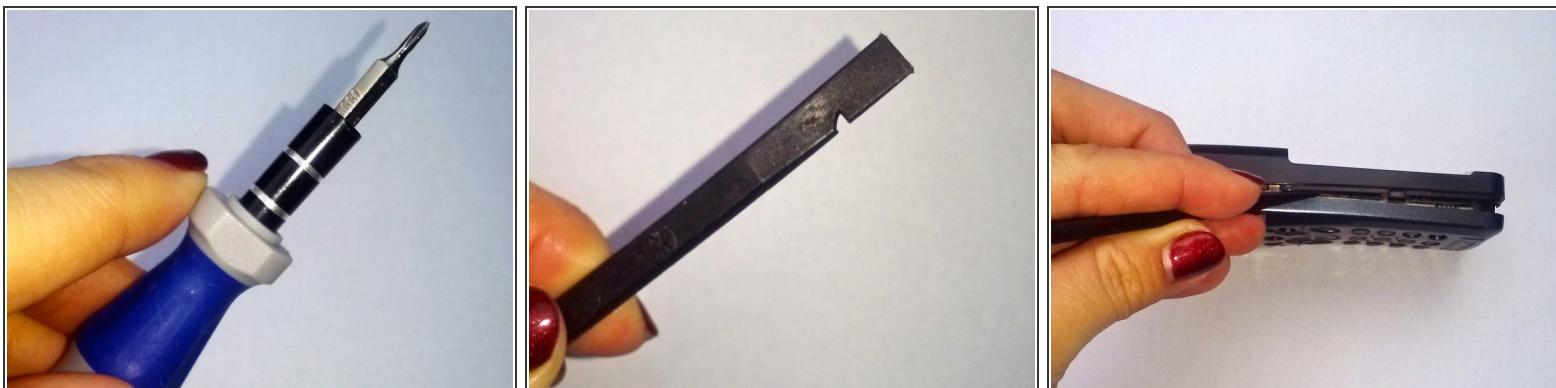

- Once the battery has been removed, you will need a small Phillips 60 mm screwdriver. Remove the two 1.2mm Phillips #1 screws on the back of the phone.
- Use a spudger tool to pry apart the phone. It may be a little difficult to pry open. Use the flat part of the spudger tool and go all around the phone. It will come apart.

## Step 3

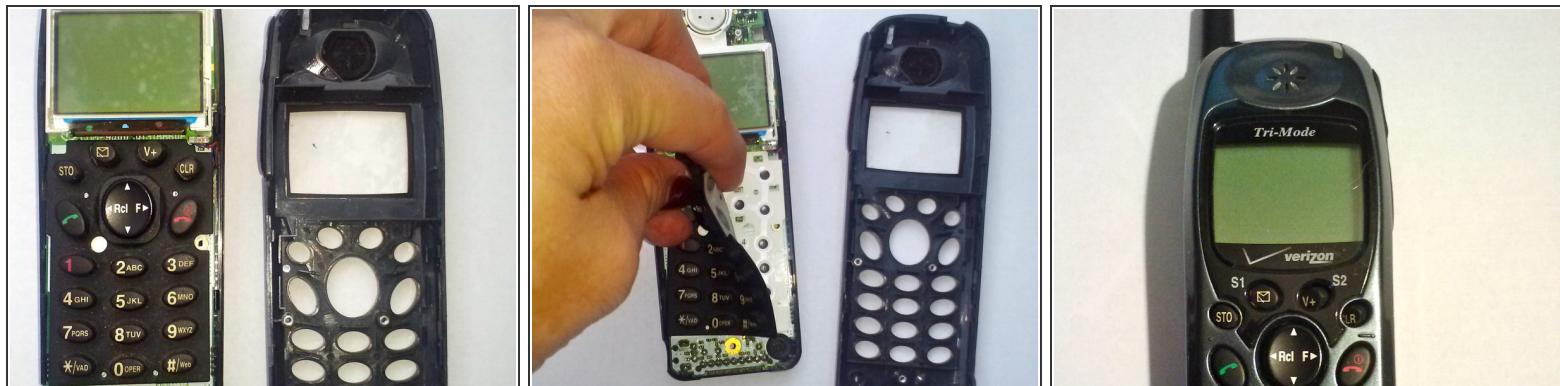

- Once you have the phone apart simply remove the key pad and replace it with the new one.
- Don't forget to put the screws back in. Place the battery back on the phone.
- Push the two parts of the phone back together. You will here a loud click when the phone is back together.

To reassemble your device, follow these instructions in reverse order.