


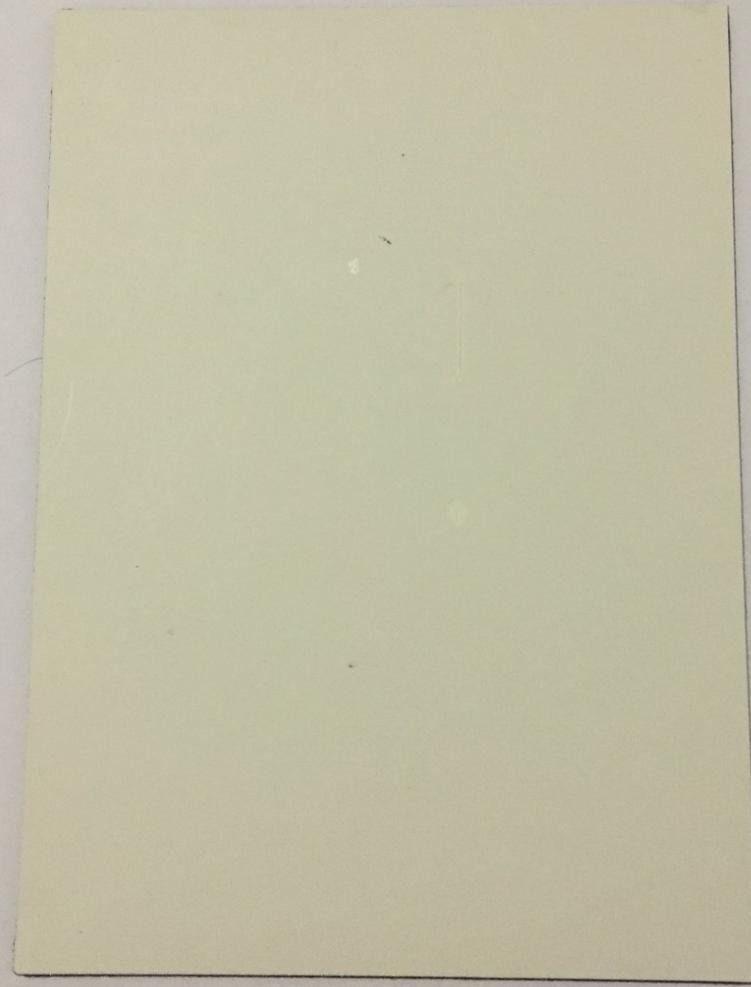

Canon CanoScan N670U White Document Mat Replacement

This guide will show how to properly remove and replace the white document mat that's on the cover of the Canon CanoScan N670U.

Written By: Stephen Bui



This document was generated on 2019-09-18 02:50:41 AM (MST).

INTRODUCTION

If you're having issues as a result of a dirty or faulty white document mat, this is where you will want to begin.

To remove the white document mat, you must:

- Carefully rip out the foam that's glued onto the cover.
- Glue in the replacement document mat.

TOOLS:

- Precision Utility Knife (1)

Step 1 — White Document Mat



- Open up the top of your Canon CanoScan N670U to this position.

Step 2



- The document mat is taped on to these four corners of the cover. These spots will be where we'll start removing the mat.


Step 3



- Gently peel the tape on each corner of the mat using your hands or an iFixit Tech Knife.

⚠ Be careful to not rip the foam while peeling.

Step 4

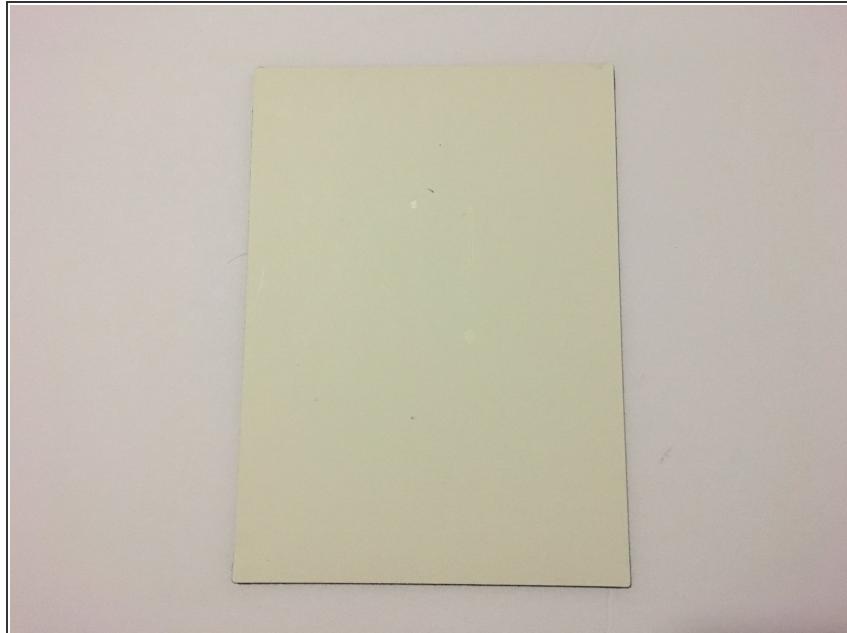

- Tape in your replacement document mat back onto the top cover of the scanner.

To reassemble your device, ensure that the white document mat is firmly glued on.