



Casio G'zOne Commando Verizon MIL-SPEC Motherboard Replacement

How to replace a Casio G'zOne Commando Verizon MIL-SPEC motherboard.

Written By: Zack Almeida



INTRODUCTION


In this guide, we will be completely tearing the phone down to remove the whole motherboard and replace it with a new one.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Battery

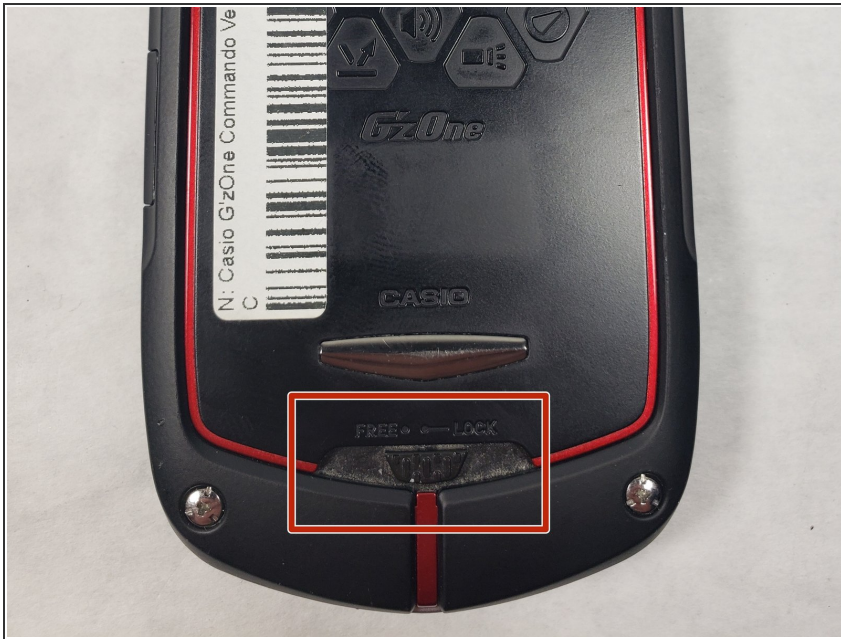


- Slide the slider on the back of the phone to the free position.

Step 2




- Using a plastic opening tool, gently lift open the back panel from bottom of the panel.

Step 3

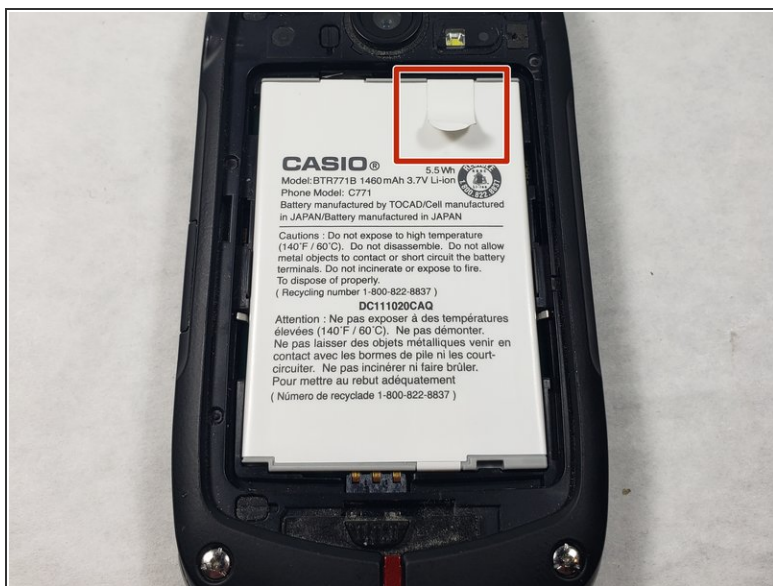

- Pull the white battery tab upwards and remove the battery.

Step 4 — Motherboard

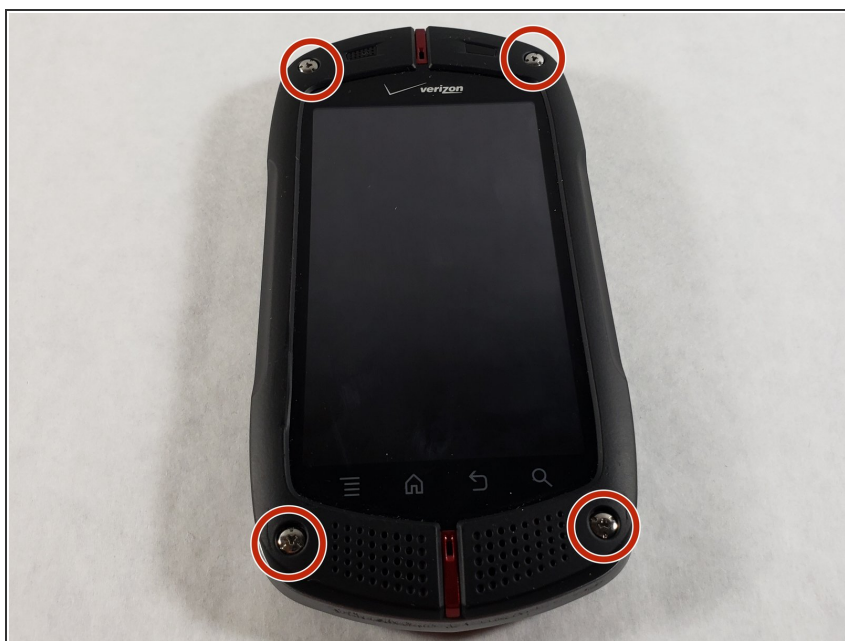

- Remove the four 6mm Y0 screws from the corners of the device.

Step 5




- Remove the four 5mm Y0 screws from the back of the device.

Step 6



- Using a spudger, pry away the motherboard from its compartment, by inserting the spudger in the compartment and lifting upwards until fully out.

Step 7

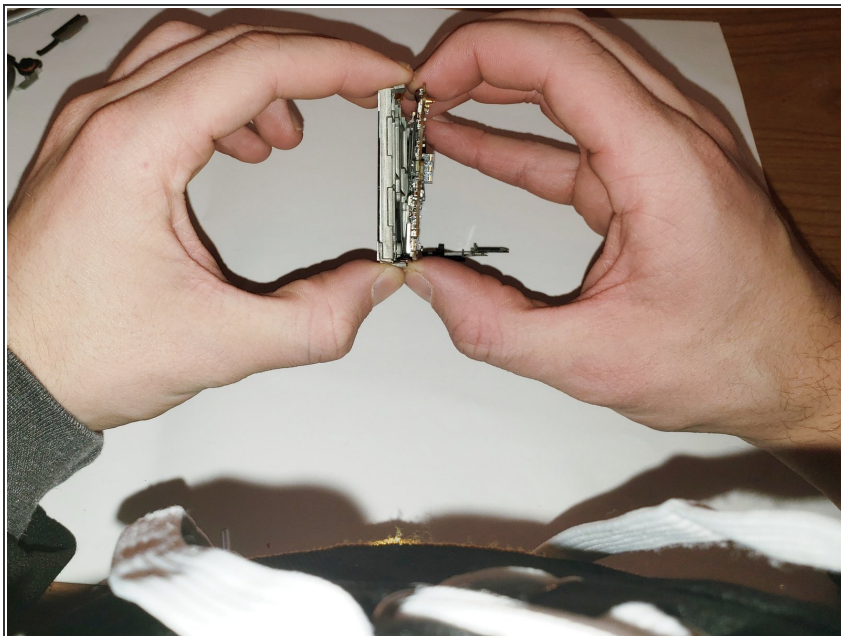

- Lastly, using your hands, separate the motherboard from its compartment.

To reassemble your device, follow these instructions in reverse order.