




Compaq Evo N1000v Rear Fan Replacement

This guide will help you replace the rear fan of this device.

Written By: ryan

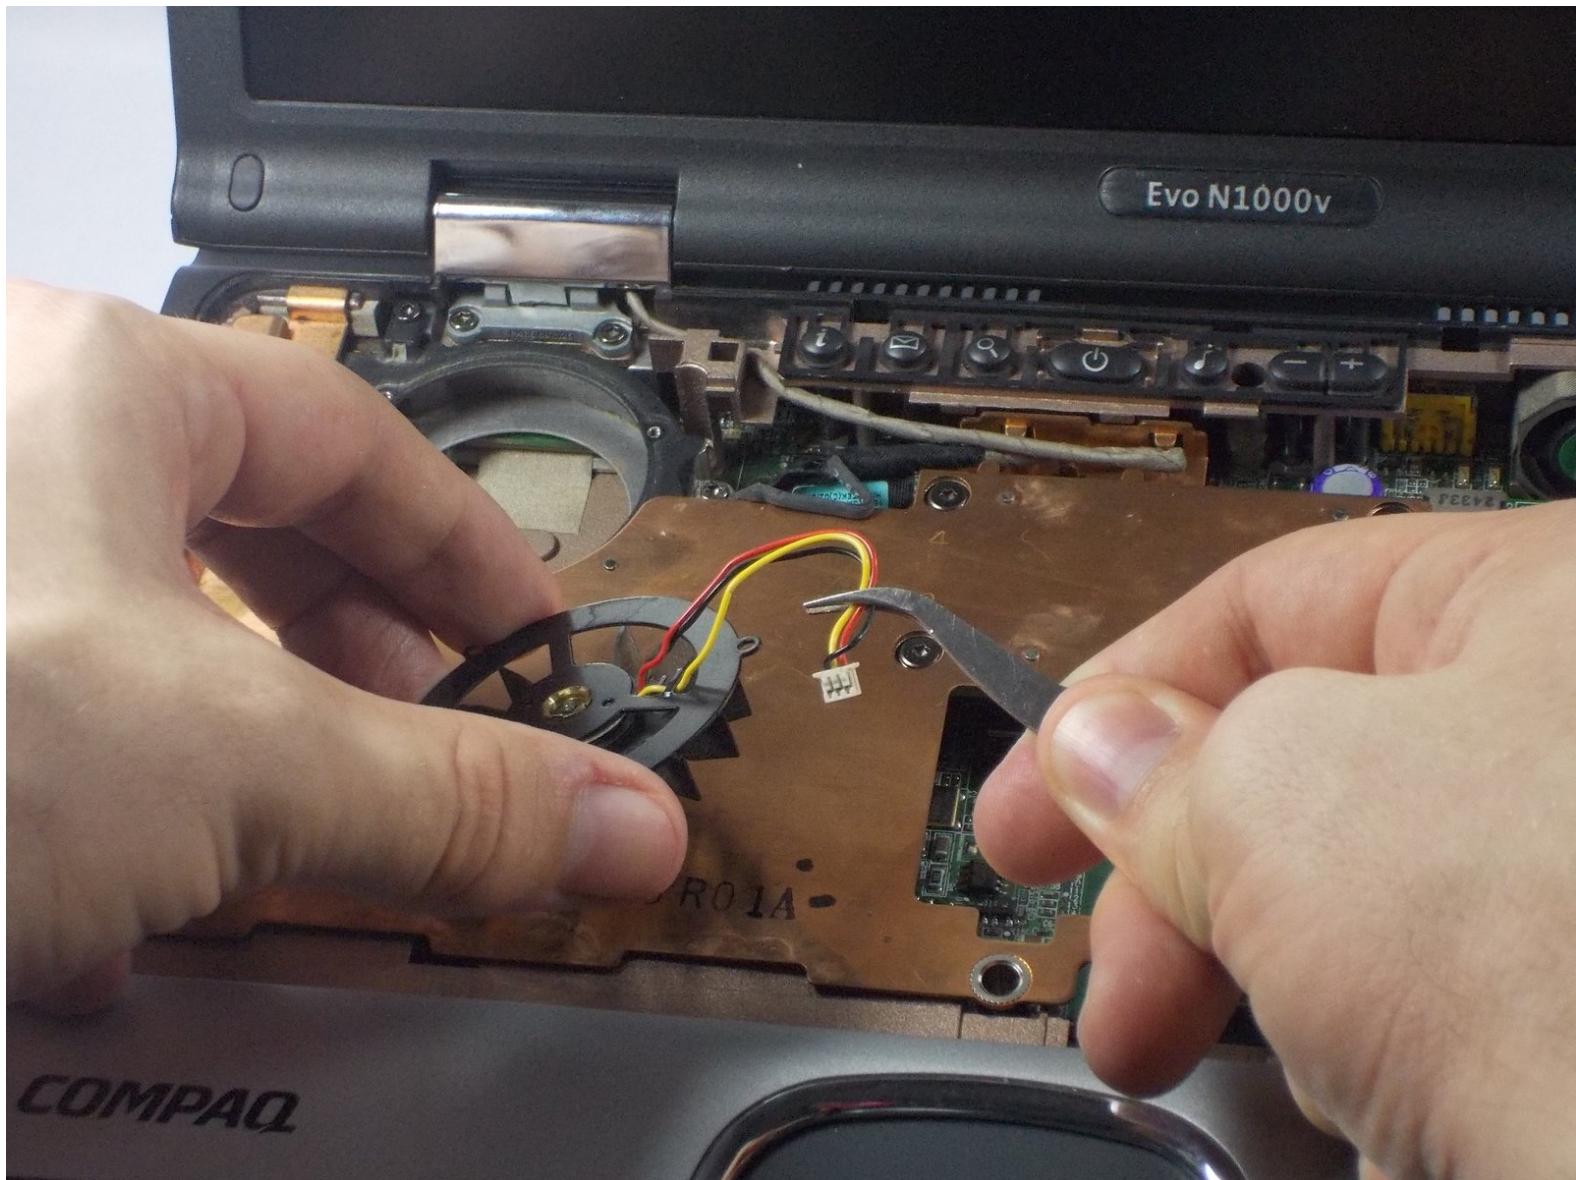

INTRODUCTION

You will need to assemble the proper tools shown in the first step of this guide before you continue forward.

This guide is meant to assist the reader with the proper steps to remove and replace the rear fan of the Compaq Evo N1000v device.

TOOLS:


- [Tweezers](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Rear Fan



- Carefully remove the screws located inside the red circles.

Step 2

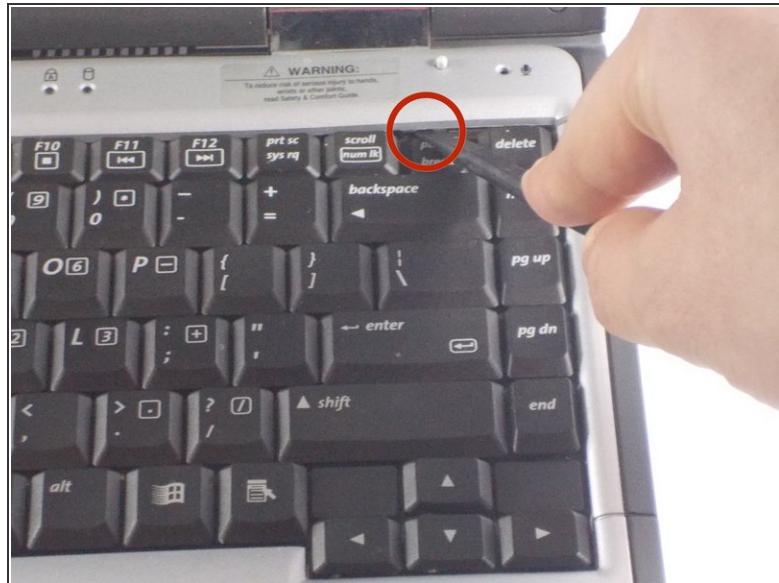

- Next, you will need to push down the "F1" key with the spudger and push it under the silver LED display panel.
- Push down on the spudger to lift the LED display upward.
- Do this on both the left and right sides of the device as shown in the images.

This document was generated on 2019-09-18 02:36:06 PM (MST).

Step 3



- Completely remove the LED display panel from the device.

Step 4




- Lift the keyboard up from the back end as shown in the image.

Step 5




- Pull the keyboard slightly toward the screen of the device to reveal the connecting cable below.

Step 6

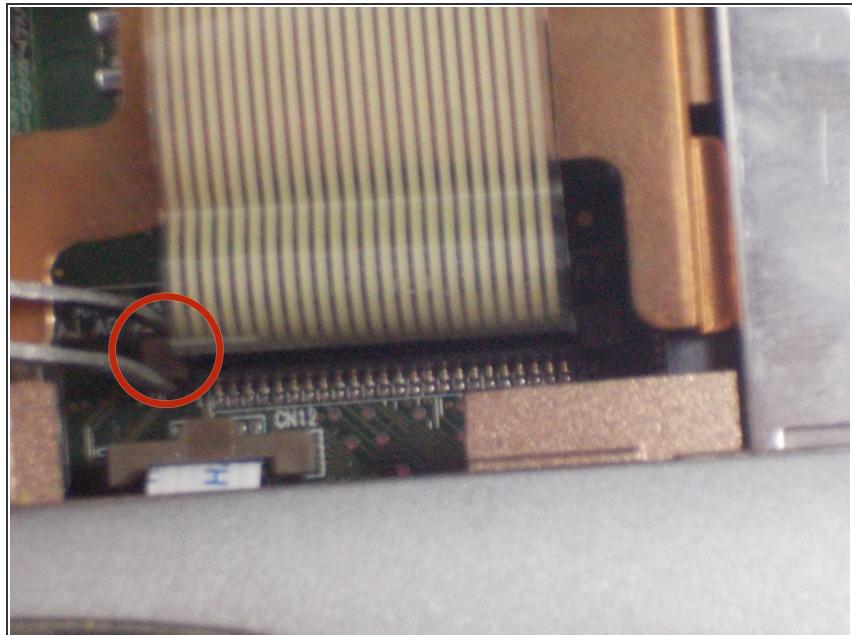


- Follow the cable to its connection and use the grip tweezers to unlock the cable by grabbing the left side of the lock and pulling upward.
- Repeat this action on the right side of the lock.

Step 7

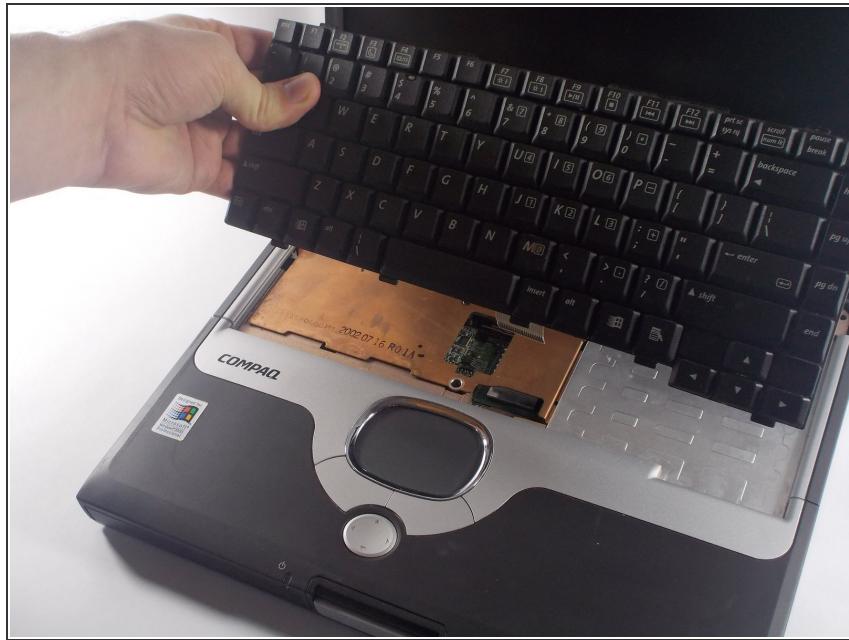


- Pull the keyboard upward to remove it from the device.

Step 8

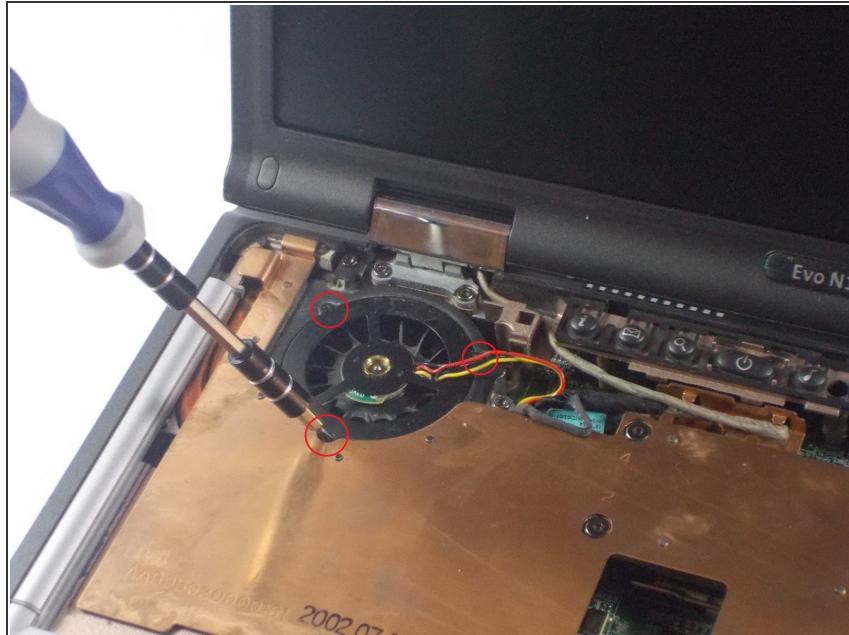


- Unscrew the 3 screws as shown in the photo.

Step 9

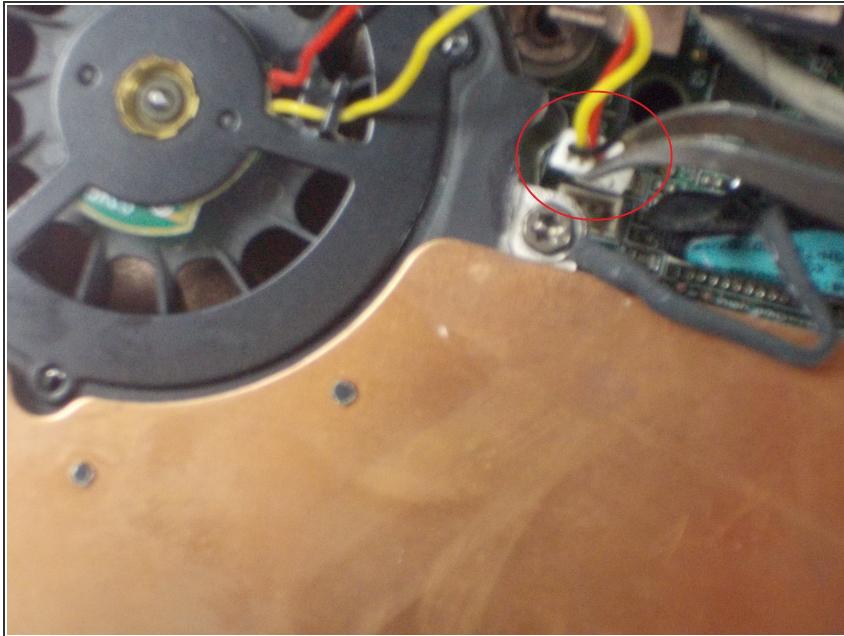

- Remove the cable with the grip tweezers as shown in the photo.

Step 10

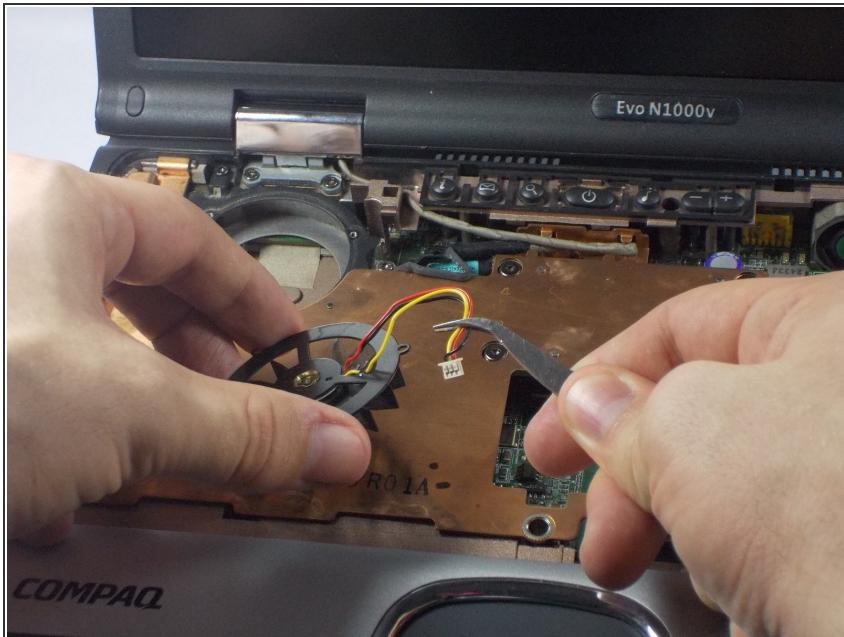

- Remove the rear fan.
- Repeat these steps in reverse order to install the new keyboard.

To reassemble your device, follow these instructions in reverse order.