




# Compaq Presario CQ60-211DX Solid State Drive Replacement

This guide will show how to swap out the internal Hard Drive for either a HDD or for a SSD.

Written By: Garrett Carter

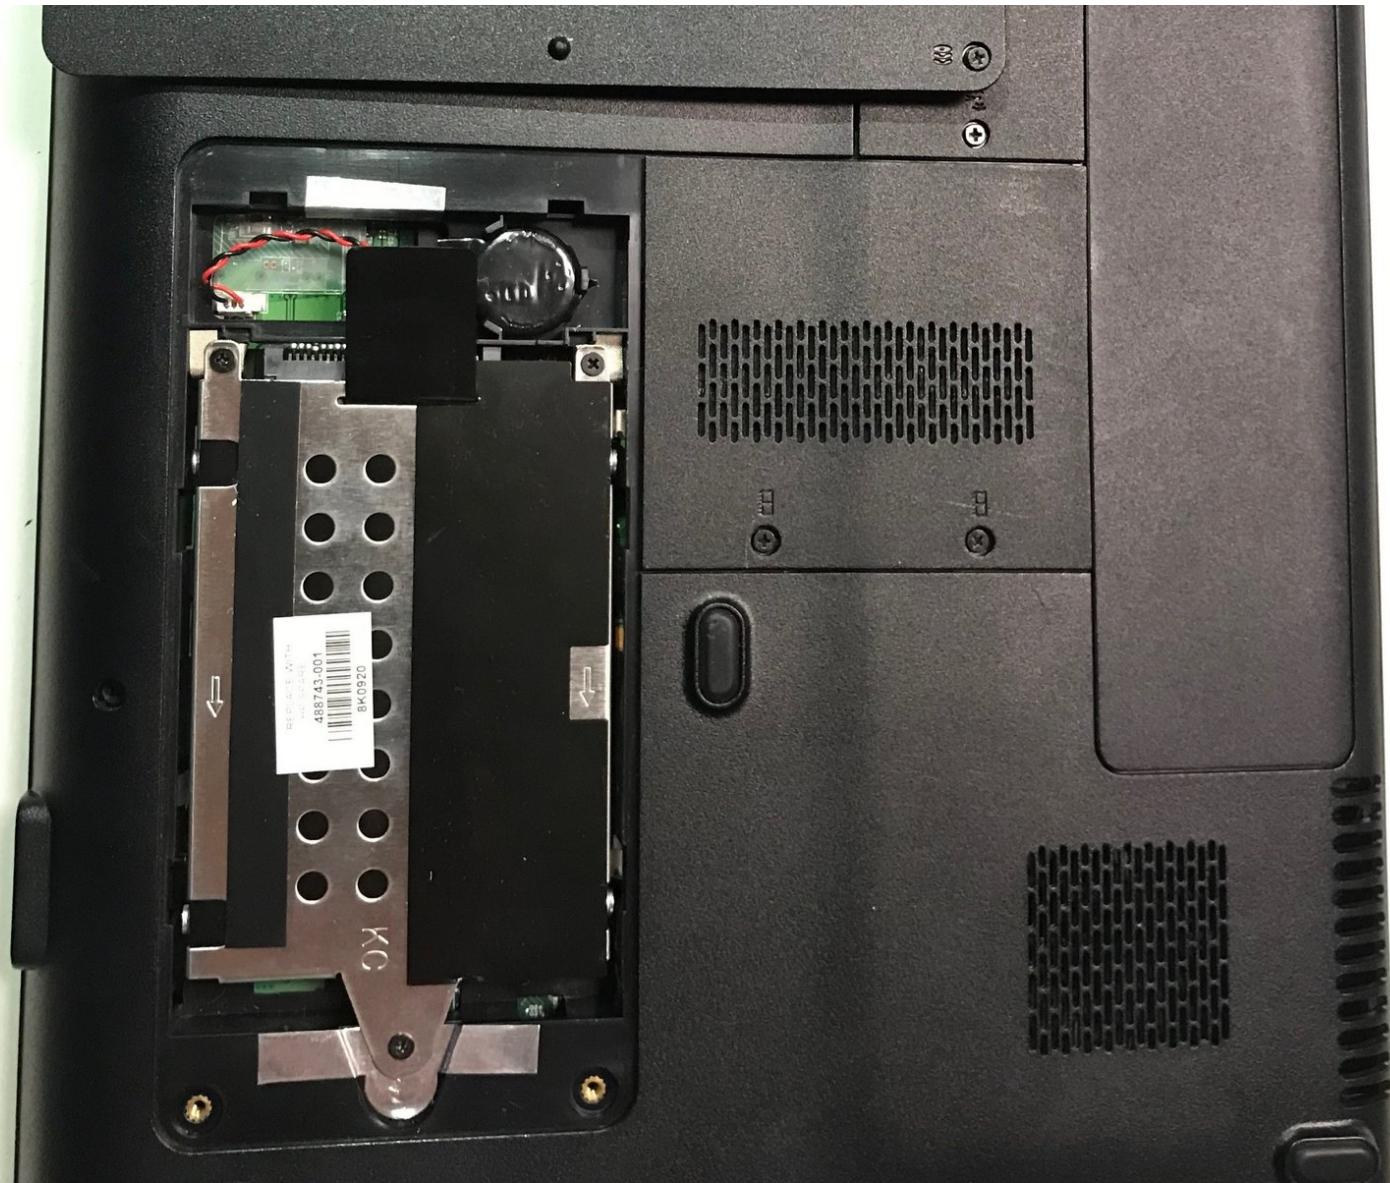

## INTRODUCTION

This guide will show how to swap out the internal Hard Drive for either a HDD or for a SSD.

### TOOLS:

- Fingers (1)
- Phillips #1 Screwdriver (1)

## Step 1 — Battery




- Turn the laptop off and disconnect all sources of power.
- Set the laptop on a flat surface with the bottom side facing up.

## Step 2




- Slide the battery release tab.
- *(i)* This will eject the battery.
- Carefully remove the battery and set it aside.

## Step 3 — Solid State Drive (SSD)

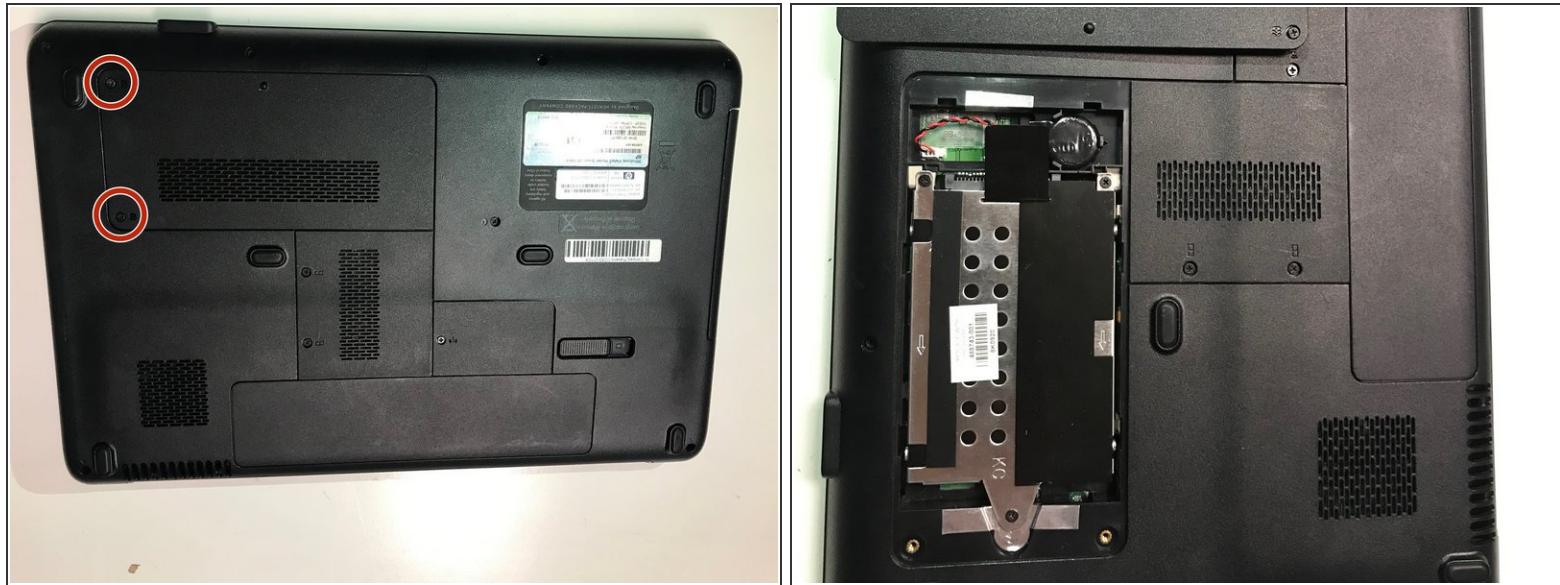

- Use a PH1 screwdriver to unscrew the 2 screws that secure the hard drive cover.
- Remove the cover.

## Step 4

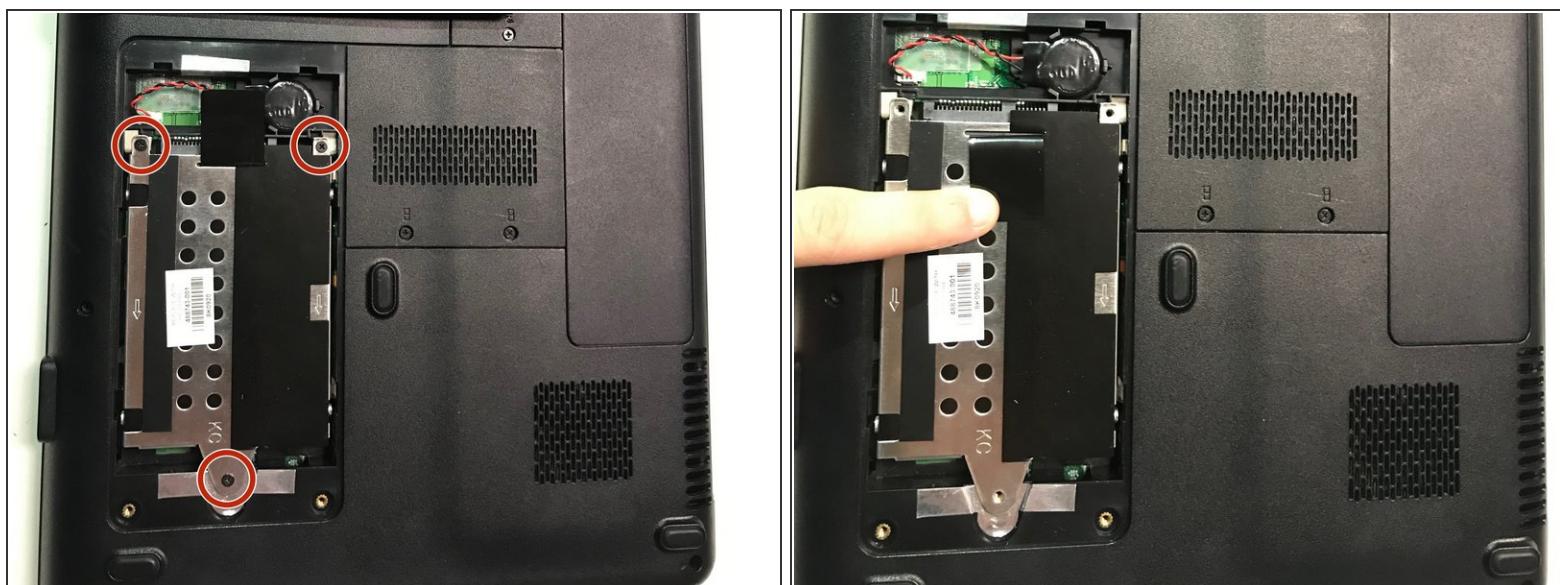

- Unscrew the next three screws holding the hard drive in place.
- Pull the black ribbon and slide the hard drive out of place.

To reassemble your device, follow these instructions in reverse order.