



Compaq Presario v2000 Hard drive Replacement

How to remove and replace the hard drive

Written By: Andrew



 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — Hard drive




- Remove the battery before starting

Step 2



- Loosen the two screw for the hard drive cover
- The screws will stay attached the the cover
- Lift the cover from the left side and remove

Step 3

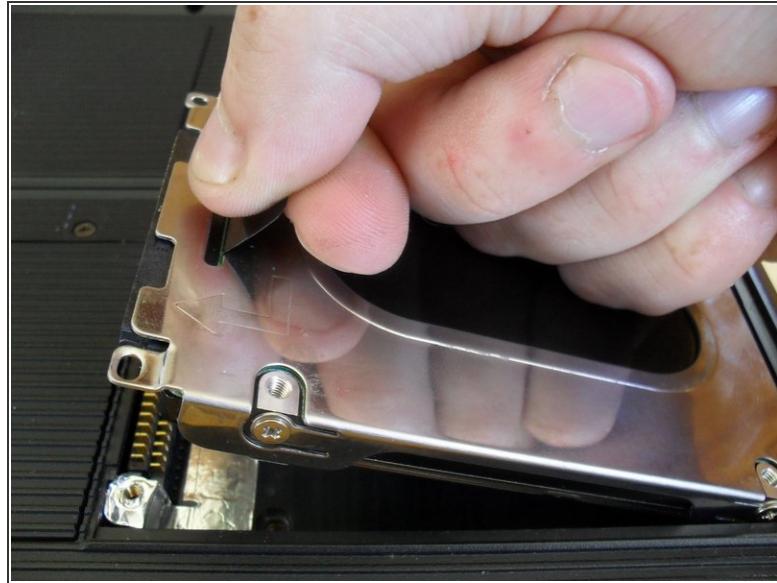

- Lift the black pull tab on the hard drive
- Lift the drive straight up out of the laptop

Step 4



- Remove the four screws on the sides of the drive (two on each side)
- Remove the hard drive from the caddy

This document was generated on 2019-10-31 03:02:13 PM (MST).

Step 5



- Pull the IDE connecter straight off the drive

⚠ Be sure to pull the connecter off straight so as not to bend the hard drive IDE pins

To reassemble your device, follow these instructions in reverse order.