




Conduit Attachment

This guide will demonstrate how to attach a conduit to a node.

Written By: Nicholas Jeng






Step 1 — Parts Overview

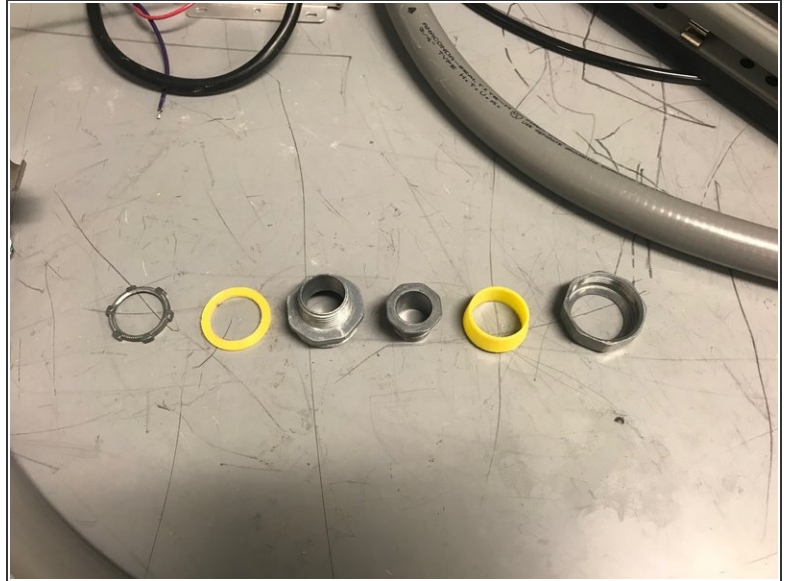


i The parts depicted are the attachment pieces you should have (in addition to the conduit)

Step 2 — Cover Piece

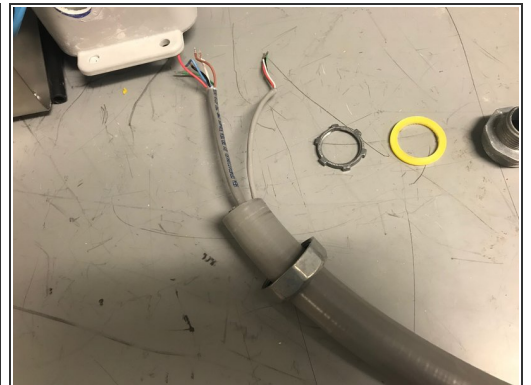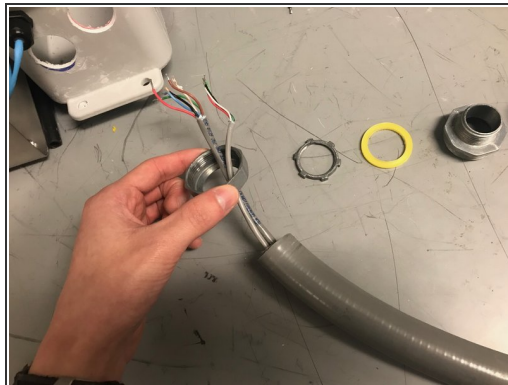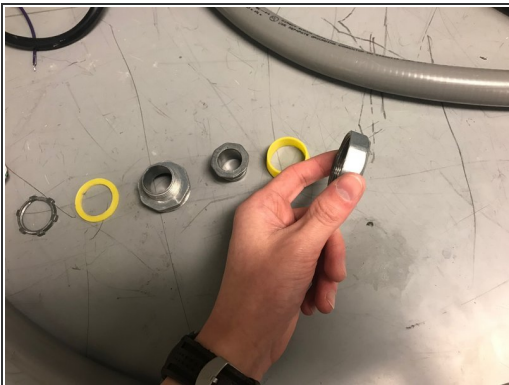


i Pull the cover over the conduit and the wires

Step 3 — Outer Yellow Seal

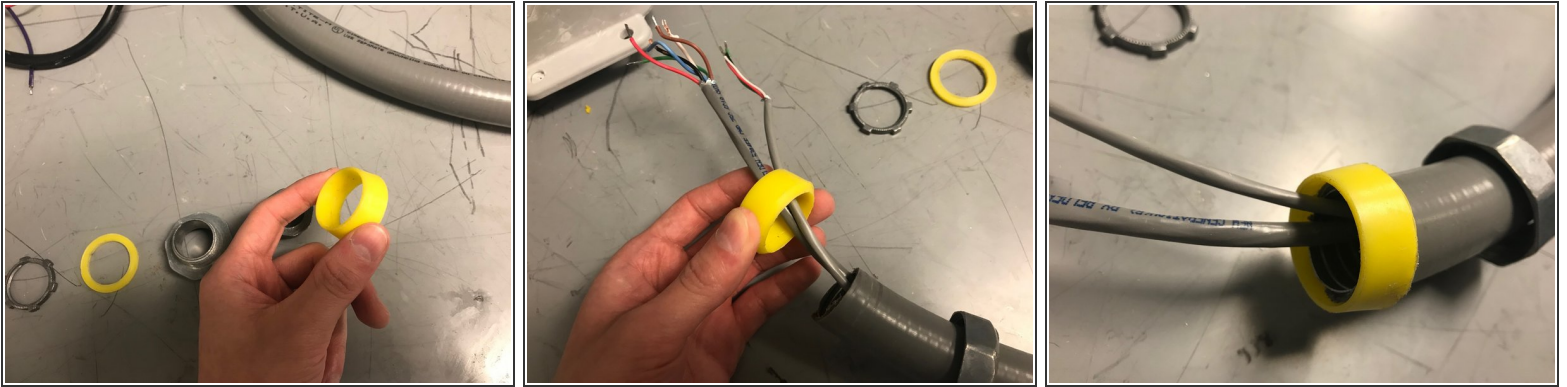


- i** Pull the outer yellow seal over the wires and the conduit
 - The end with the ridge should be pulled down first (i.e. that end will be closer to the cover)

Step 4 — The Screw Piece

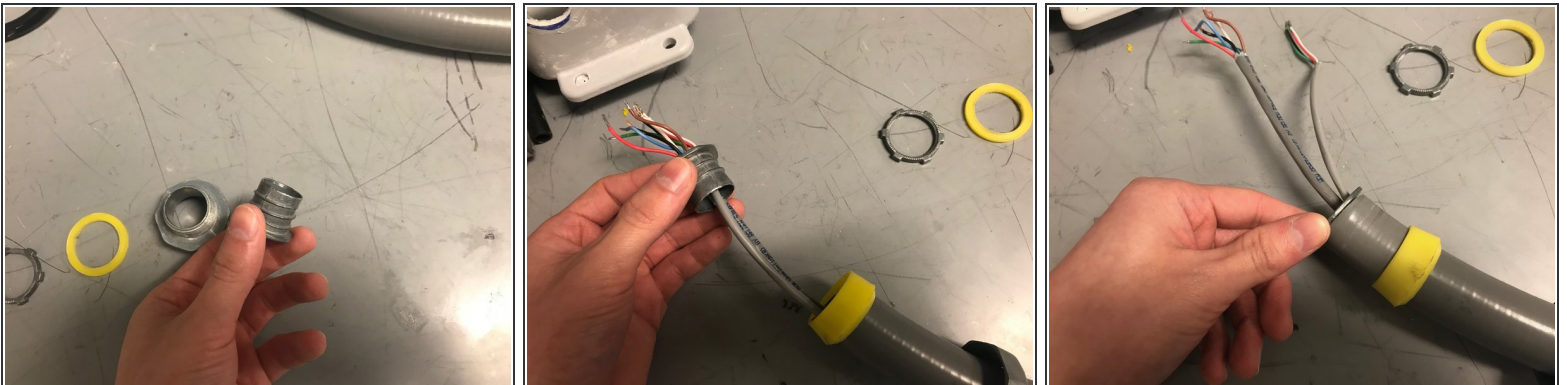


- i** Pull this piece over the wires and then screw it into the conduit

Step 5 — Connector Piece

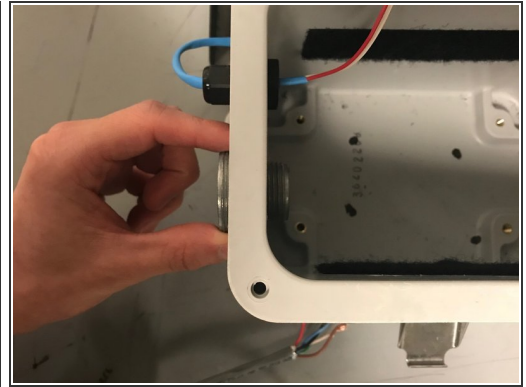


- i** Put the connector piece into the node (may have to hold it in place for the subsequent steps)


Step 6 — Inner Yellow Seal

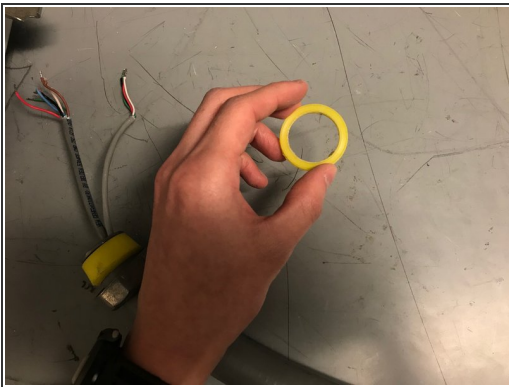




- i** Pull the yellow seal over the inside of the connector piece


Step 7 — Tightener Piece

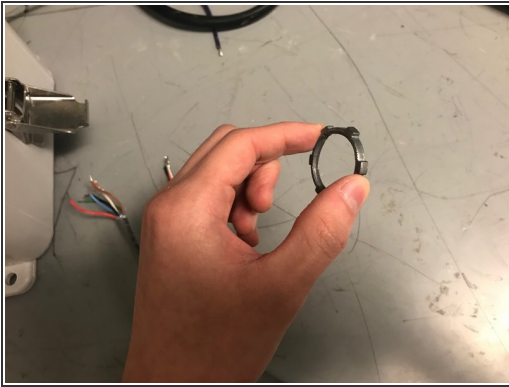


-  Screw the tightener piece onto the connector

Step 8 — Putting it All Together

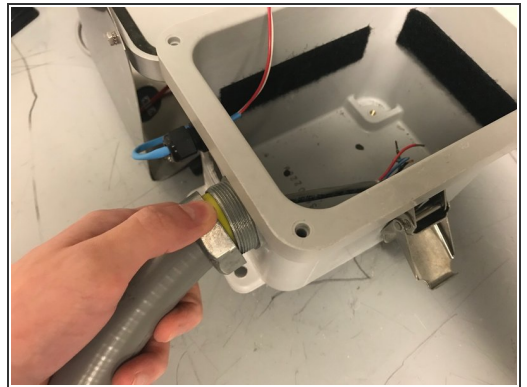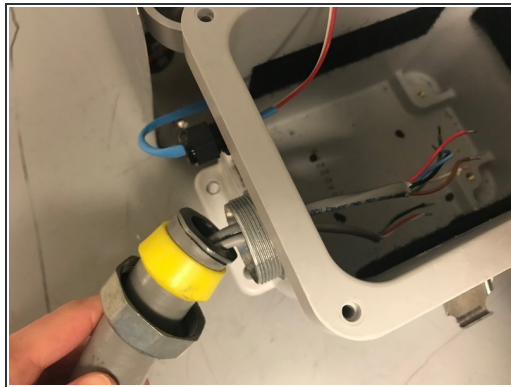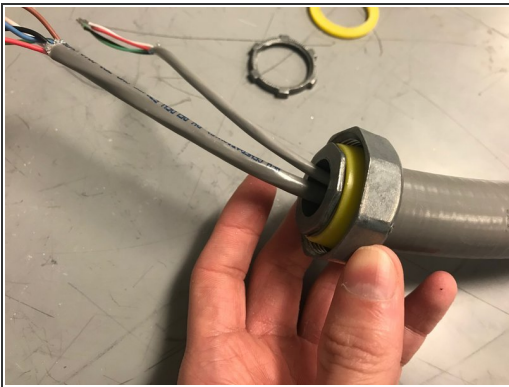

-  Pull the wires through the connector piece and then screw the conduit onto the connector

Step 9 — Final Overview

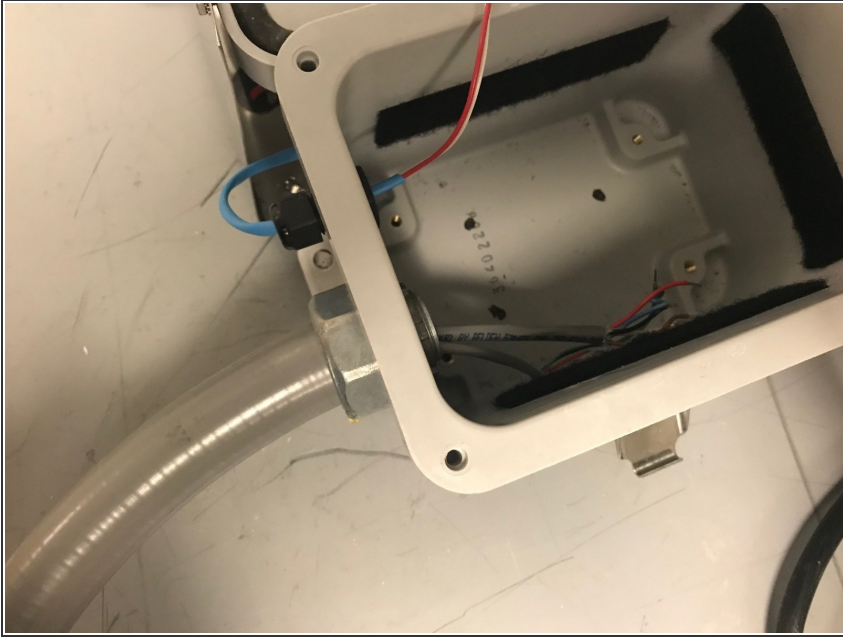

i This is how it should look after everything is connected

To reassemble your device, follow these instructions in reverse order.