




# Disassembling Nokia 2366i Rear Case

Written By: Jonathan Newman

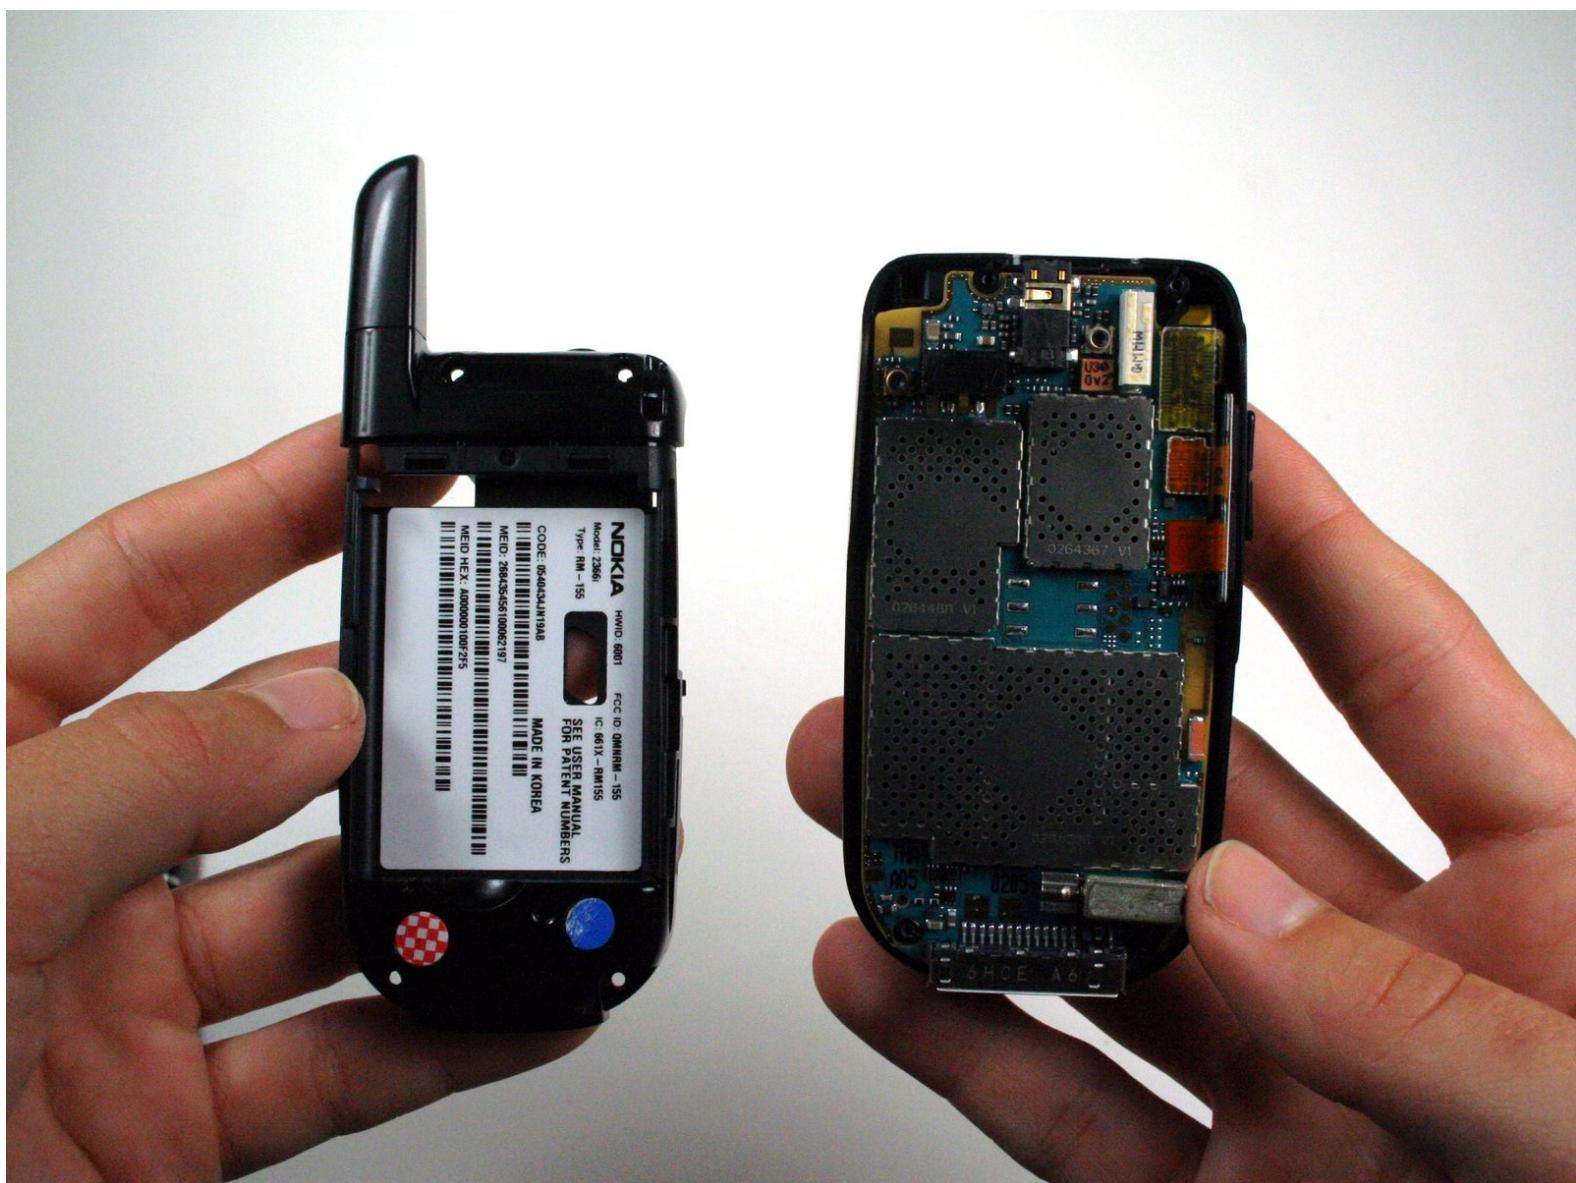

This document was generated on 2019-09-23 12:26:23 AM (MST).


## INTRODUCTION

This guide is a step by step procedure to disassemble the base of the phone. It is the preliminary step in gaining access to the inner components of the Nokia 2366i.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Battery

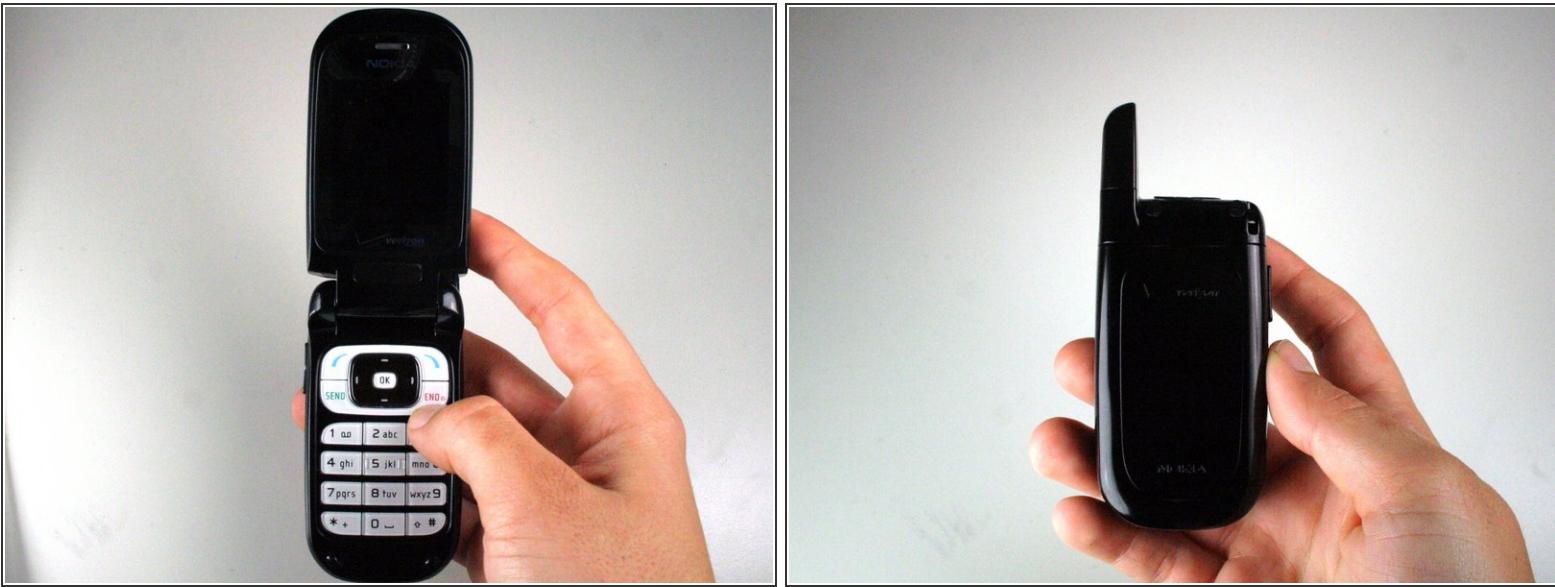

- Turn off the phone.
- *i* Position the phone so that the back side is in view.

## Step 2



- Apply pressure on the cover while simultaneously sliding the cover downward.
- Remove the back battery cover.


## Step 3



- Insert the spudger between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
- Carefully lift the battery out of the phone.

*(i)* The battery lifts out of the phone easily.

## Step 4 — Rear Case

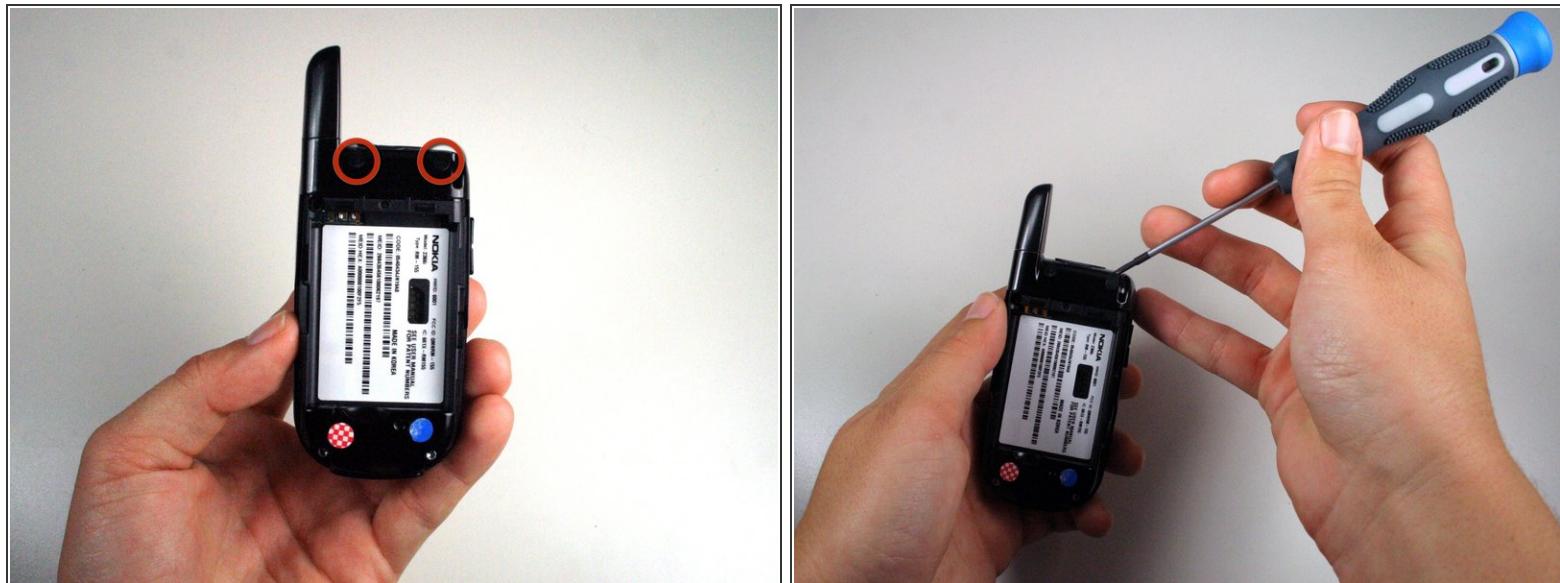

- Use a Phillips #00 screwdriver or your fingers to remove the rubber tabs at top back of the phone.

## Step 5



- Remove four 5mm screws from the back of the phone using a T6 Torx screwdriver:
  - 2 screws at the bottom
  - 2 screws at the top

## Step 6




*(i)* Rotate the phone clockwise so the edge is facing you.

- Insert the spudger in tabs between the outer casing and the inside frame.
- Slide the spudger upwards.

*(i)* This will remove the rear case of the phone.

## Step 7

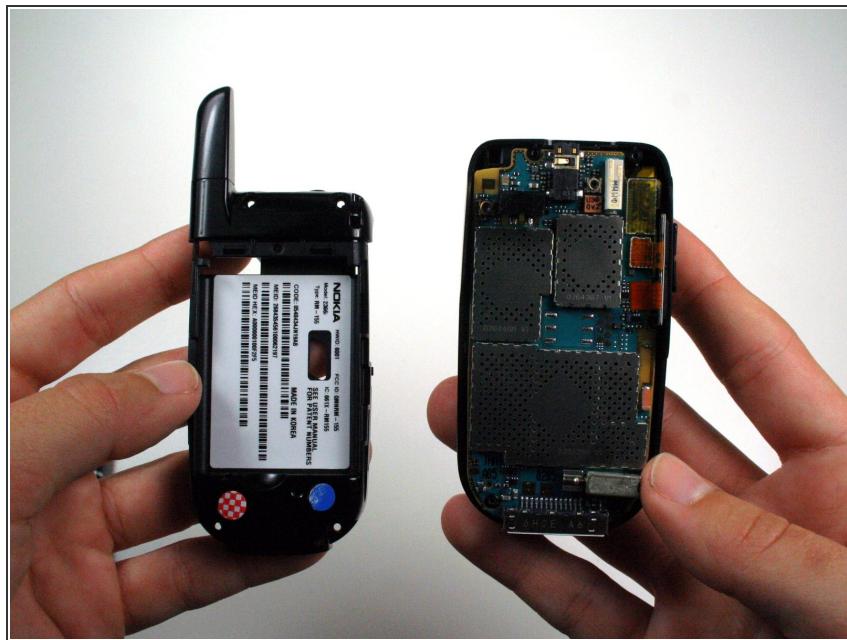

- The phone should now be in two different sections.
  - 1) The rear case of the phone.
  - 2) The motherboard and the rest of the phone.

To reassemble your device, follow these instructions in reverse order.