



Disassembling Planet Eclipse Geo3 Body

Separating the two halves of the body.

Written By: Rett Triplett



INTRODUCTION

This guide will show you how to separate the body into the trigger frame and the bolt frame. This will allow you to access the solenoid and eyes.

TOOLS:

- Macro Bit Set (1)
- 5/64" Allen Wrench, 1/8" Allen Wrench

Step 1 — Grip



- Remove the four screws from the grip with the 5/64" allen wrench. There are two on each side.

Step 2




- Pull the grip away from the frame.

Step 3



- Pull the grip through the opening.
- The grip is connected in the middle and is one piece.


Step 4 — Macroline

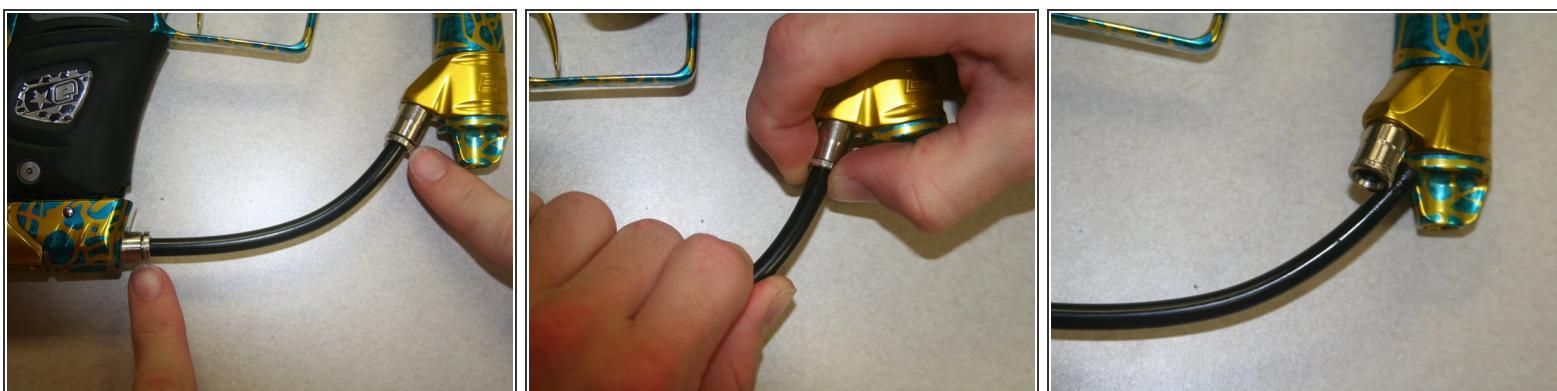

- Remove the macroline from the fitting by pulling the metal ring around the end of the fitting away while pulling out the macroline.

(i) It helps to rotate the collar to create room to pull out macroline.

Step 5

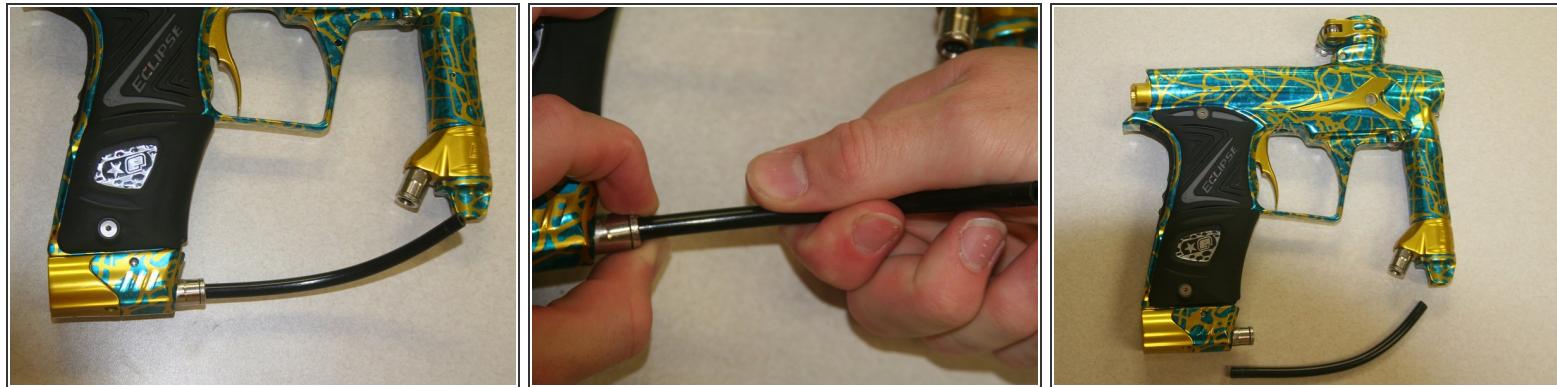

- While pulling in the metal ring on the fitting, pull the macroline out.

Step 6 — Body



- Use 1/8" allen wrench to remove screw behind regulator.

Step 7



- Use 1/8" allen wrench to loosen the screw inside the grip on the right side.
(i) The screw only needs to be turned a couple of times.
- Slide the upper frame forward on the rails and remove the screw from the slot to separate the two halves of the body.

⚠ BE CAREFUL: Do not pull the two frames apart too much or too quickly. This may cause the wires to be damaged.

To reassemble your device, follow these instructions in reverse order.