




Equity Alarm Clock 13014 Alarm Replacement


Written By: Alaa

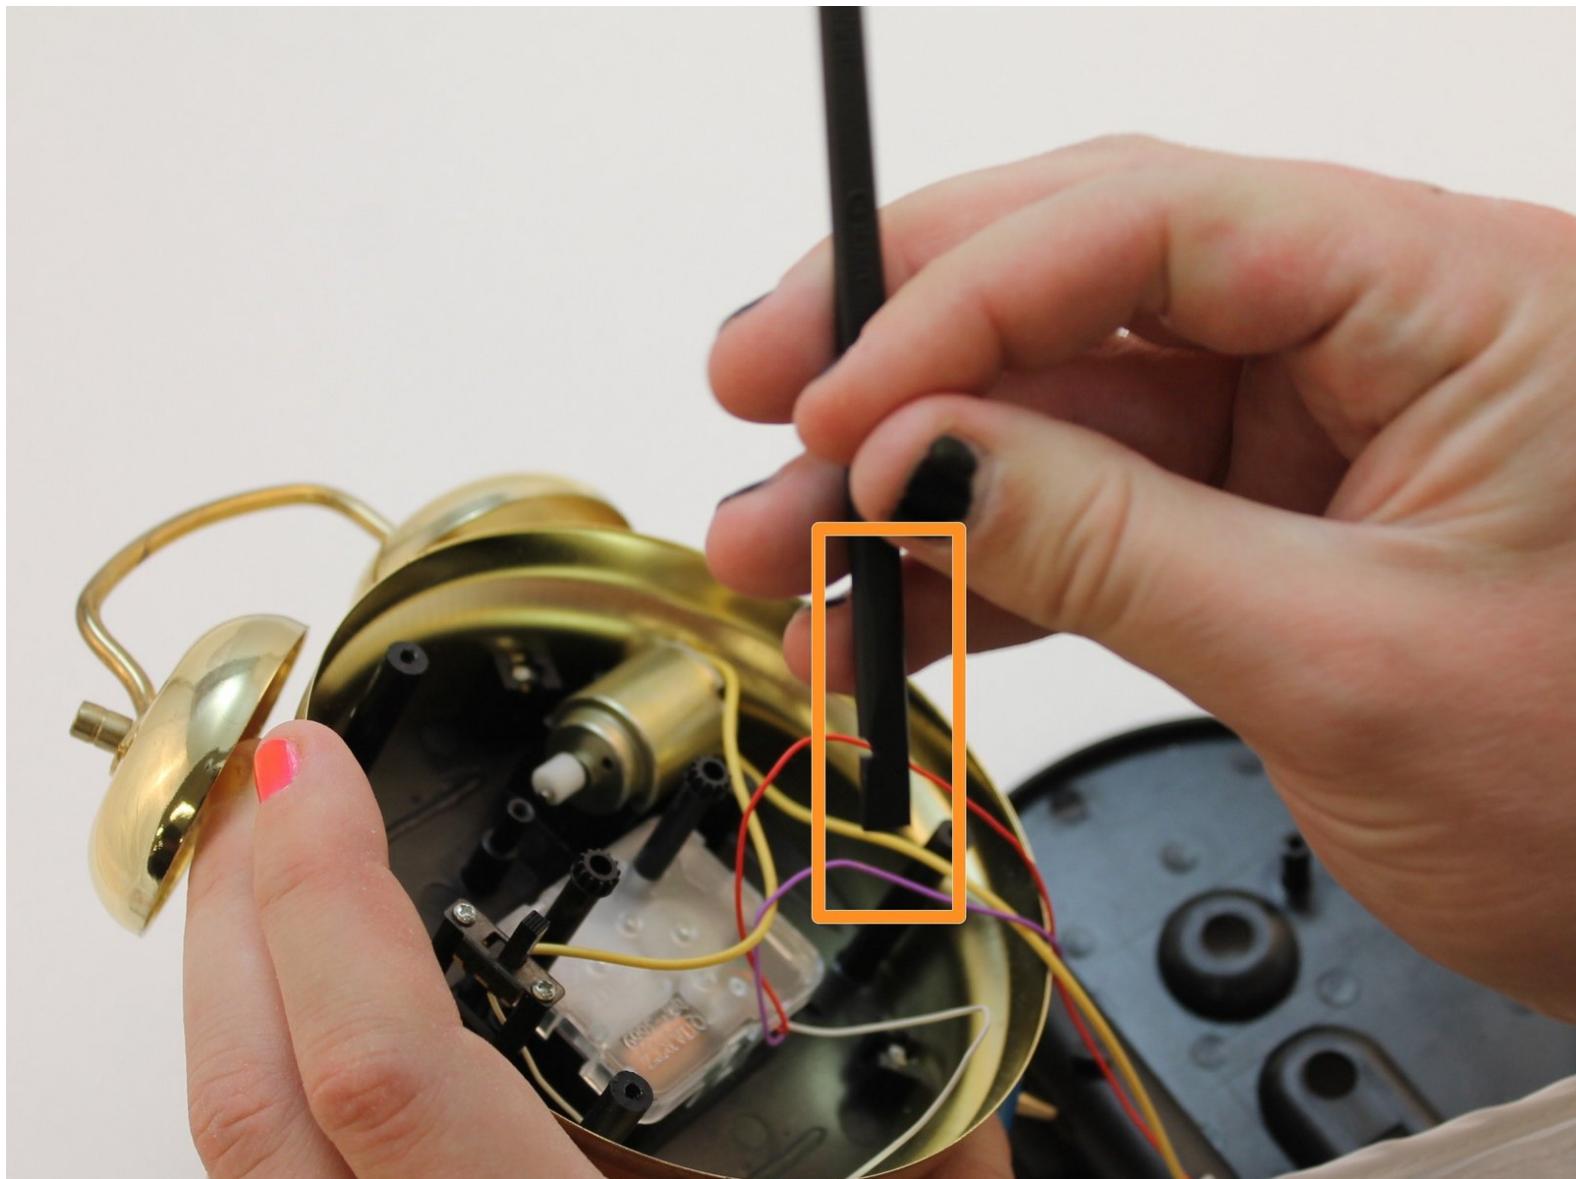

 **TOOLS:**


- [Spudger \(1\)](#)
- [Soldering Iron \(1\)](#)

Step 1 — Alarm

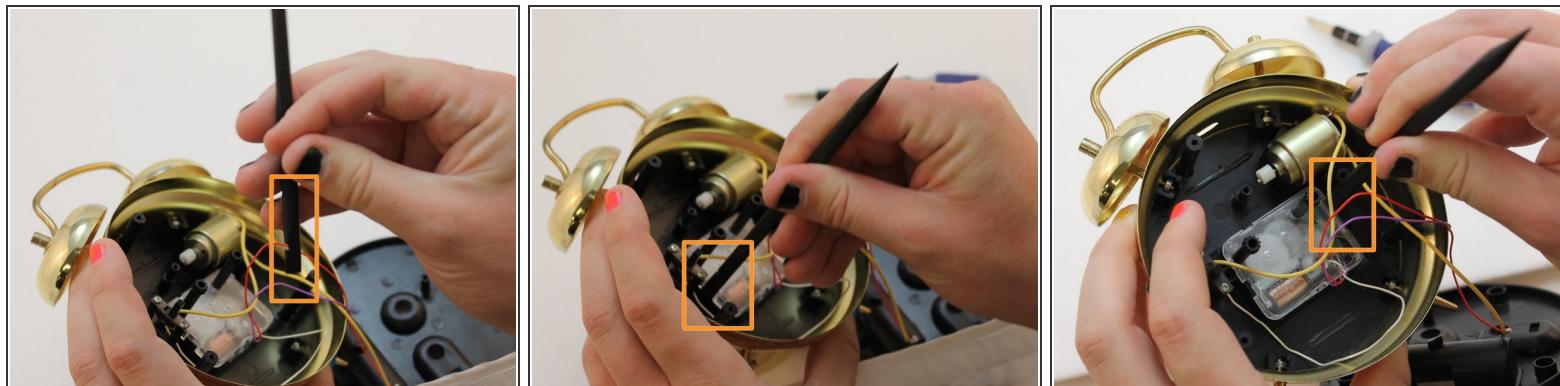


- Insert the flat end of a spudger on both sides of the wiring box to open and detach the box from the clock.

Step 2

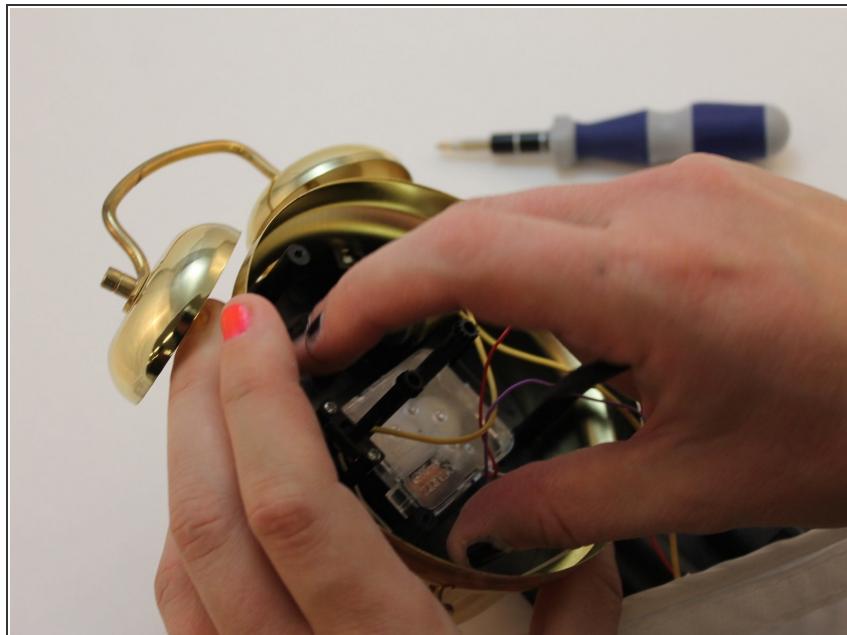


- remove the box with your fingers.

Step 3

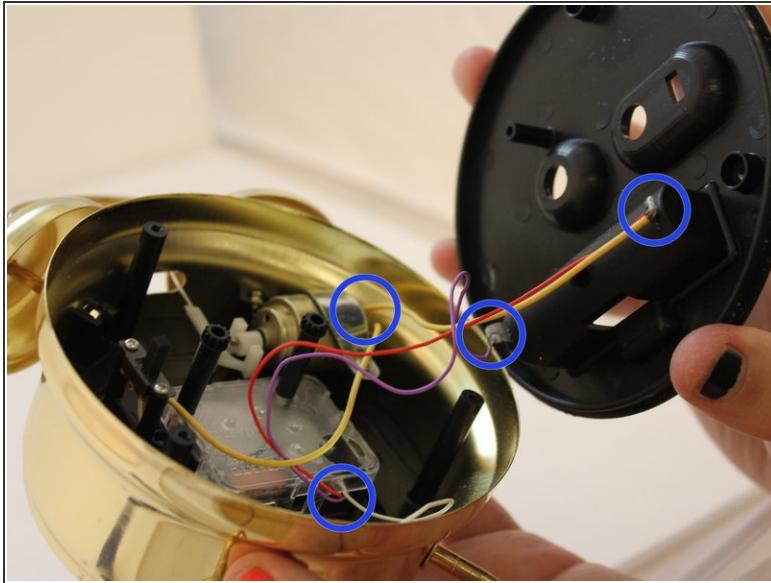

- Detach the wires that connect the wiring to the battery compartment and the copper cylinder by using soldering iron.

Step 4

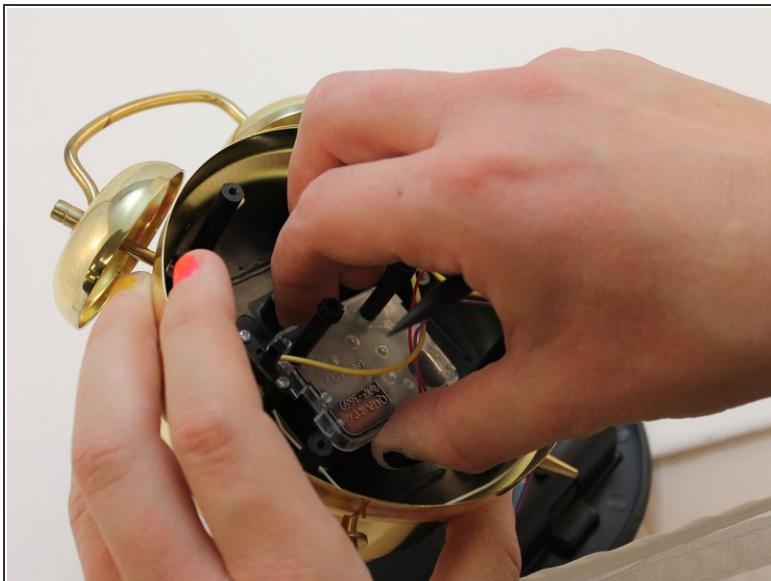

- Using your hand remove the wiring box and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.