



FLIR C3 Teardown

This is a tear-down of the FLIR C3 thermal camera. You'll need a T6 screwdriver and a spudger, i used an iSesamo

Written By: Nathan Bourland



 **TOOLS:**

- [iSesamo Opening Tool \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)

Step 1 — FLIR C3 Teardown



- Here is the FLIR C3

Step 2



- Using the iSesamo remove the taped on rear bezel and the clipped on camera bezel, then remove the two T6 torx screws.

Step 3




- Once the screws are removed use the spudger on either side of the charge port, pop the clips open then you can work your way around to the other side of the body, although it will probably pop the rest of the way open once you unhook those clips.

Step 4




- Be careful while opening, so you don't damage the screen connector or ribbon cable.

Step 5

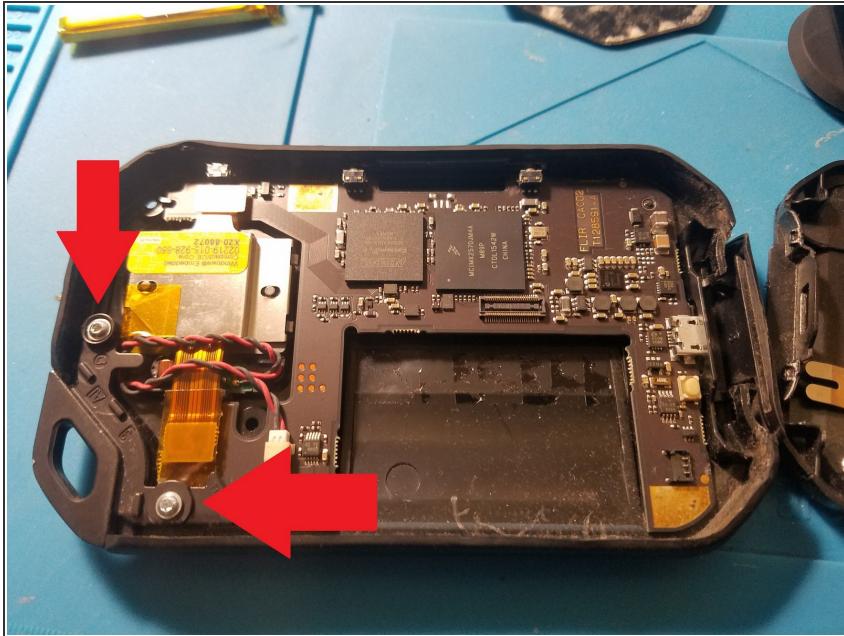

- Once you have the device open and the screen disconnected, use the T6 driver again and remove these two screws holding the lanyard anchor in place, then you can carefully lift the motherboard out of its place.

Step 6

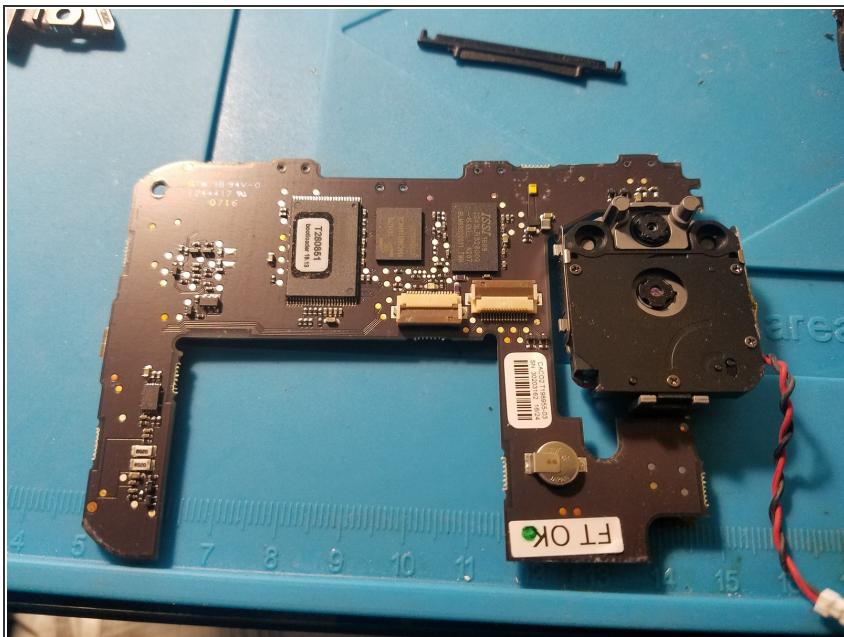

- Then there you have it, use these steps in the reverse order to put the device back together.