




Fujitsu Lifebook Stylistic Q584 Headphone Jack Replacement

How to replace a Fujitsu Lifebook Stylistic Q584 headphone jack.

Written By: Briana Cockerham

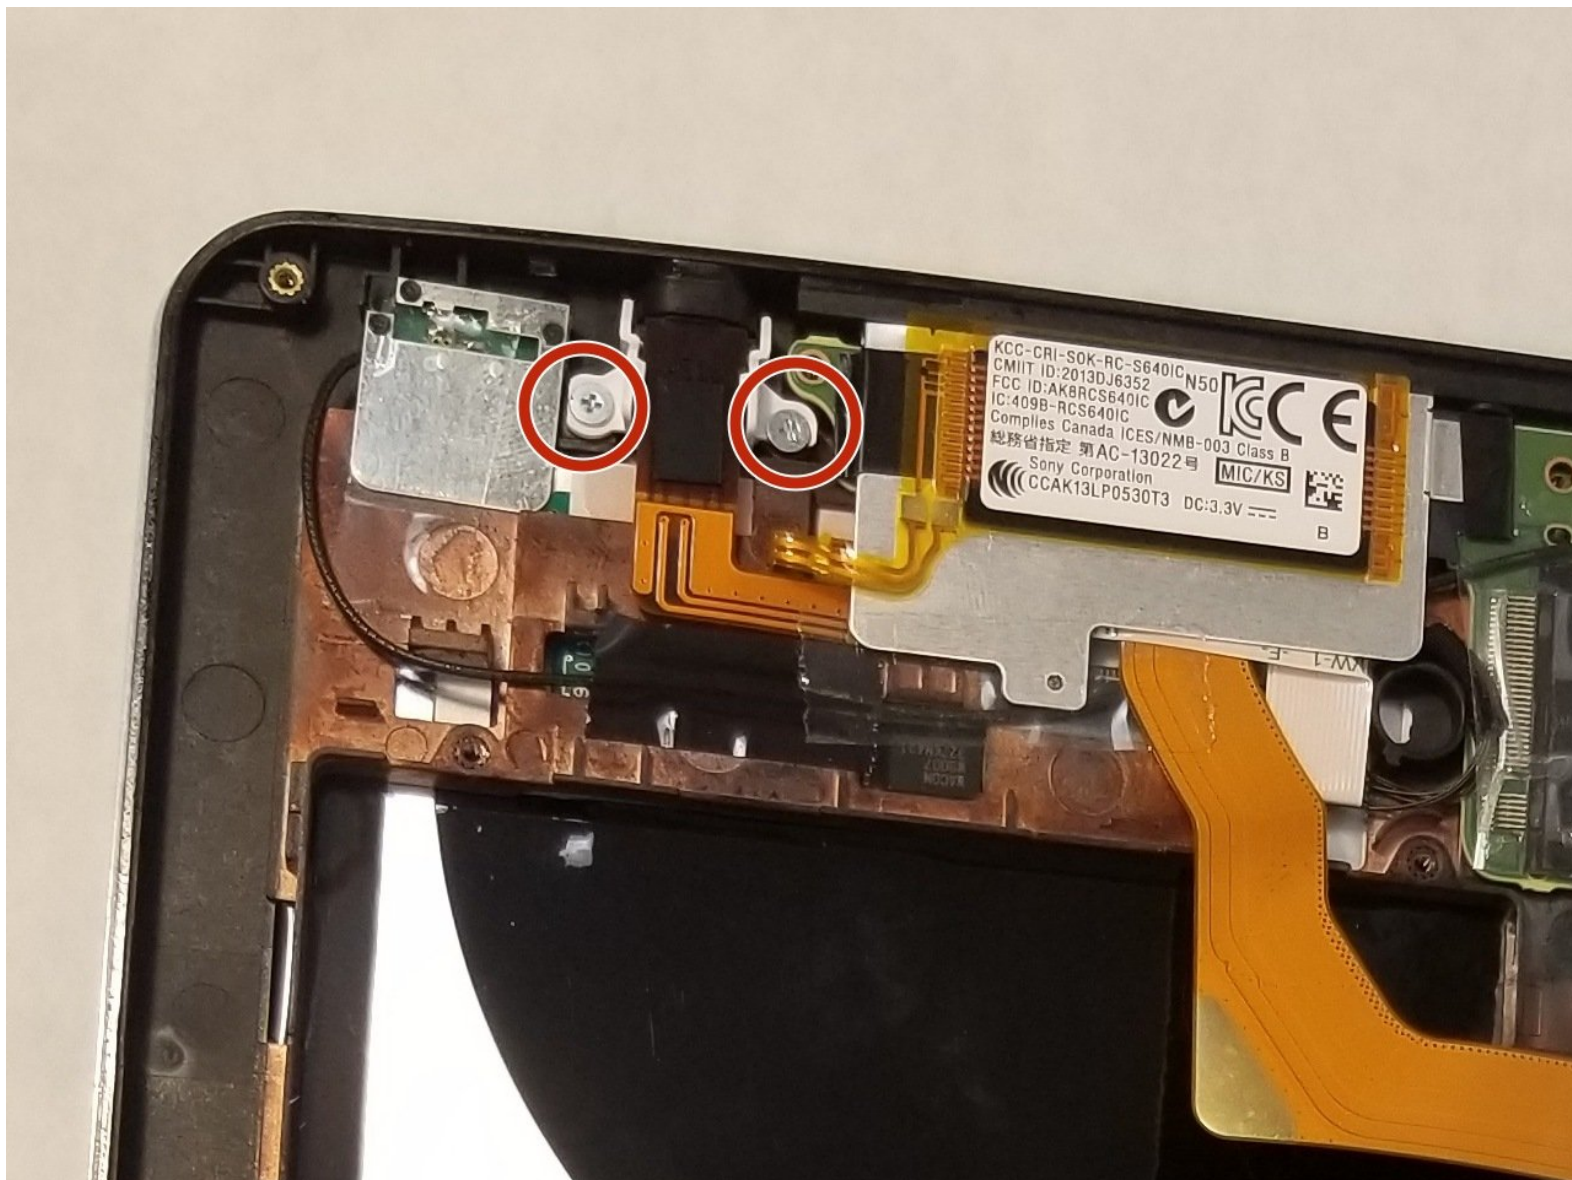


INTRODUCTION

Is your headphone jack not working or possibly damaged? Well you're in luck, this guide will show you the step-by-step instructions on how to replace your headphone jack.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Case

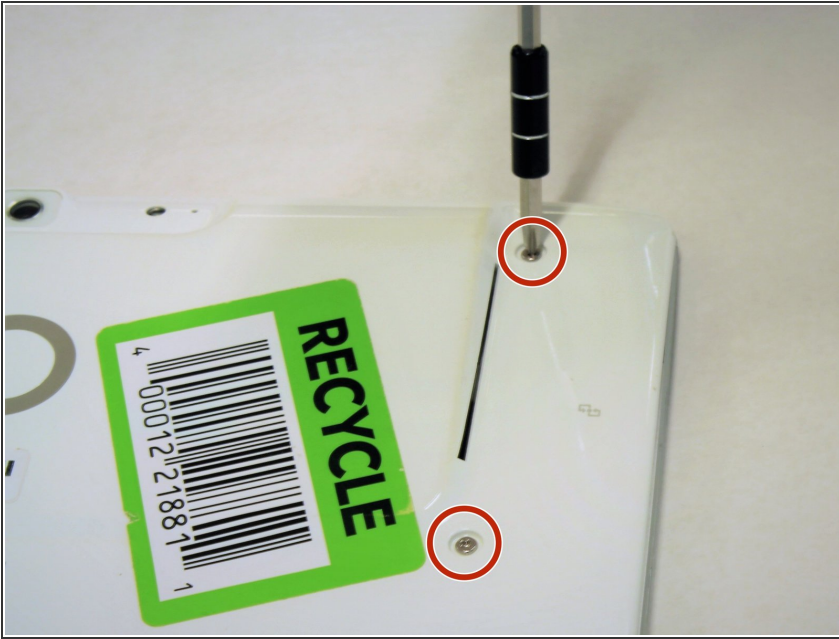


- Remove the white sticker covering the screws *(if applicable)*.
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.

Step 2




- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.

Step 3

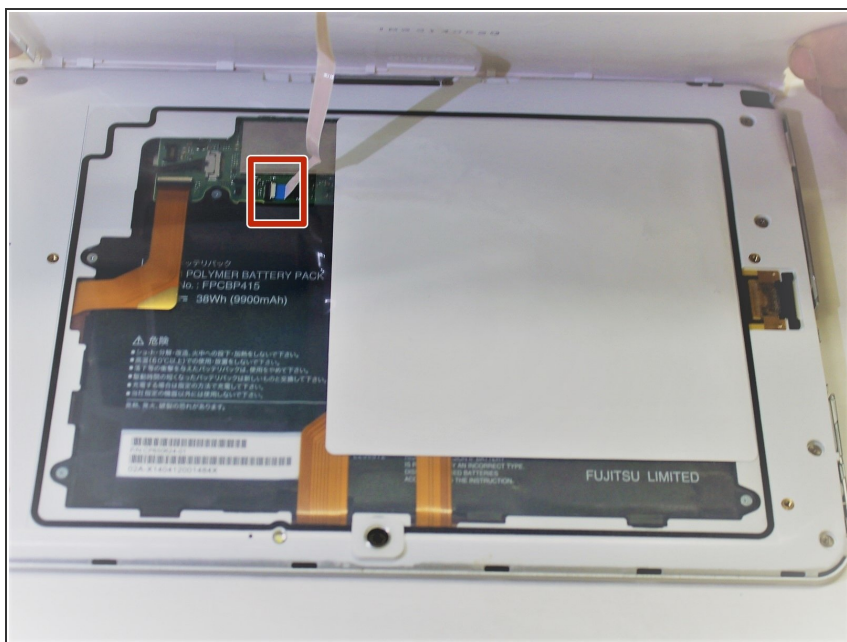


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

Step 4 — Inner Back Shield

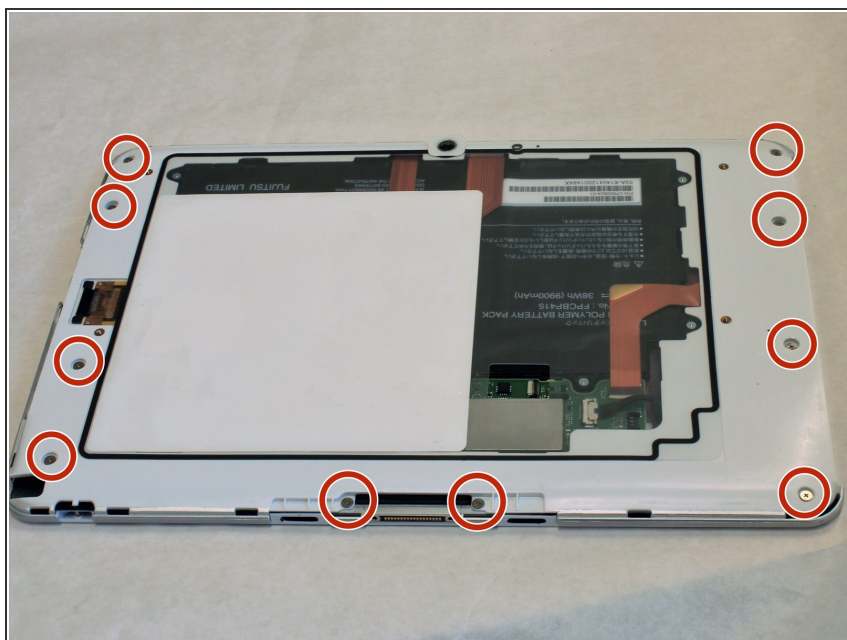


- Remove the ten 3mm screws with a PH00 screwdriver from the shield.

Step 5

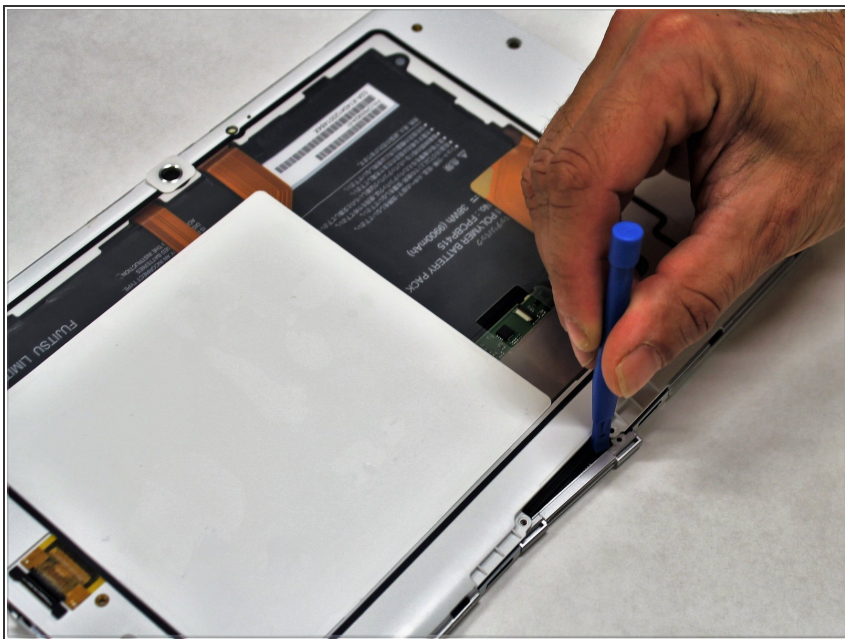

- Remove the grey docking station port cover.

Step 6

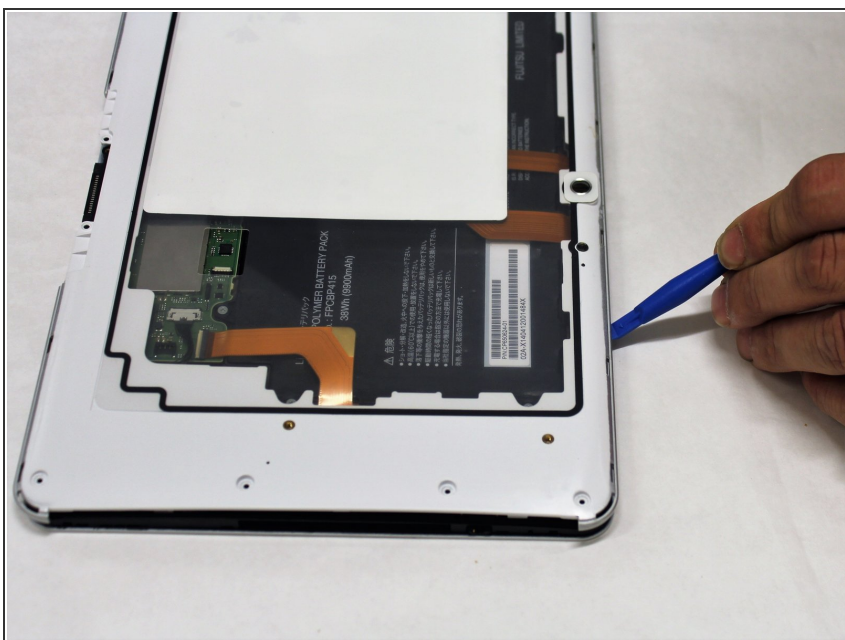

- Gently slide the plastic opening tool along the entire seam popping the clips free.

Step 7




- Lift the shield away from the device and remove the fingerprint scanner's ribbon from the motherboard.

Step 8 — Battery




- Pull up the cord that connects the battery to the motherboard

Step 9

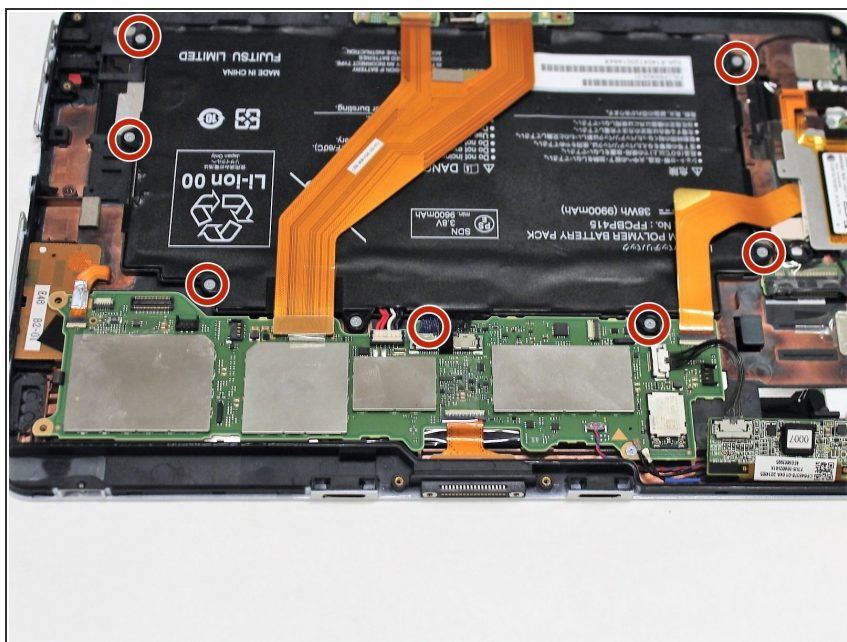


- Remove seven 1mm screws using a PH00 screwdriver.

Step 10

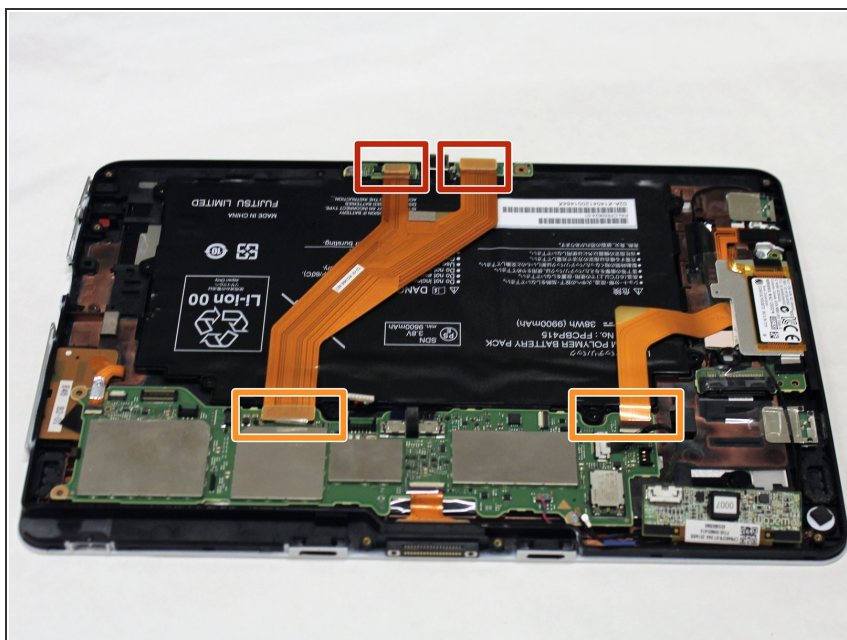

- Disconnect upper peripheral ribbons from motherboard.
- Disconnect left peripheral ribbon from motherboard.

Step 11

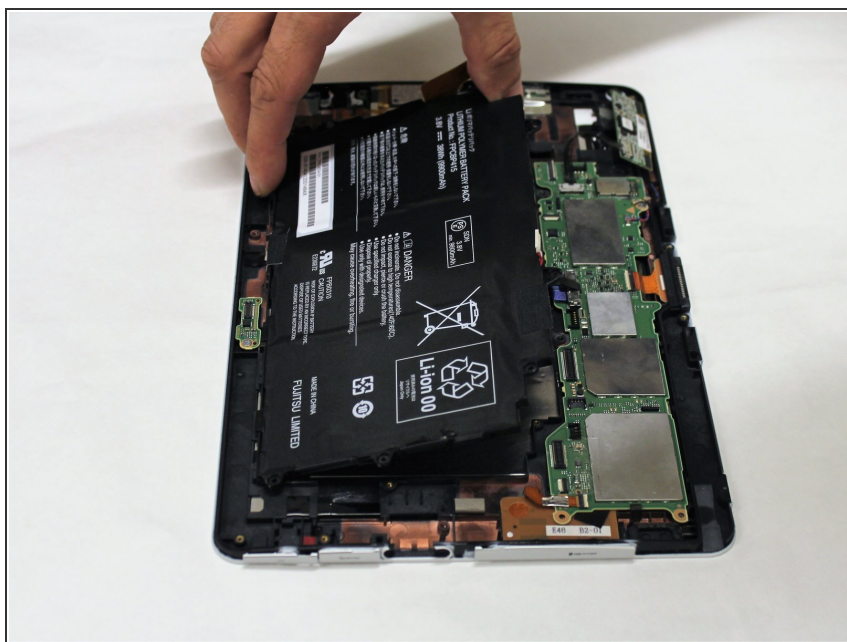


- Gently lift the battery from the casing.

Step 12 — Headphone Jack



- Remove the two 0.2 mm screws with a PH00 Screwdriver.

Step 13

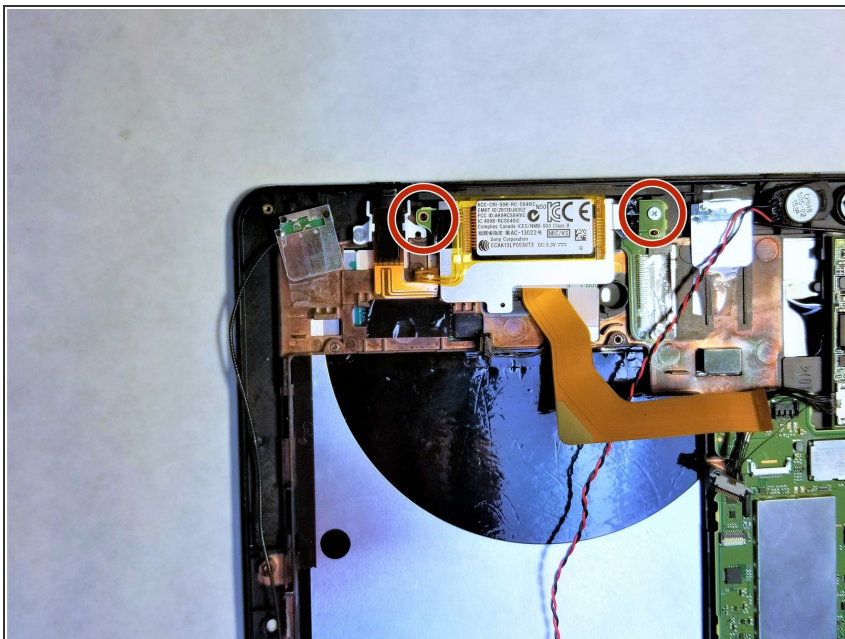


- Remove the two 0.2 mm screws with a PH00 screwdriver

Step 14




- Now use an ESD-safe spudger to gently pry up the silver piece and flip it over. Be sure not to remove this piece completely!

Step 15

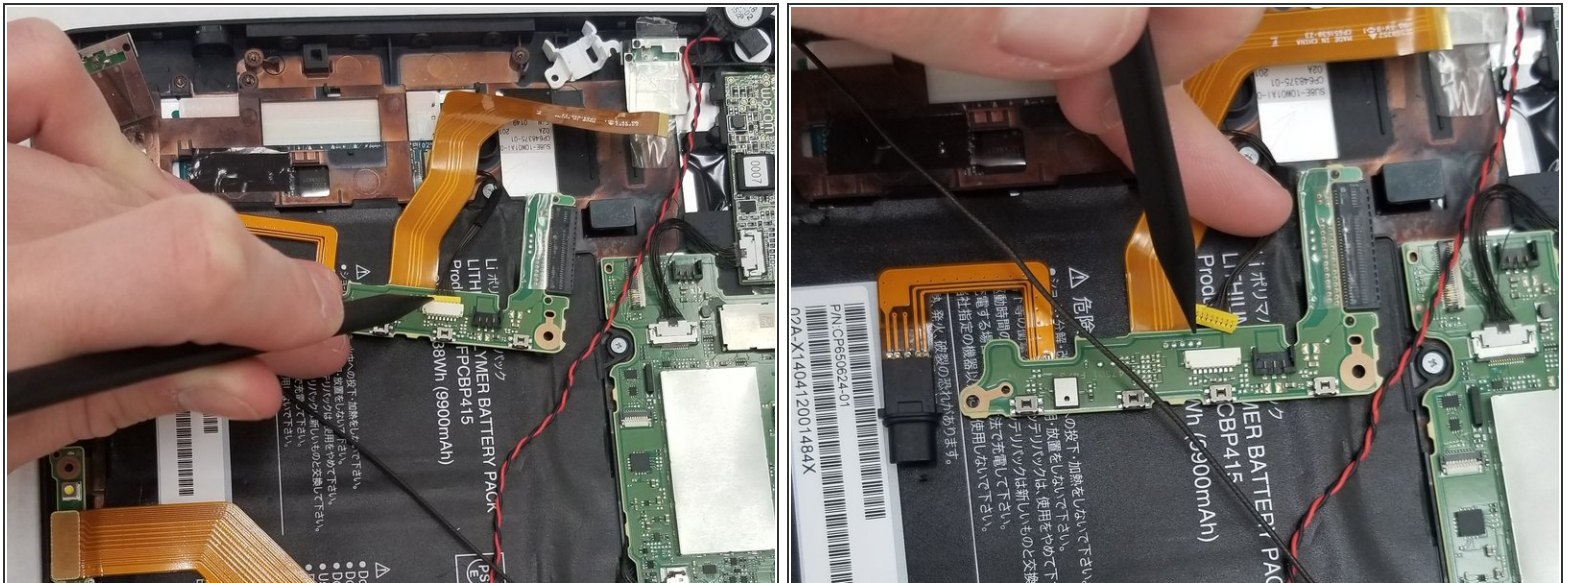

- Use an ESD-safe spudger to gently push the yellow piece out from the white cradle.

Step 16

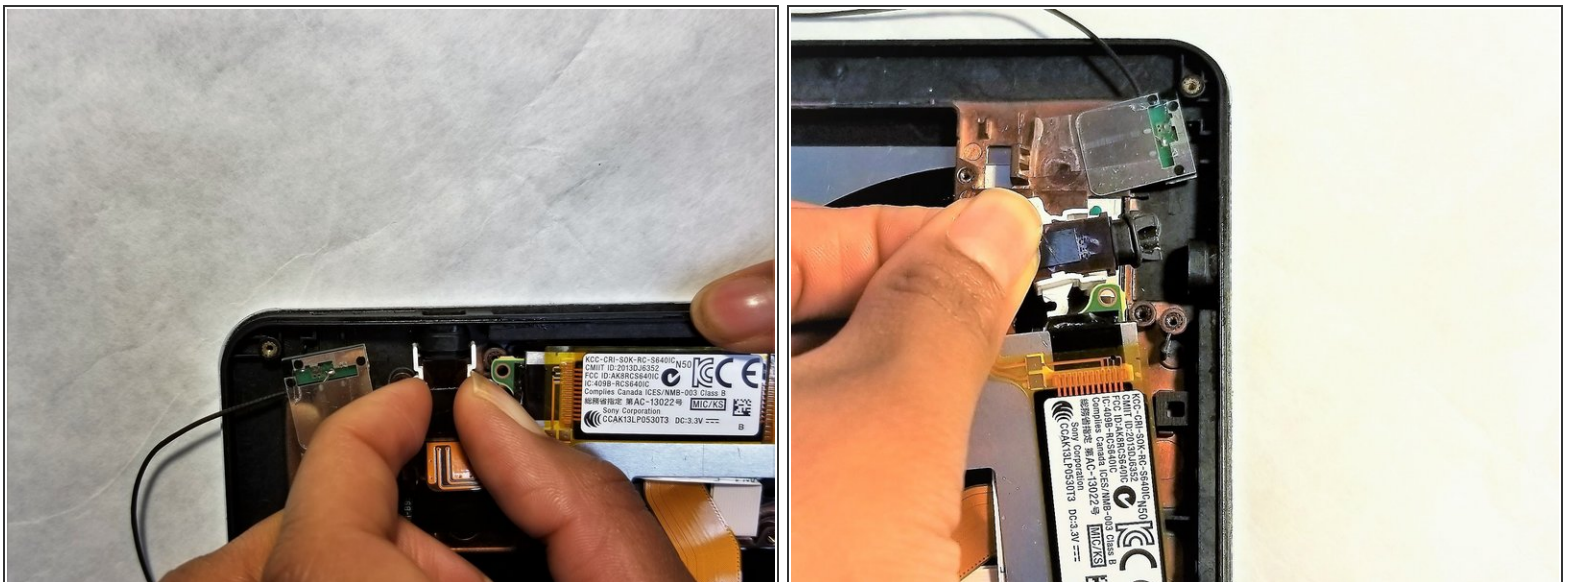

- When removing the headphone jack, simply use your fingers to pull out the white and black piece altogether.

To reassemble your device, follow these instructions in reverse order.