



HP Compaq Presario V6000 Cooling Fan Replacement

This guide will allow the user to safely remove the Cooling Fan step by step with easy instructions with clear pictures.

Written By: adam



 **TOOLS:**

- Metal Spudger (1)

Step 1 — Cooling Fan



- Remove all of circled screws.

 Be careful not to lose or misplace any screws. We suggest using a magnet board to keep everything together.

Step 2




- After removing the backs of the memory card and hard drive cover, gently remove the silver screen.

Step 3




- After removing the back of the memory card and the back of the hard drive, remove the CD Drive by gently pulling it all the way out of the device.

Step 4

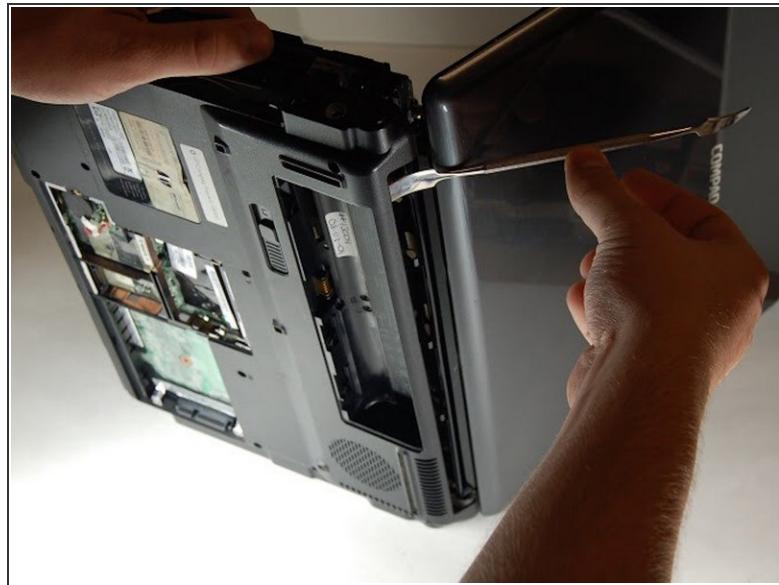


- After all components are removed, use your hands to separate the base plate from the main housing. If your fingers can not separate the 2 pieces; insert the metal spudger to create space.

Step 5

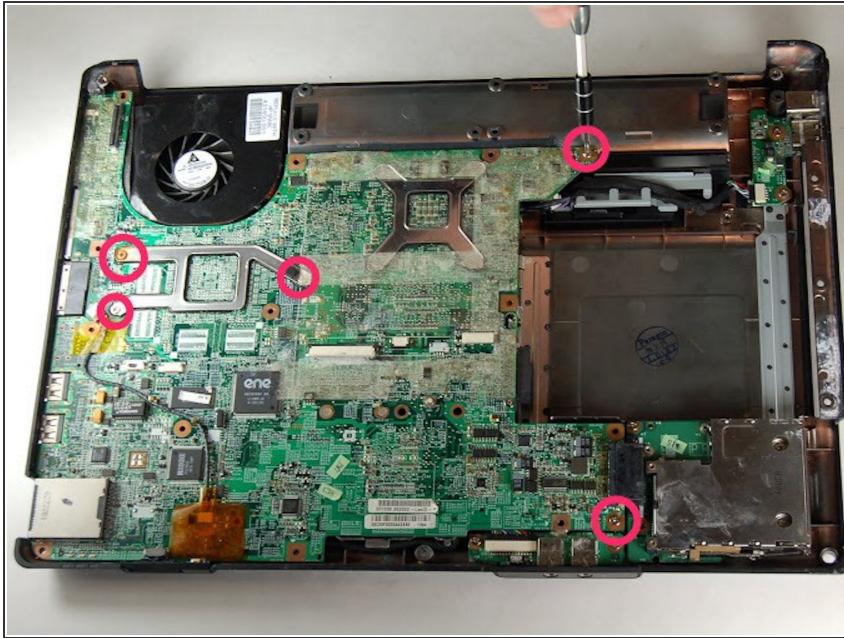

- Remove all screw we have designated in the photo.


Step 6

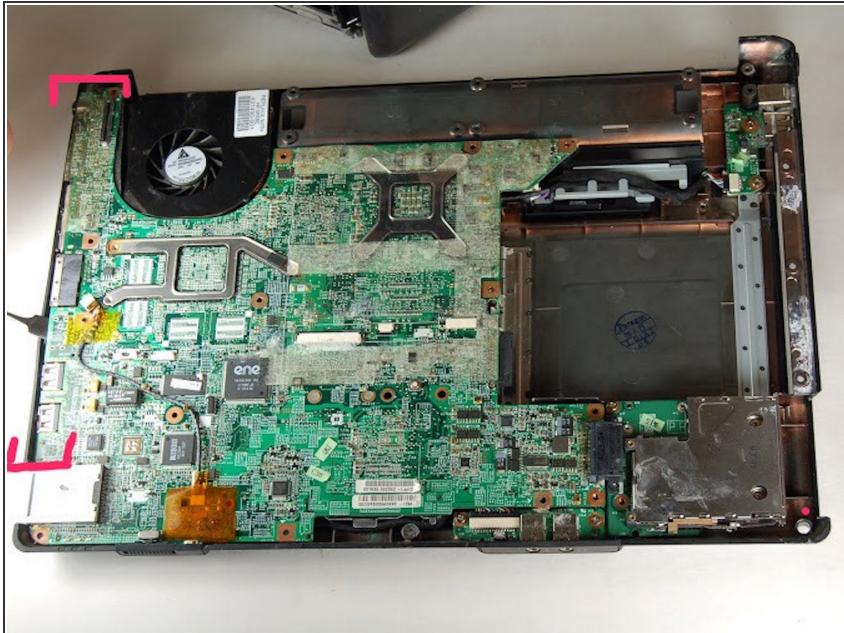

- After all screws are removed use metal spudger to pry the plastic housing away from the ports to separate.



 Use light pressure when separating the plastic housing

Step 7

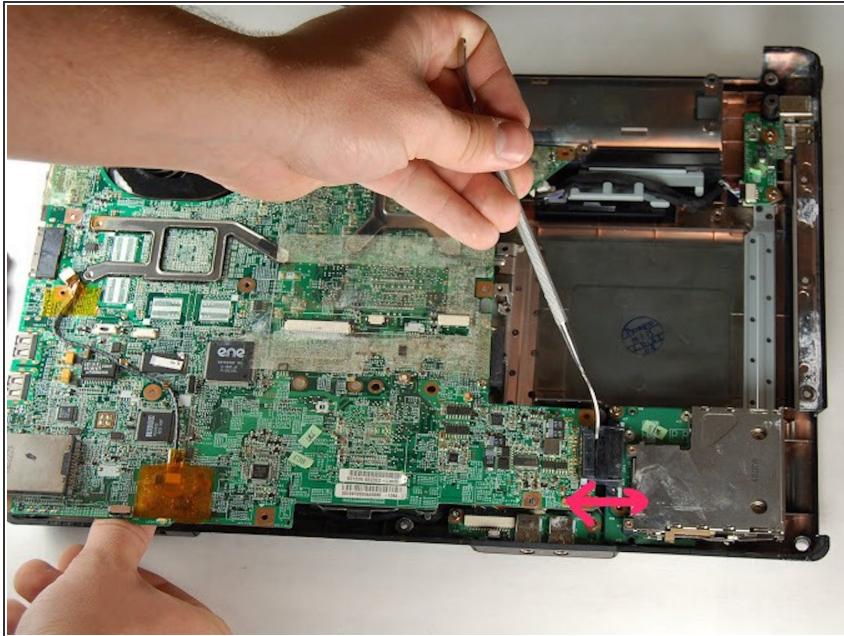

- Separate the motherboard from the rest of the components.

Step 8

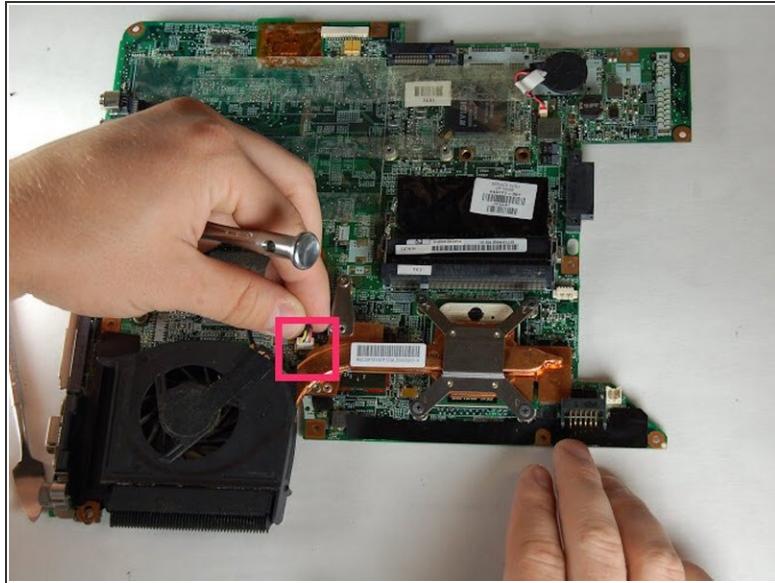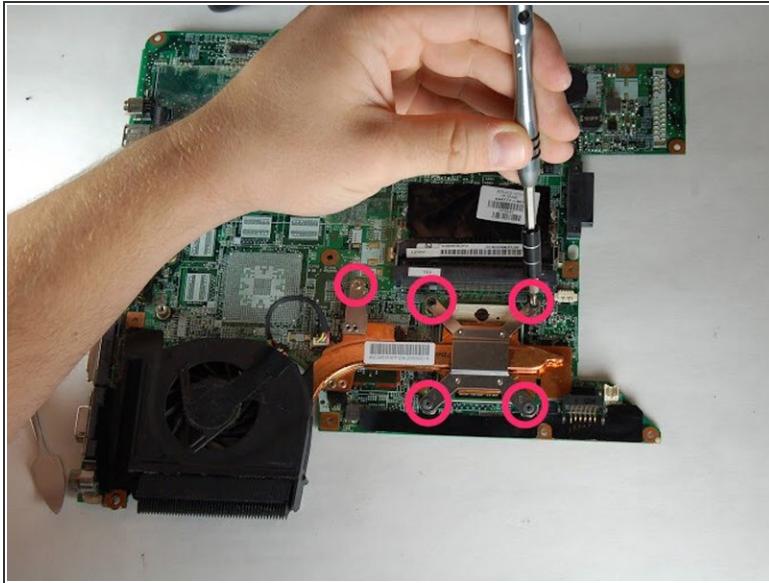

- Remove designated screws
- Unplug the ribbon connecting the cooling fan to the motherboard.
- After unplugging and unscrewing you will be able to detach cooling fan

To reassemble your device, follow these instructions in reverse order.