




# HP Compaq Presario V6000 Trackpad Replacement

This guide will allow the user to replace the trackpad on a HP Compaq Presario V6000.

Written By: adam

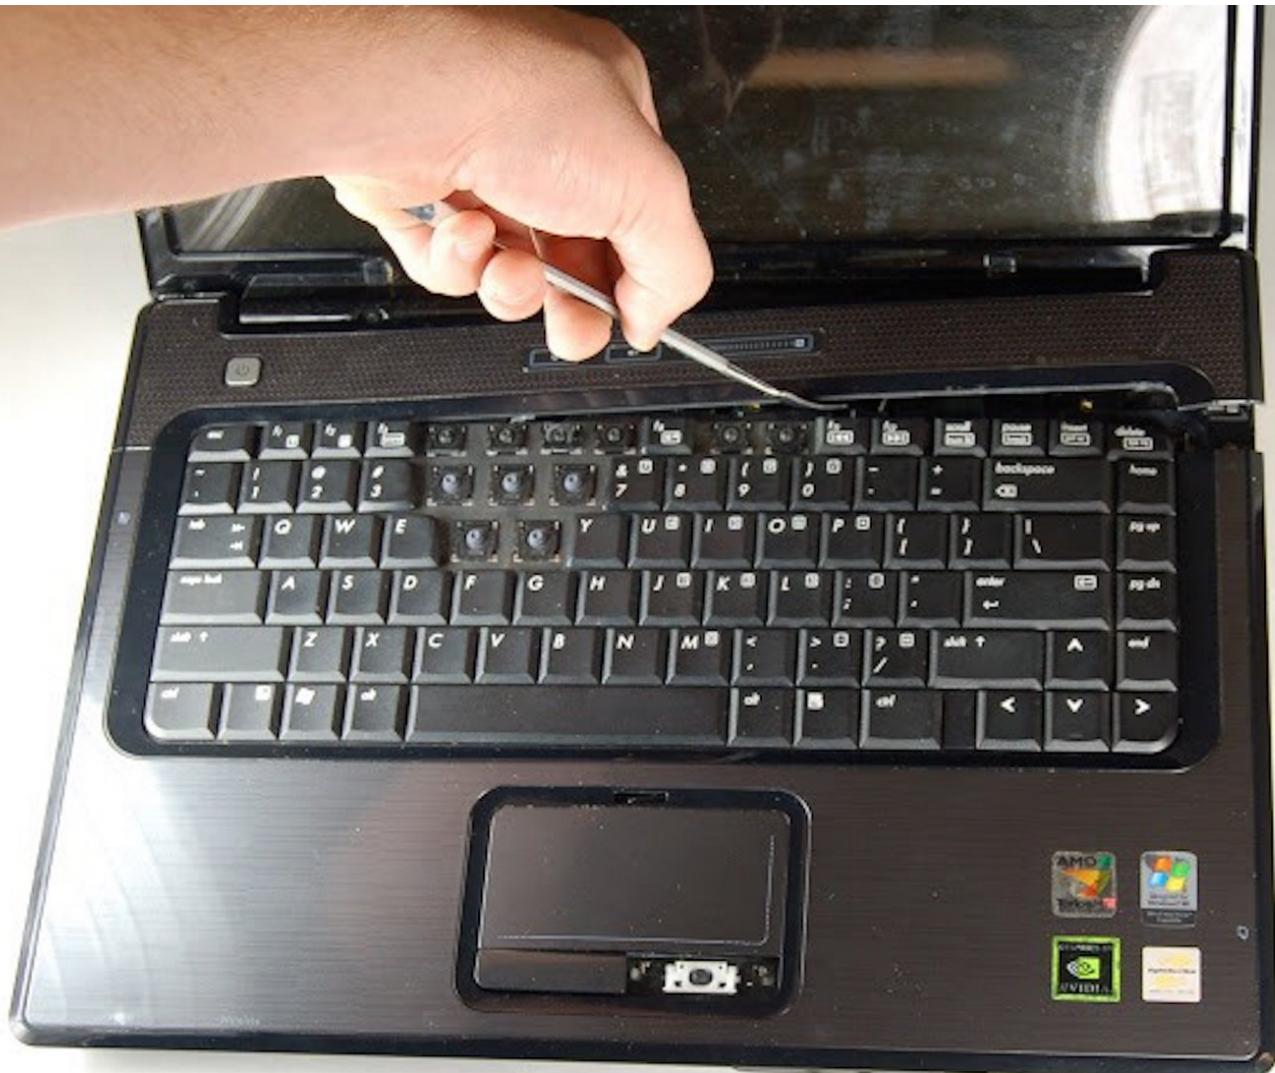

## INTRODUCTION

This guide demonstrates how to remove and replace an HP Compaq Presario V6000 trackpad in order to preserve the function of the device.

### TOOLS:

- Metal Spudger (1)

## Step 1 — Trackpad



- Use the metal spudger to gently remove the plastic plate from the rest of the top panel.


**⚠** Be careful not to break the plastic tabs connecting the two top panels.

## Step 2



- Separate the connection of the top piece from the board.

## Step 3

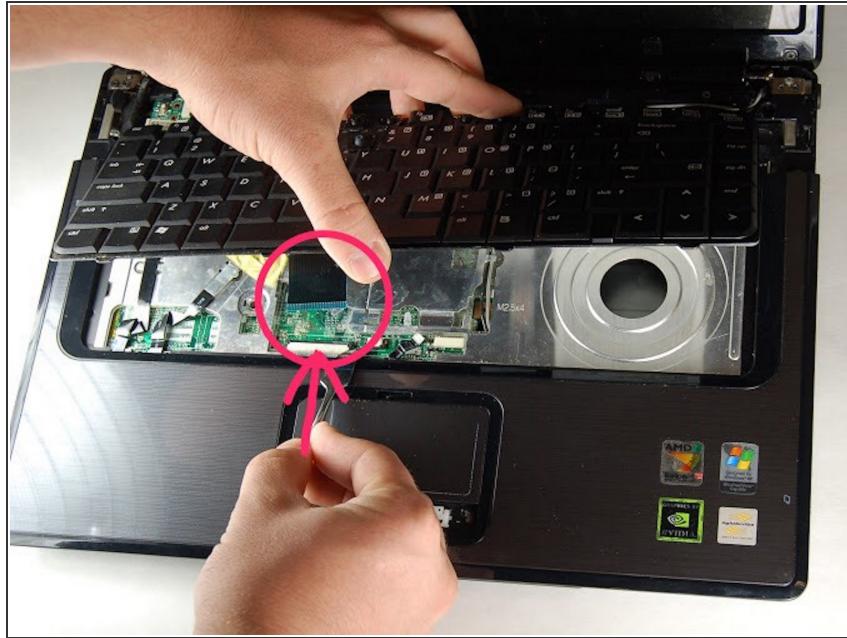


- Remove the connection from the keyboard to its housing.

## Step 4




- Separate the power connections.

## Step 5

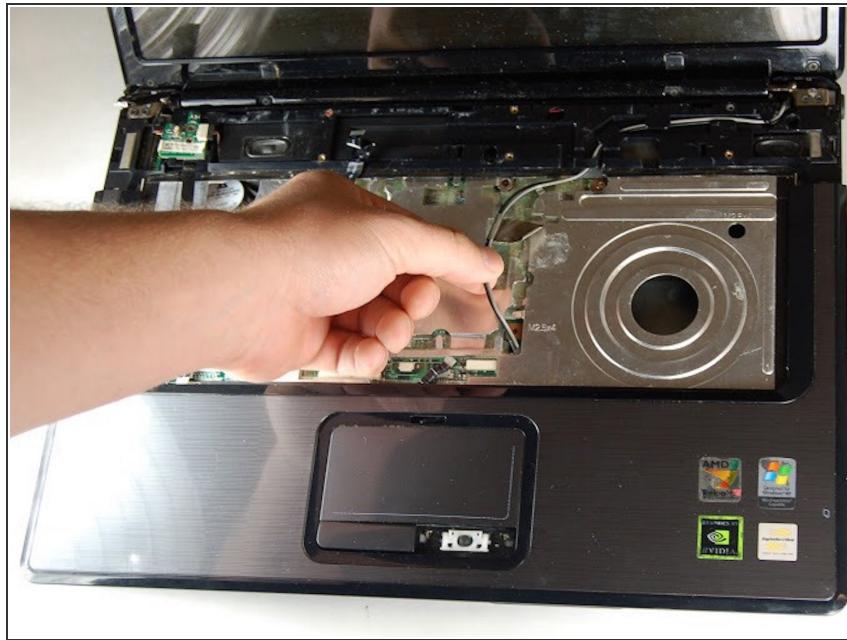

- Unravel the wire.

## Step 6

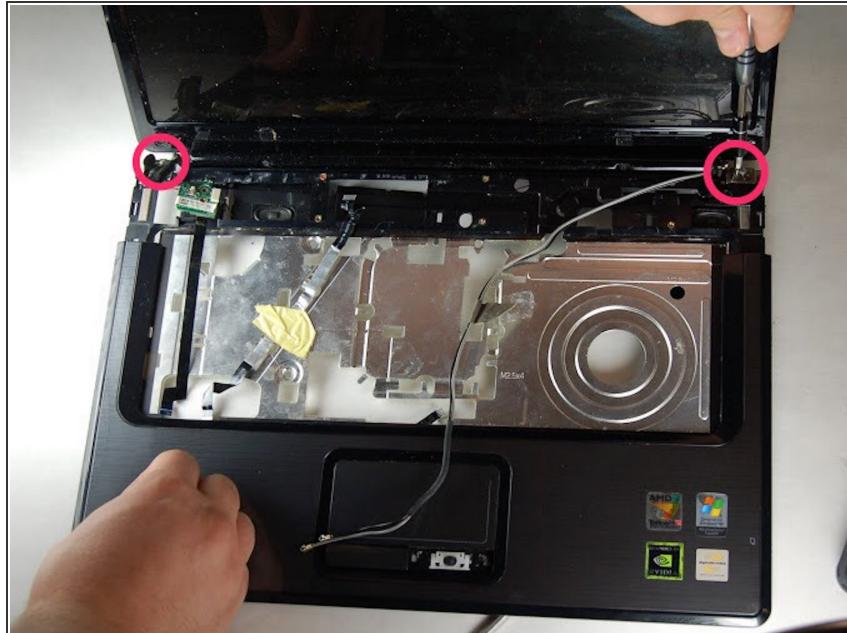

- Remove the screws connecting the plastic housing to the screen.


**⚠** Use caution when removing the last screen. Do no damage the screen.

## Step 7



- Make sure to grip the screen tightly and separate the top and bottom.

## Step 8

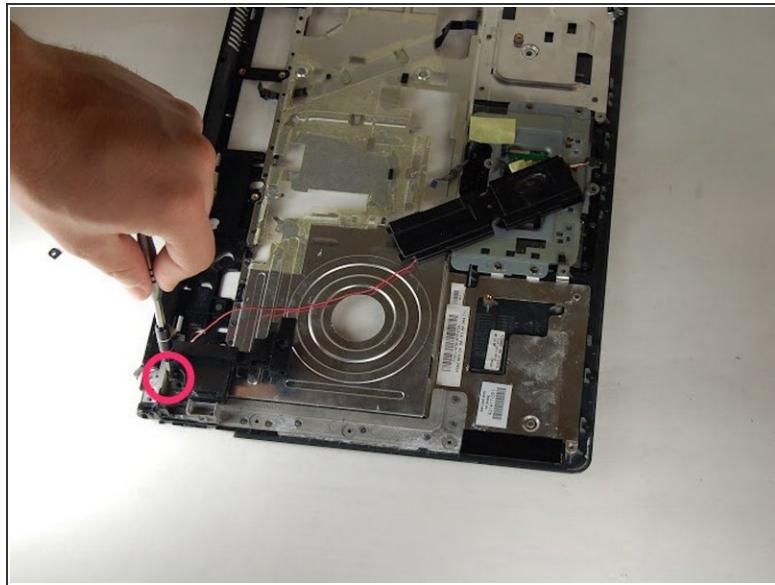

- Remove the screws that hold the track pad in place.
- Remove the track pad.

To reassemble your device, follow these instructions in reverse order.