



HP Pavilion Wave 600-a010 hard drive Replacement

Replace the hard drive in your desktop to fix excessive noise, or slow computer responsiveness.

Written By: clayton stokes



INTRODUCTION


This guide will help give direction to properly remove the hard drive from your HP Pavilion Wave Desktop PC. Tools required for this removal might be a Phillips and Torx head screwdriver, metal and plastic prying tool, and a magnetic arrangement pad.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [T15 Security Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Hard Drive

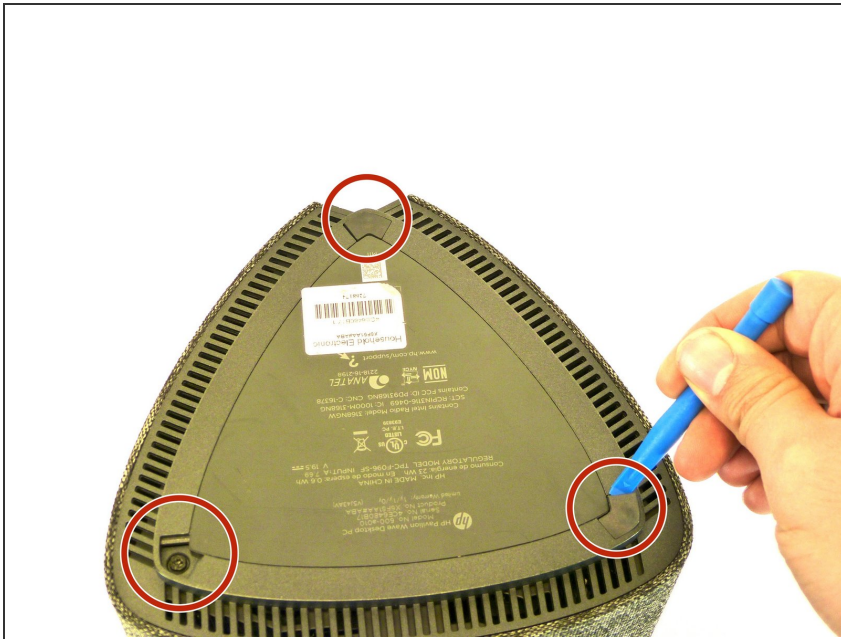


- Remove the three rubber footings by prying from the bottom cover using the plastic opening tool.

Step 2




- Remove the three 24 mm screws from the bottom cover using a Phillips #2 screwdriver.

Step 3

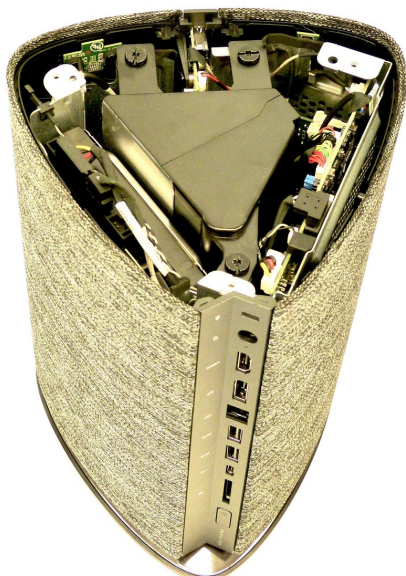



- Remove the bottom cover by lifting it up from chassis.

Step 4

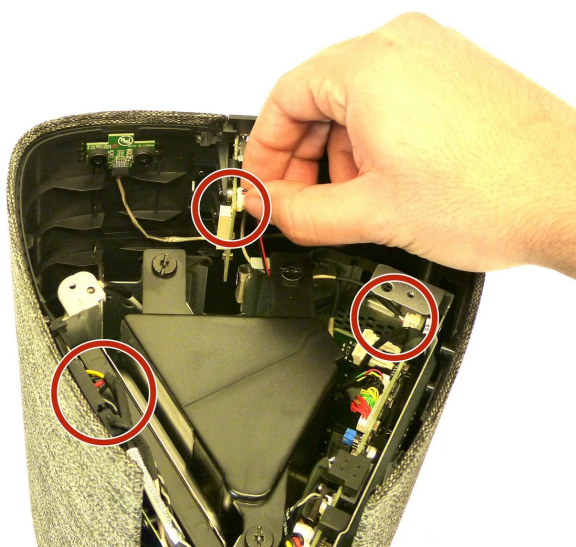


- Remove the three wires connecting the outer cover and front I/O port to the internal components (front usb and auxiliary assembly).

Step 5

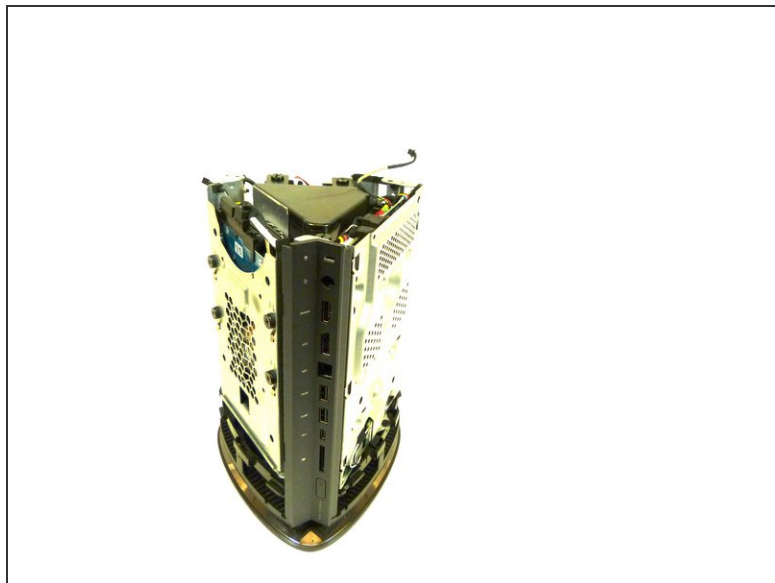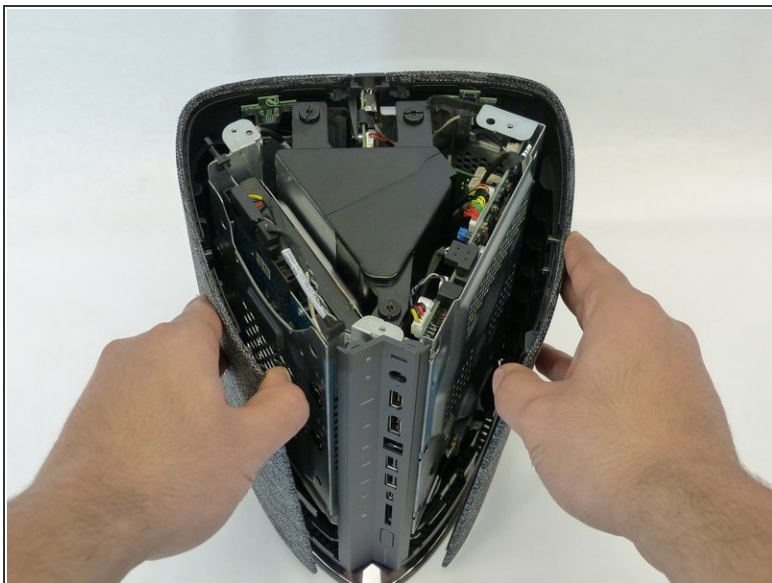

- Remove the outer cover by gently pulling apart and pulling away from the chassis.

Step 6

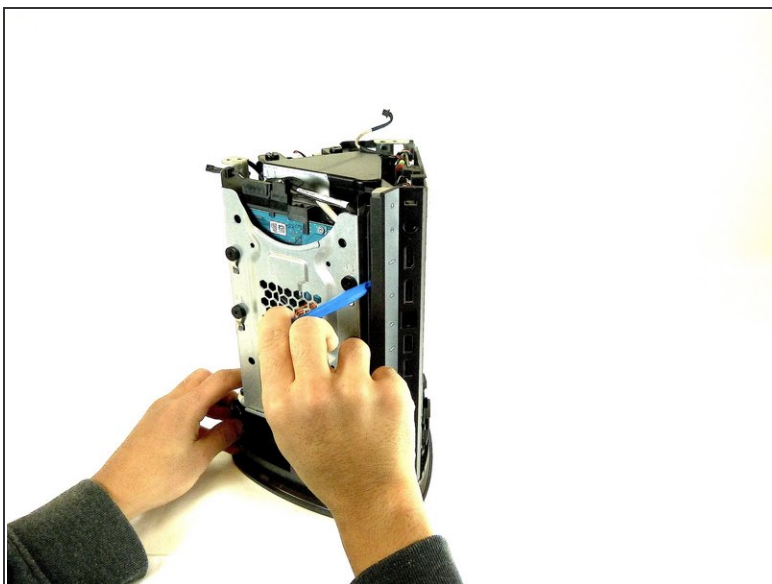


- Remove rear I/O bezel using plastic opening tool to pry apart the four clips holding the I/O bezel to the chassis.

Step 7



- Remove all other remaining cables from unit using the plastic opening tool to carefully pry apart the connections.

Step 8

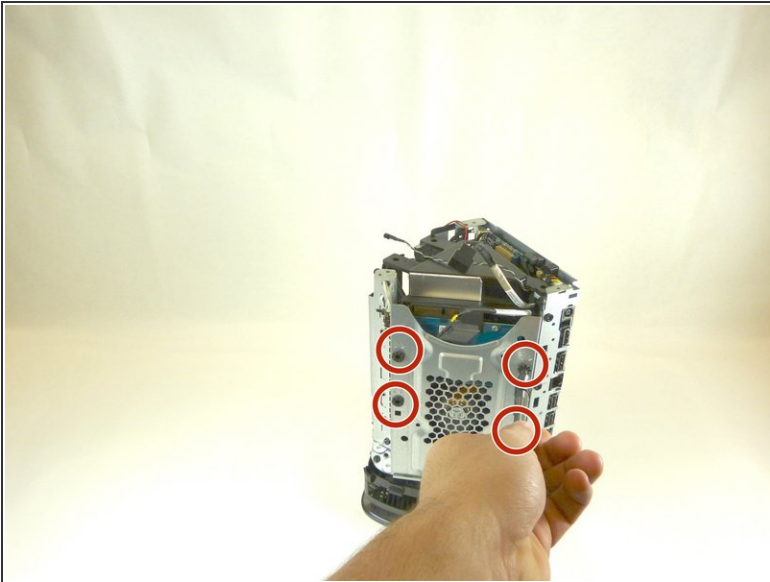

- Remove the HDD by first using the Phillips #2 screwdriver to remove the four 23 mm screws holding together the assembly and then pulling the HDD out of the chassis.

To reassemble your device, follow these instructions in reverse order.