



HP Pavilion Wave 600-a014 Front IO Board Replacement

This guide will instruct you on how to replace the front IO panel.

Written By: Cristian Vanegas



INTRODUCTION

This guide will walk you through on how to replace the front IO Board for the HP Pavilion Wave 600. A Pry Tool and Philips screw driver will be needed to replace this part. Ensure that the device is disconnected from its power source and all other devices are disconnected.

TOOLS:


- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)



PARTS:

- Front IO Board (1)

Step 1 — Front IO Board

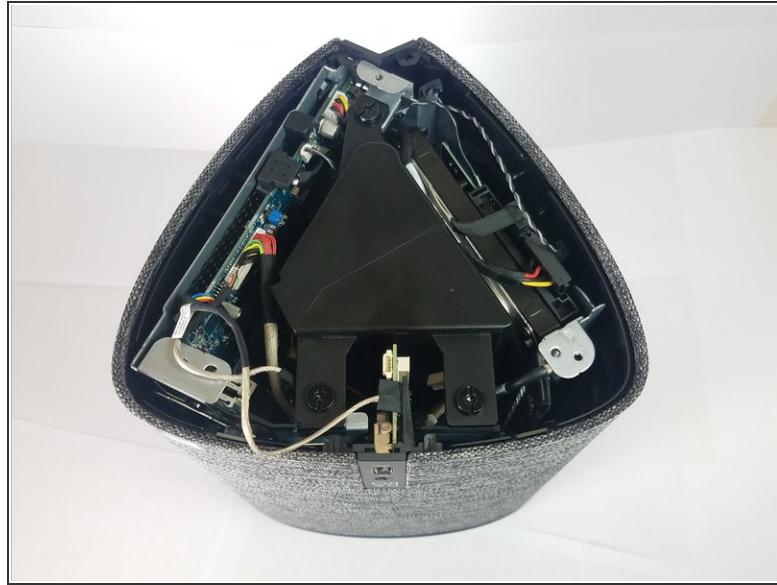



- Turn over computer and remove the rubber feet.
- Remove the 8mm Philips screws indicated by red circles with a Philips #0 screwdriver.
- Use a pry tool and lift up on the lid.

Step 2



- From back IO panel pry open the casing as indicated.

Step 3

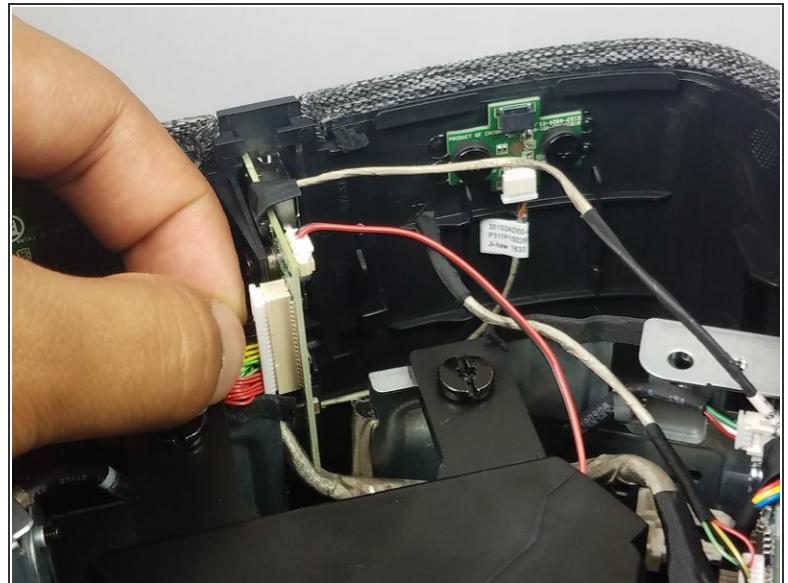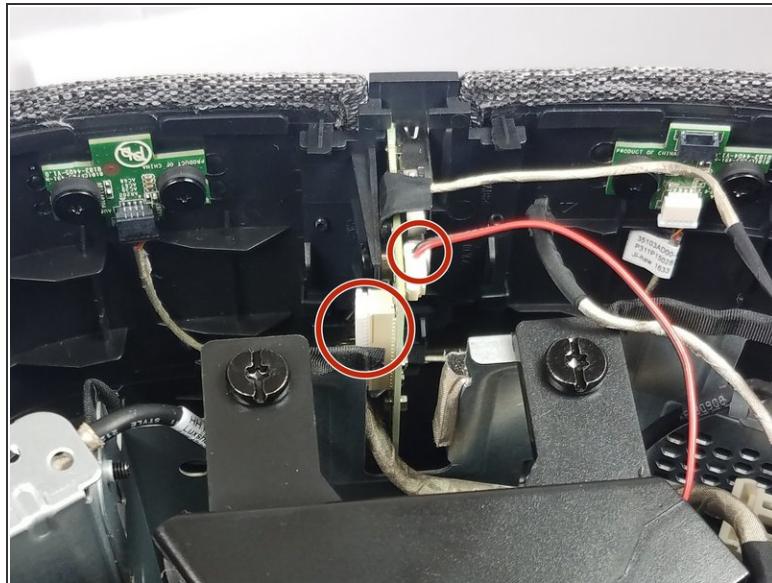

- Finally Remove the two cables circled in red for the front IO panel.

To reassemble your device, follow these instructions in reverse order.