



# HP Pavilion x360 11-p110nr Wireless Chip Replacement

This guide will demonstrate how to replace the wireless chip if it were to be damaged or upgraded.

Written By: Safe Mustafa



---

# INTRODUCTION

This guide will demonstrate how to replace the wireless chip if it were to be damaged or upgraded.



---



## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-


## Step 1 — Wireless Chip

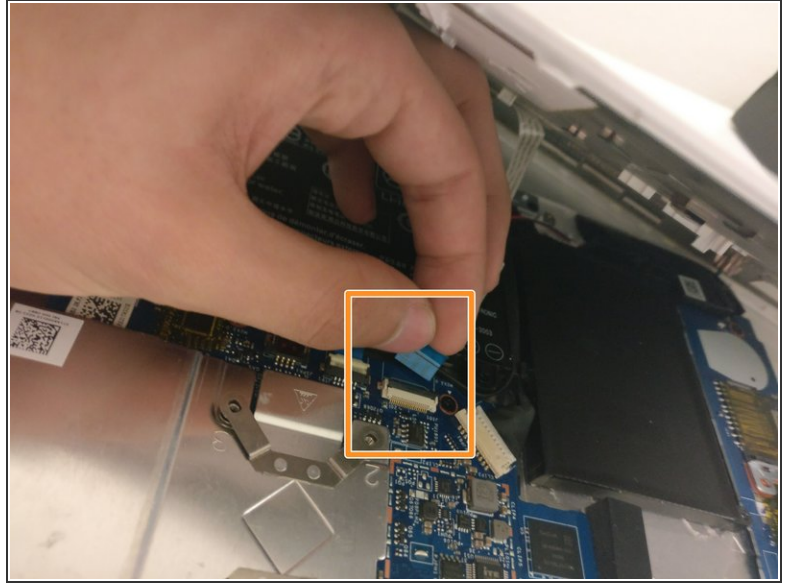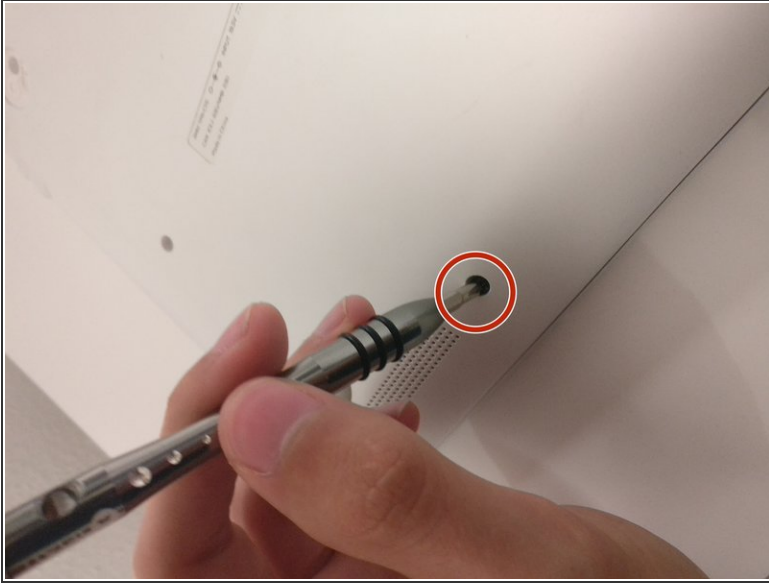


- Unscrew all the screws.
- Detach the back by simply pulling it from the base of the computer.
- ⚠ **Do not fully pull the back out** because it usually has a safety plastic that needs to be removed first.
- Locate and pull the the safety plastic. Look for a blue plastic attached to a chip with part of the plastic attached to the back of the computer.

## Step 2

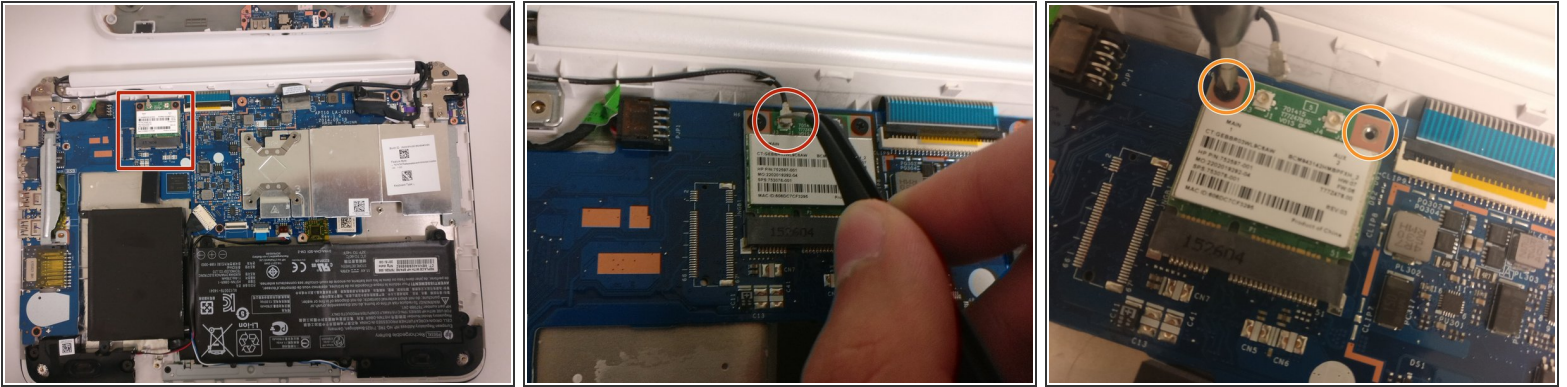

-  The wireless chip is square shaped with a white paper glued to it. The chip is in the top left section of the back with a wire connected to it.
- Pull the wire connected to the chip using the tweezers.
  - Unscrew the two screws near the top.

## Step 3

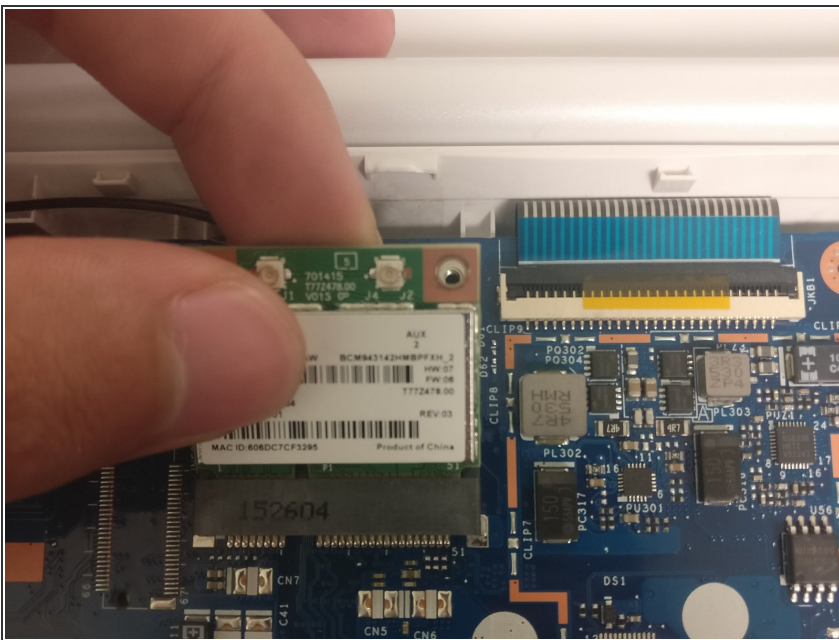

- Pull out the chip and place in the new one in place.

To reassemble your device, follow these instructions in reverse order.