




HP Split x2 Trackpad Replacement

Easy step by step guide to replace the Trackpad.

Written By: Jose Francisco

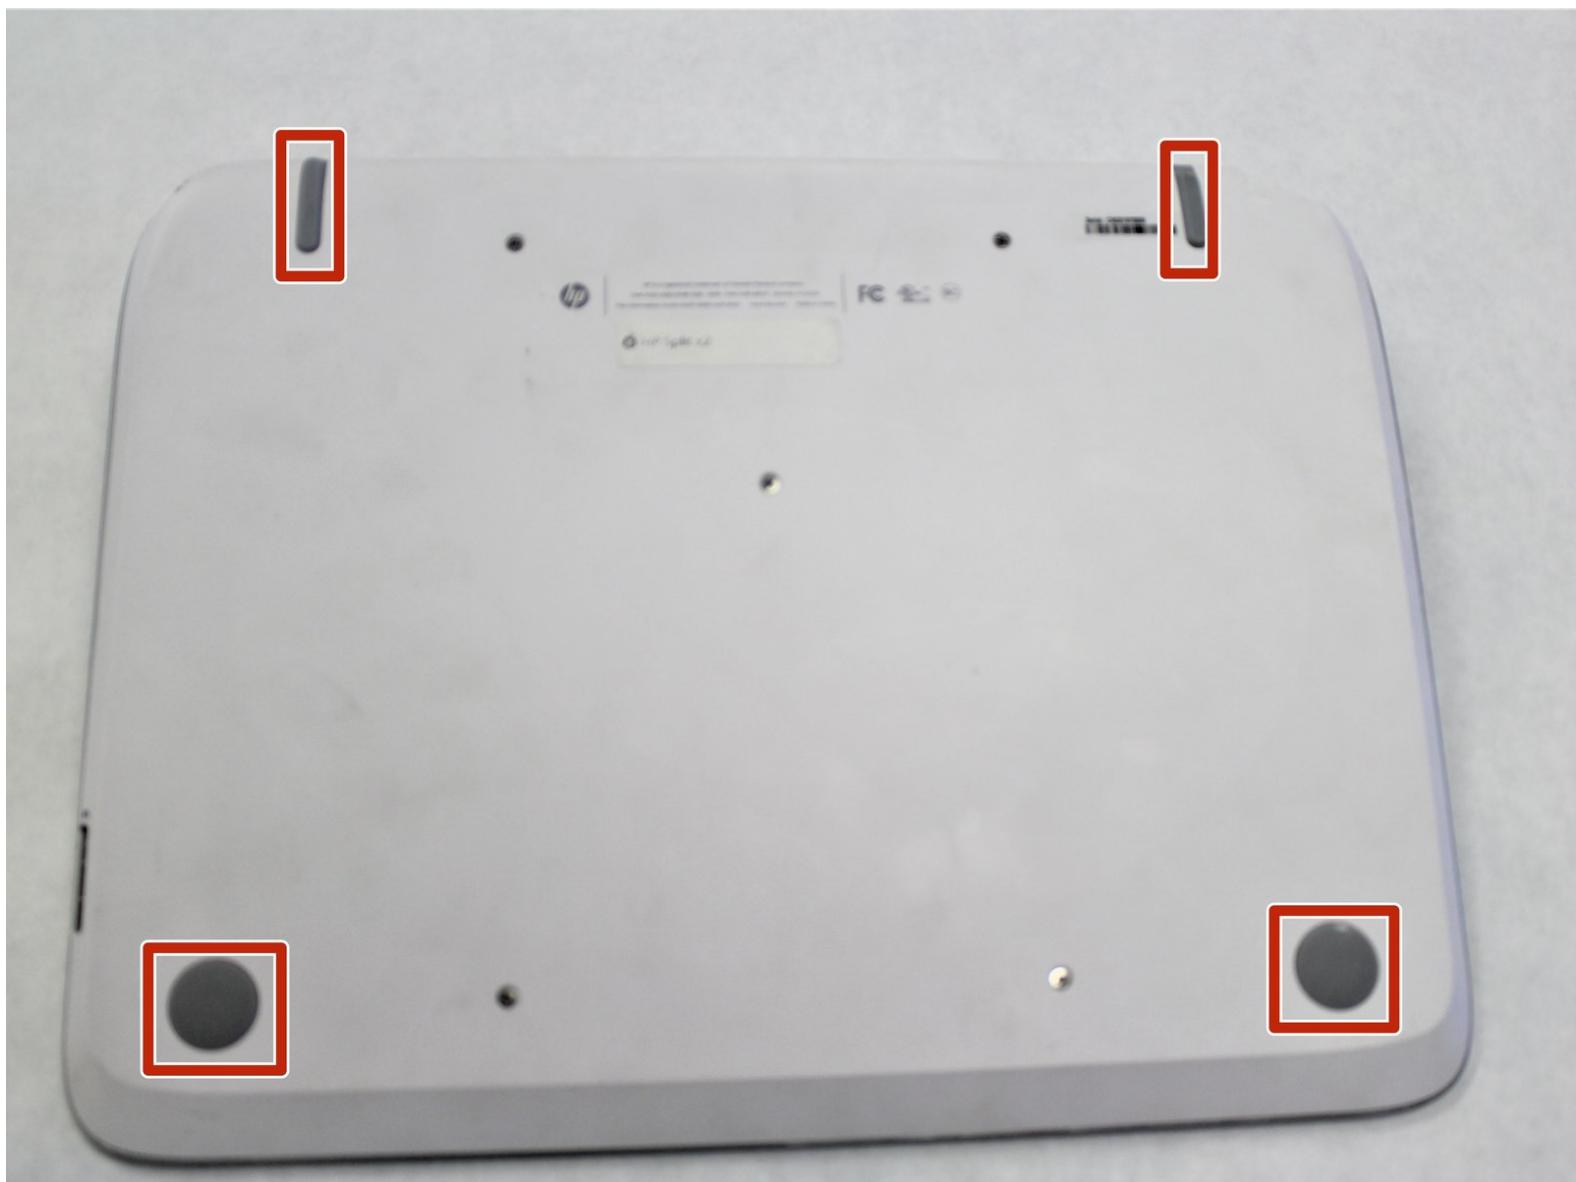

INTRODUCTION

In this guide, we walk you through the step by step trackpad replacement

TOOLS:


- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

Step 1 — Trackpad



- Remove the bumpers at the back of the keyboard part.
- Use a J1 screwdriver head to remove the 7mm screws underneath the bumpers.

Step 2

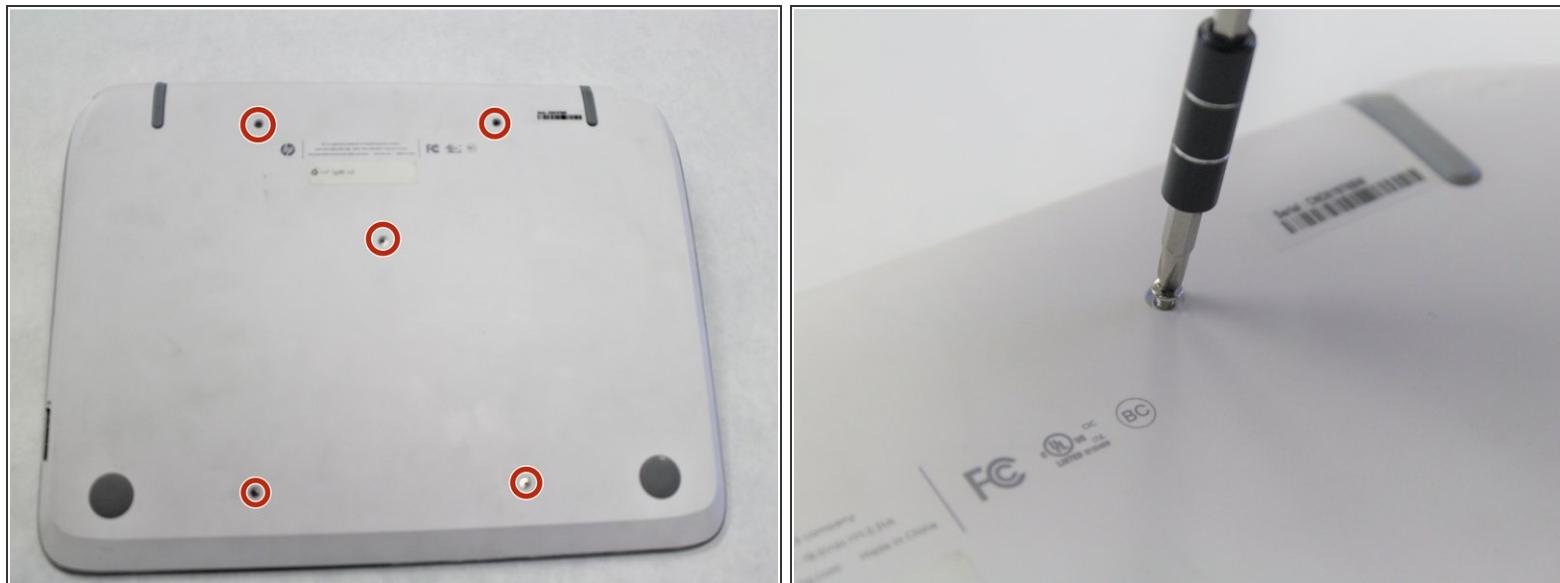


- Use a J1 screwdriver head to remove the remaining 5mm screws at the back of the keyboard part.

Step 3




- Use the opening tool to carefully remove the back cover of the keyboard.

Step 4

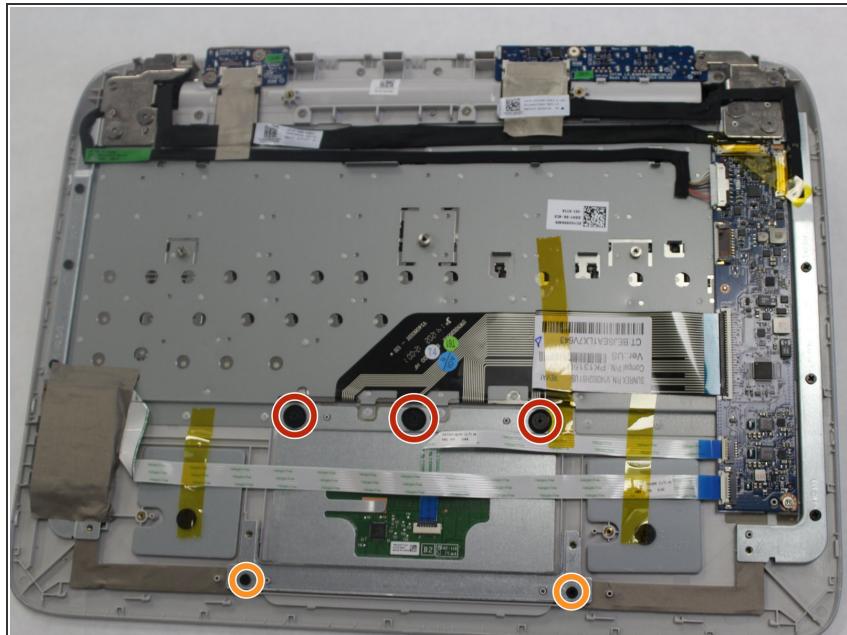


- Use a J1 screwdriver head to remove the black 2mm screws along the top part of the trackpad
- Using the same screwdriver head, remove the black 3mm screws along the bottom part of the trackpad

Step 5

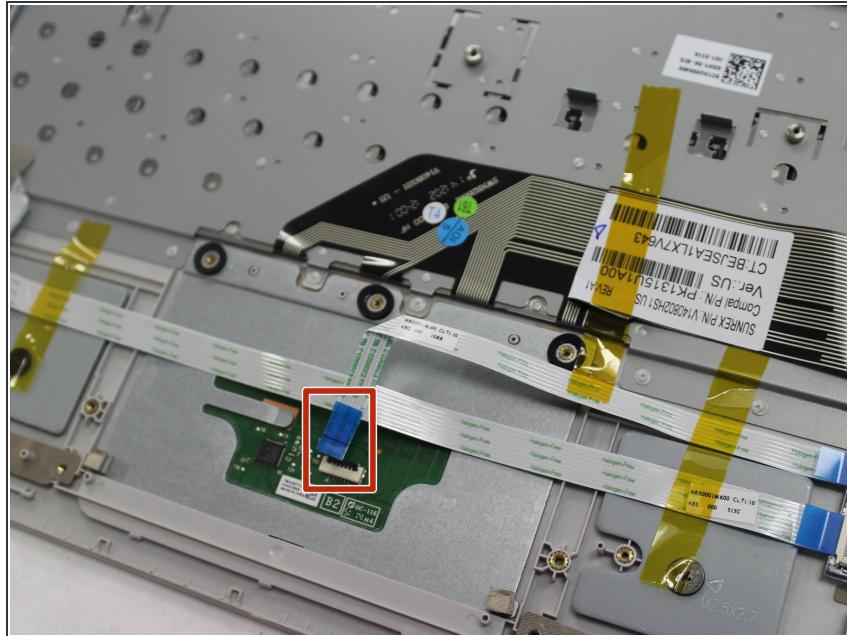

- Disconnect the ribbon cable and move it out of the way.

Step 6

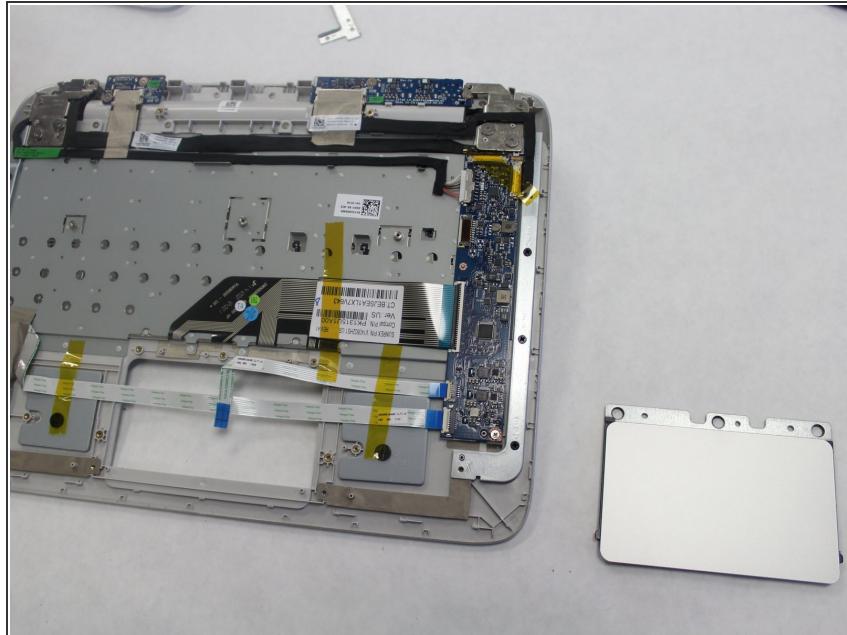

- Slide the trackpad out from underneath the ribbon cables.

To reassemble your device, follow these instructions in reverse order.