




# HP Stream x360 11-p015wm Keyboard Replacement

This guide will walk you through the steps of replacing the keyboard in your HP Stream x360 11-p015wm.

Written By: Megan Waxman

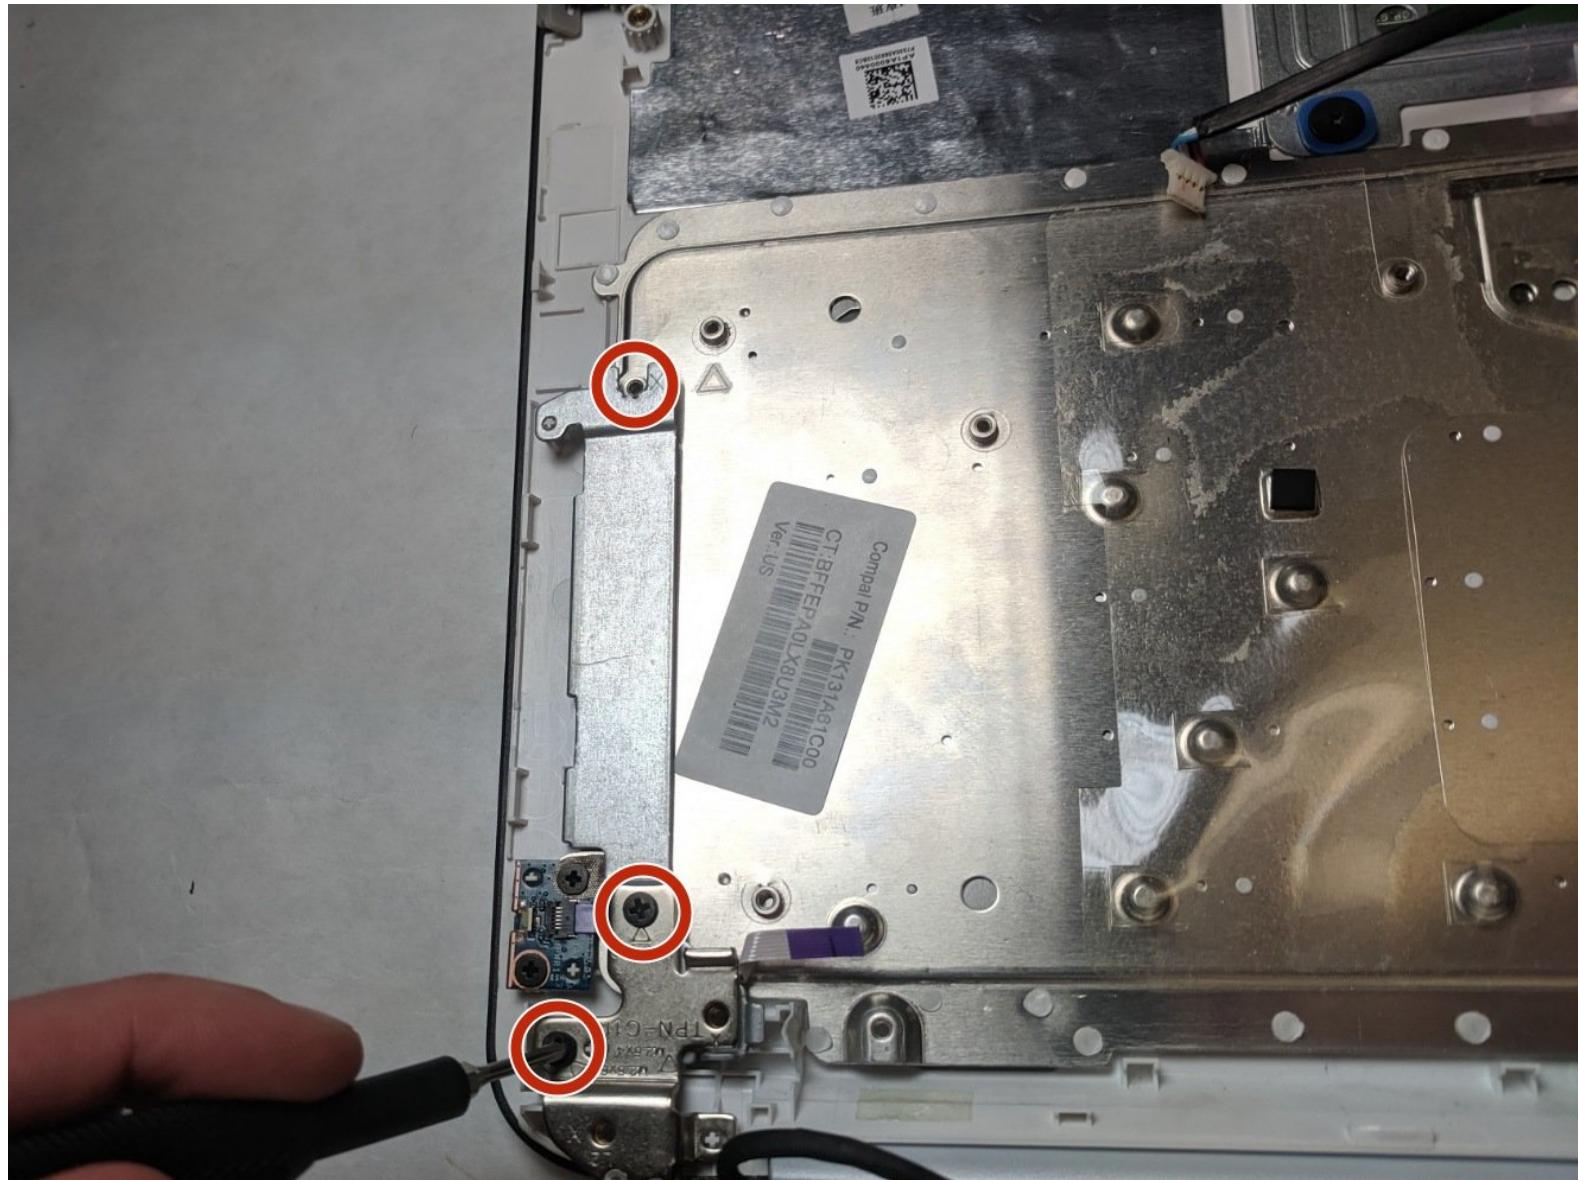

This document was generated on 2020-04-06 04:26:32 AM (MST).



## INTRODUCTION

If your keyboard has become damaged or broken, this guide will walk you through the steps of replacing the keyboard in an HP Stream x360 11-p015wm. Follow along, step-by-step to safely remove your keyboard and then follow the instruction in reverse to reassemble your laptop with its new keyboard! Be sure to back-up your files before undergoing this repair.

## TOOLS:


- [JIS #1](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [J00 JIS Screwdriver](#) (1)

## Step 1 — Back Cover

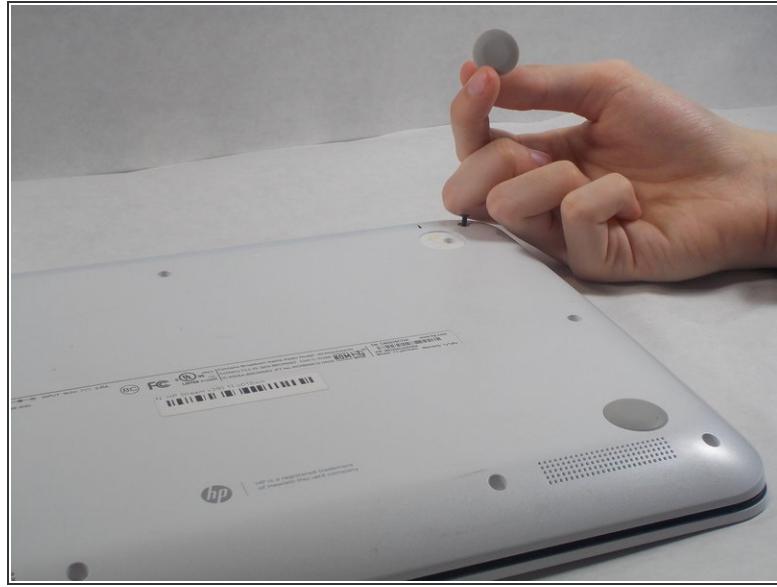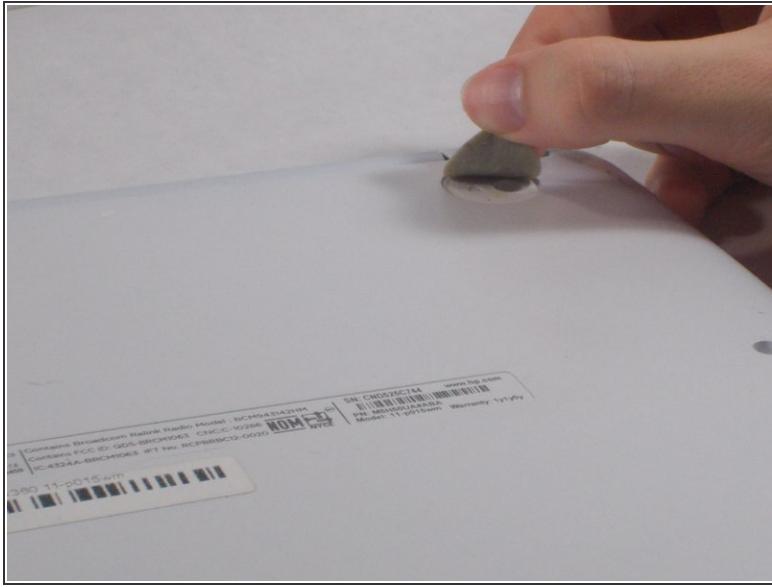

- Orient the laptop to have the back cover facing upwards.
- Remove the four rubber pads located in each corner.

## Step 2

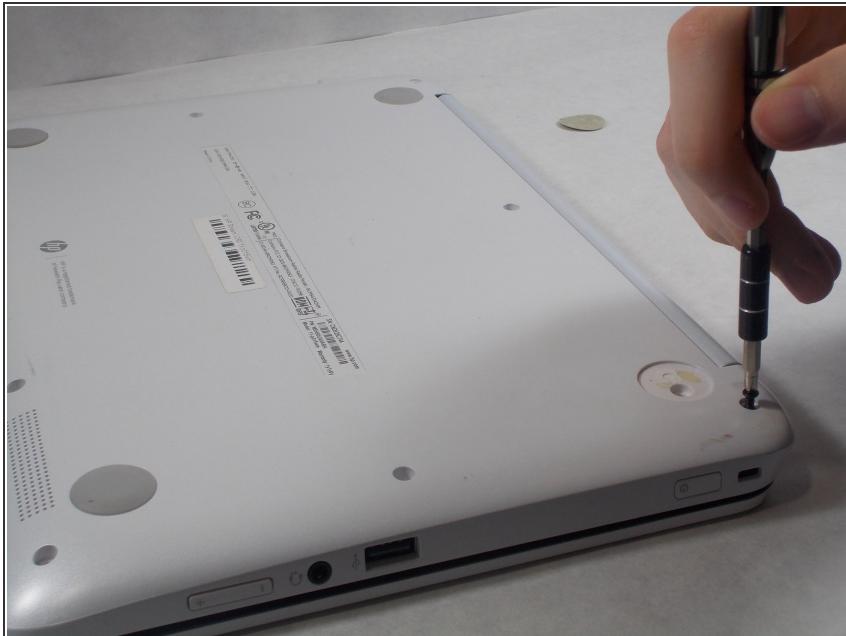

*(i)* Tool required: [JIS #1 Screwdriver](#)

- Using the screwdriver, remove all of the exposed screws.


## Step 3



*(i)* Tool required: [iFixit opening tool](#)

- Open the laptop and orient the keyboard facing upward.
- Slowly wedge the opening tool into the gap between the keyboard and the back cover.
- After loosening the back cover, close the laptop and orient the back cover facing upward. Open the cover.

## Step 4

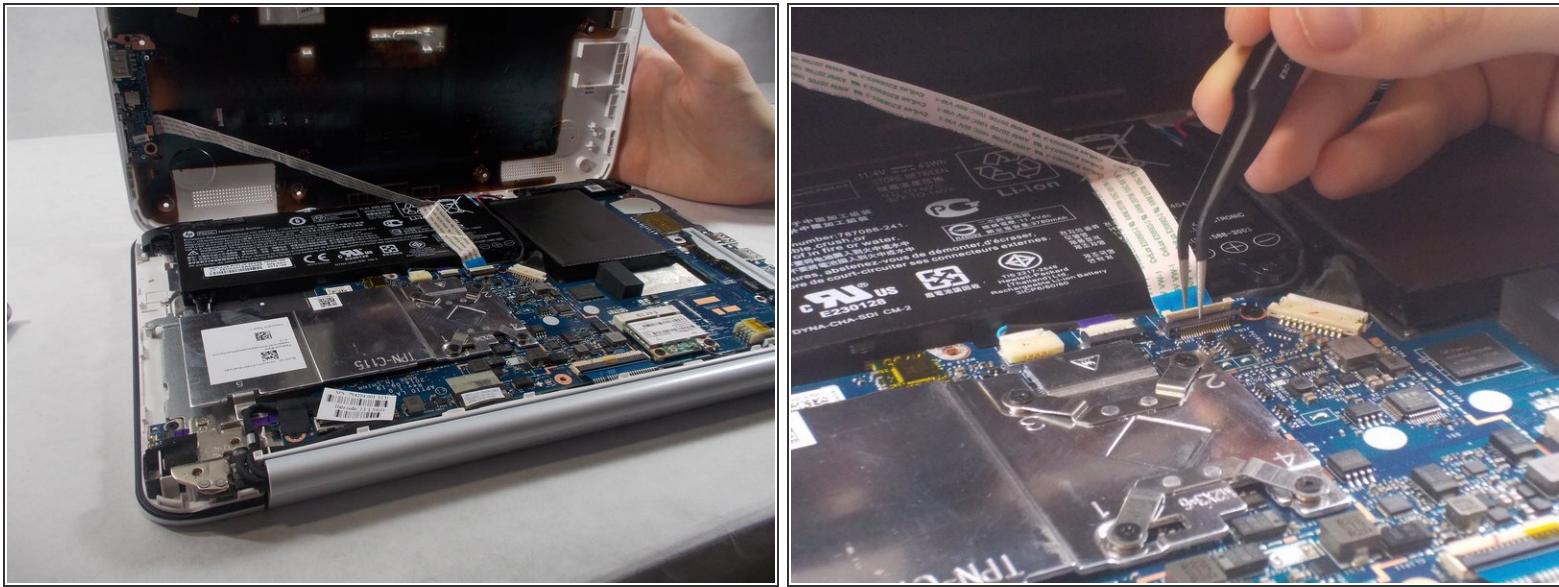

⌚ This is a good time to clean any accumulated dust or debris. Use [this link](#) on tips for cleaning.

ⓘ Tool required: [Tweezers](#)

- Carefully use tweezers to remove the audio jack connector from the motherboard.

## Step 5 — Motherboard




- Remove the six 6.5 mm Phillips head screws from the battery using the JIS #00 screwdriver.

## Step 6



- Unplug the wire attaching to the battery to the motherboard using the tweezers.
- Remove the battery.

## Step 7

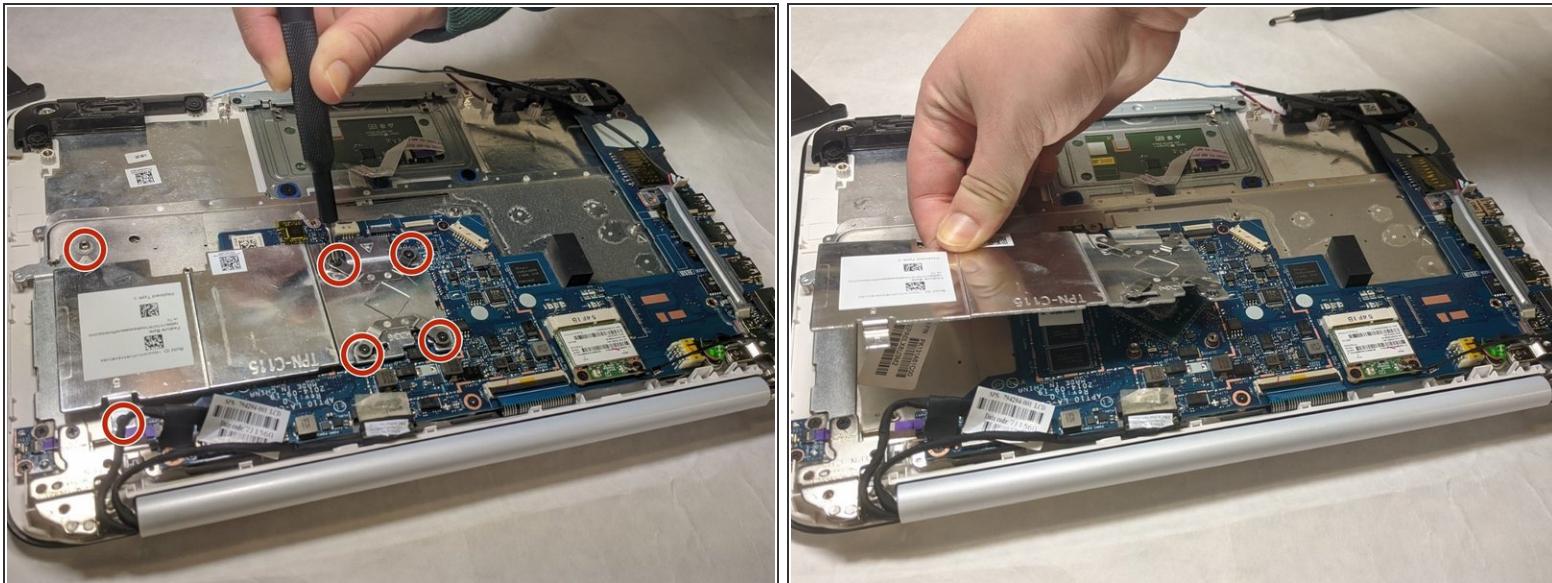


- Remove the six 3.5 mm screws from the silver plate cover with screwdriver JIS #00.
- Remove the silver plate cover.

## Step 8





- Remove the four 3.5 mm screws from the metal arm using the JIS #00 screwdriver.

## Step 9

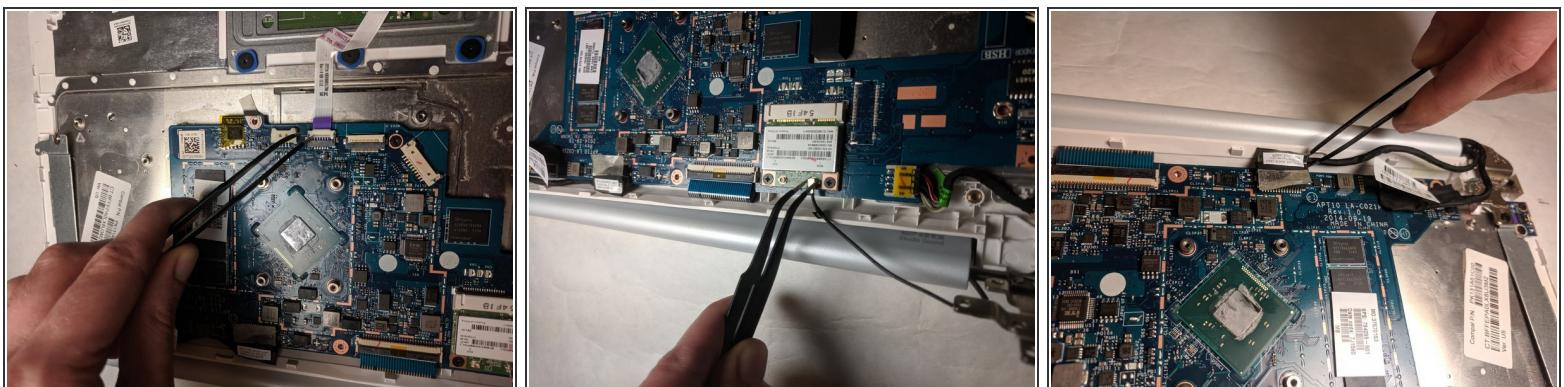



- Detach all remaining wires from the motherboard using the tweezers.

## Step 10

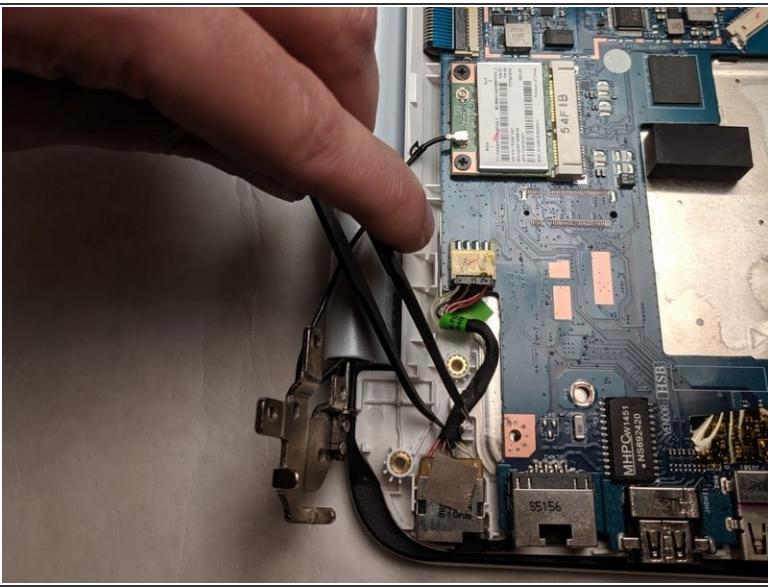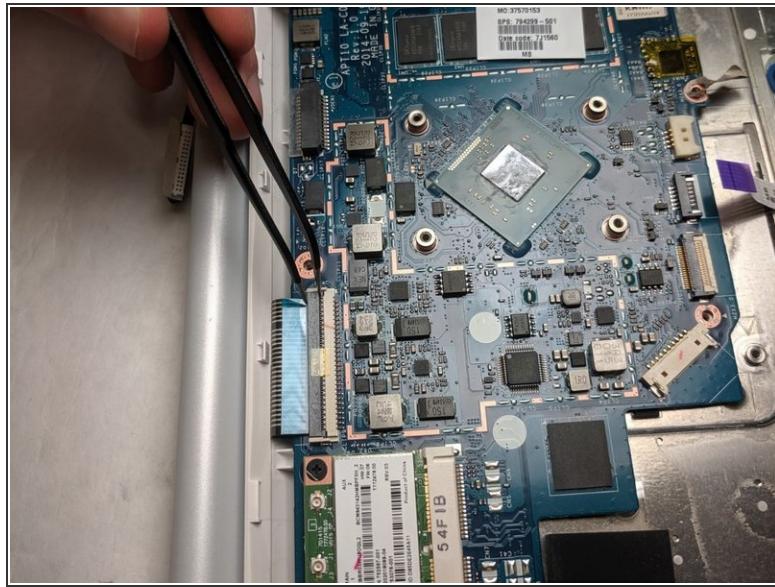


- Detach all remaining wires from the motherboard using the tweezers.

## Step 11

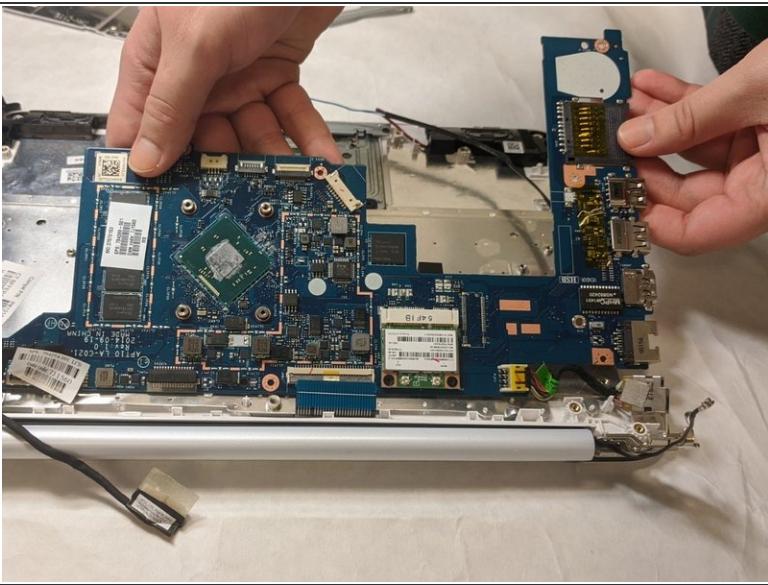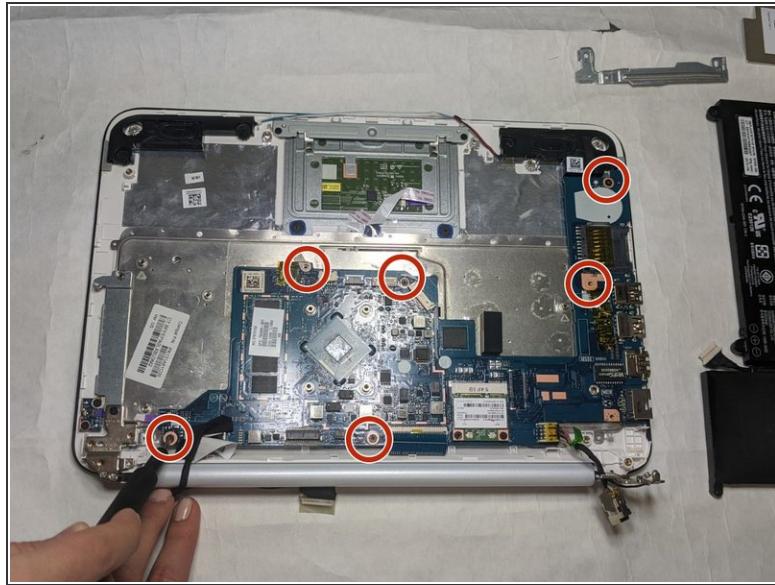


- Remove the six 3.5 mm screws from the motherboard using the JIS #00 screwdriver.
- Remove the motherboard.

## Step 12 — Keyboard

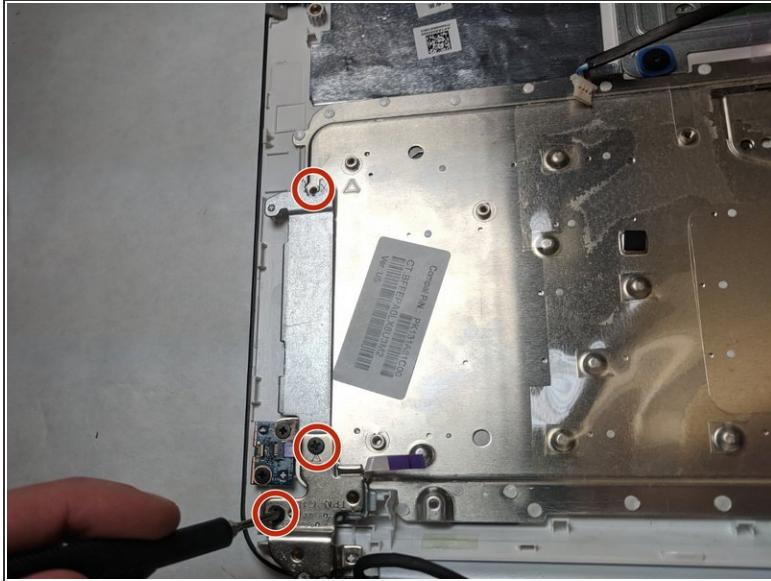

- Remove the three 6.5 mm screws from the second screen hinge and metal arm using the JIS #00 screwdriver.
- Remove the metal bracket.

## Step 13

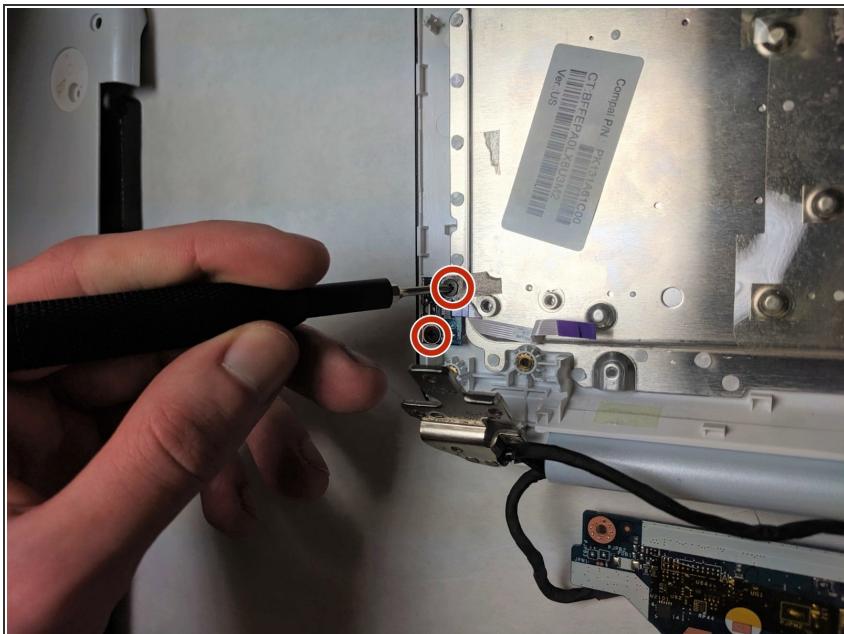



- Remove the two 3.5 mm screws from the small sideboard using the JIS #00 screwdriver.

## Step 14



- Use the blue plastic opening tool to pry up the silver keyboard cover.
- Remove the keyboard cover.

## Step 15

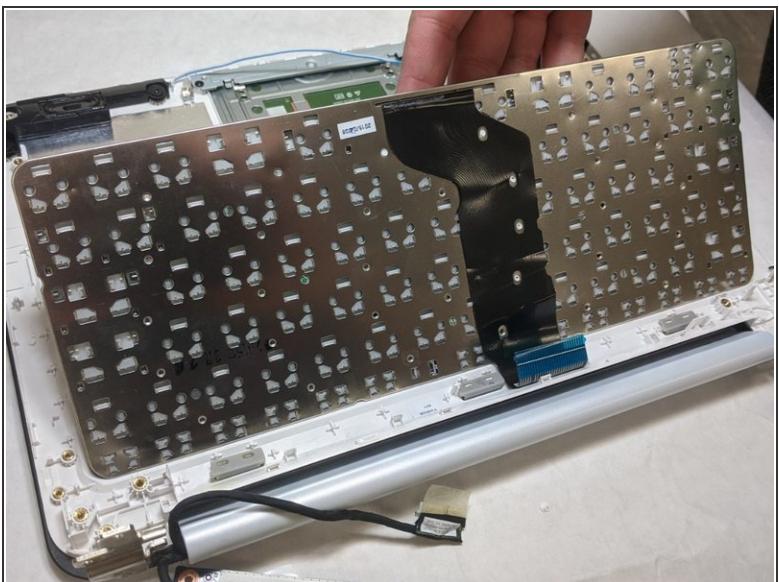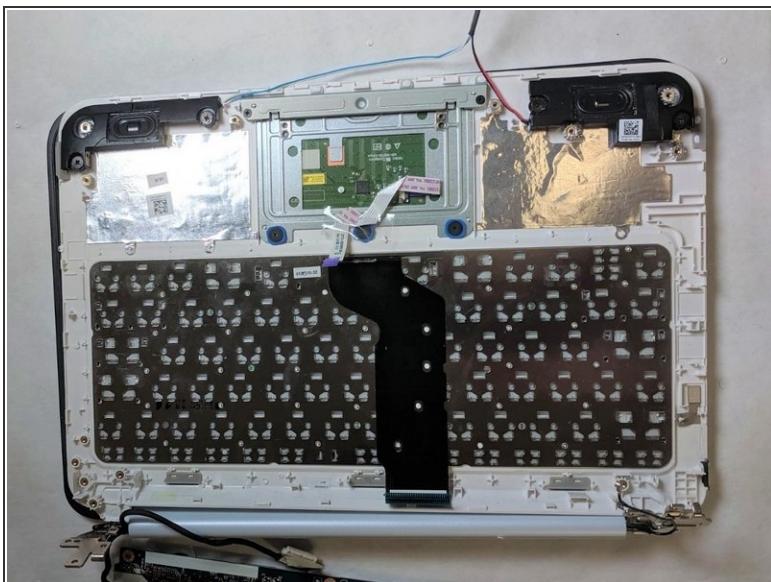

- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.