




HP Stream x360 11-p015wm Motherboard Replacement

This guide will replace the motherboard in your HP Stream x360 11-p015wm.

Written By: Meredith Buganski

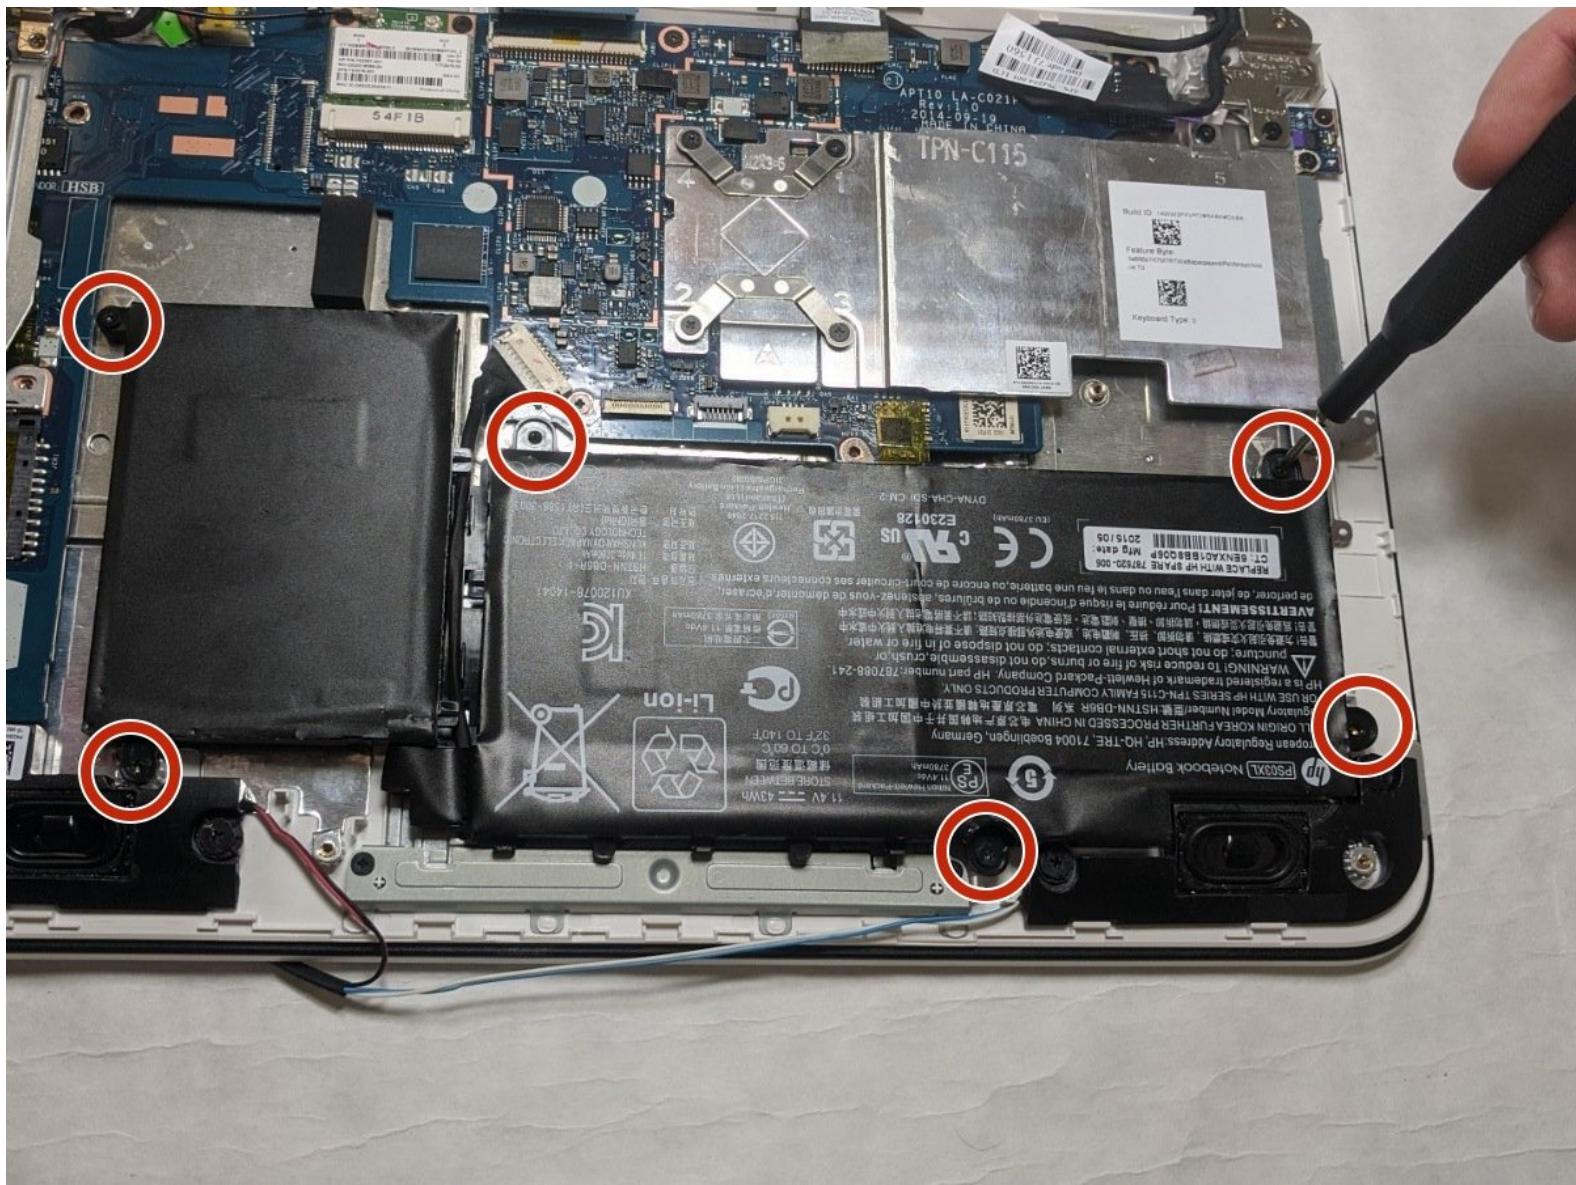


INTRODUCTION

This guide will walk you through the steps of replacing the motherboard in an HP Stream x360 11-p015wm. The motherboard is an important part of the computer hardware and contains multiple main components. Follow along, step-by-step to safely remove your motherboard and then follow the instruction in reverse to reassemble your laptop! Be sure to back-up your files before undergoing this repair.

TOOLS:


- [JIS #1](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [JIS #00 Screwdriver](#) (1)

Step 1 — Back Cover

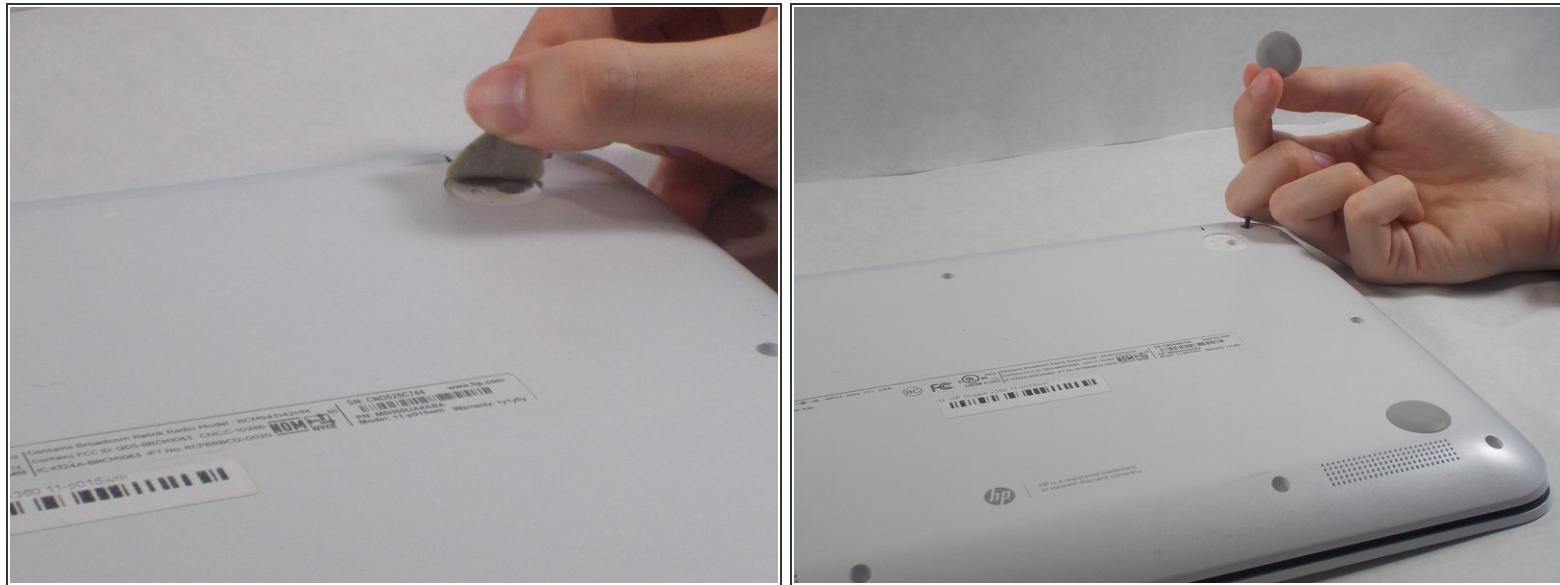

- Orient the laptop to have the back cover facing upwards.
- Remove the four rubber pads located in each corner.

Step 2

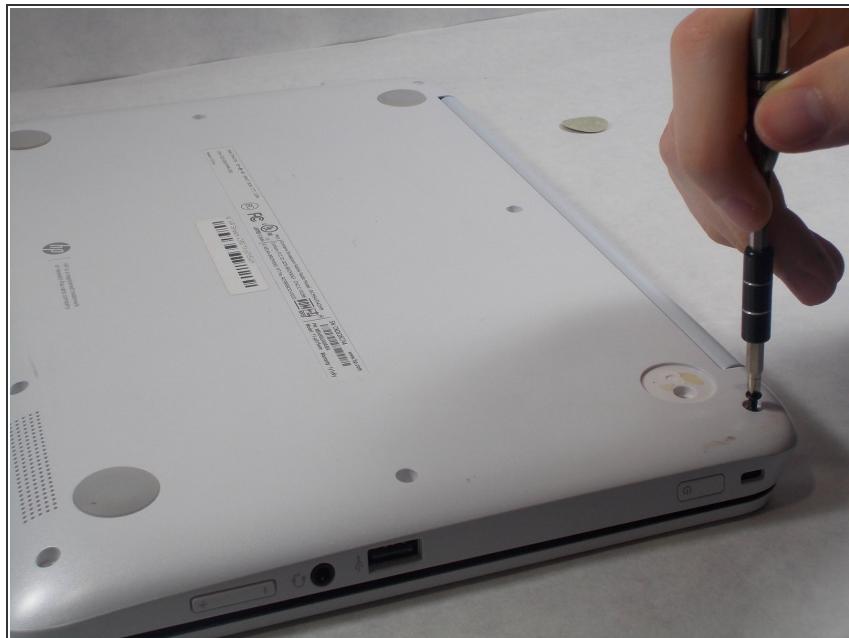

(i) Tool required: [JIS #1 Screwdriver](#)

- Using the screwdriver, remove all of the exposed screws.


Step 3



(i) Tool required: [iFixit opening tool](#)

- Open the laptop and orient the keyboard facing upward.
- Slowly wedge the opening tool into the gap between the keyboard and the back cover.
- After loosening the back cover, close the laptop and orient the back cover facing upward. Open the cover.

Step 4

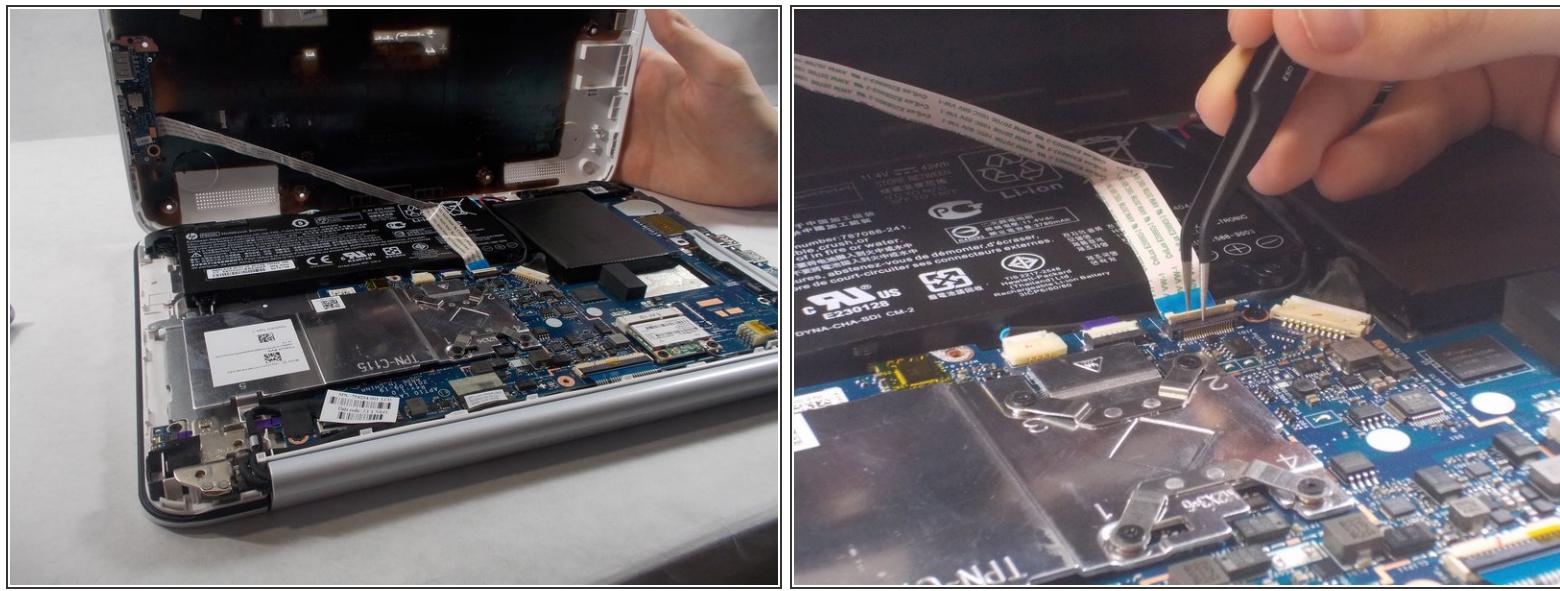

⌚ This is a good time to clean any accumulated dust or debris. Use [this link](#) on tips for cleaning.

ⓘ Tool required: [Tweezers](#)

- Carefully use tweezers to remove the audio jack connector from the motherboard.

Step 5 — Motherboard




- Remove the six 6.5 mm Phillips head screws from the battery using the JIS #00 screwdriver.

Step 6




- Unplug the wire attaching to the battery to the motherboard using the tweezers.
- Remove the battery.

Step 7

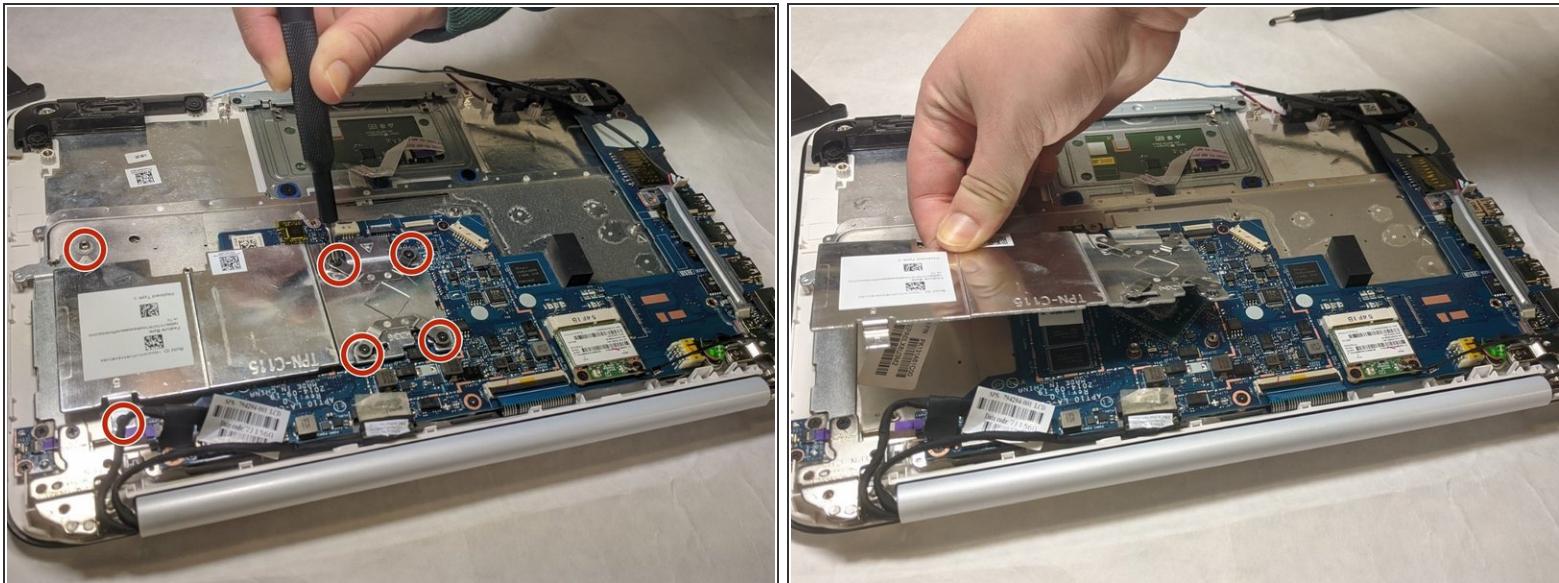


- Remove the six 3.5 mm screws from the silver plate cover with screwdriver JIS #00.
- Remove the silver plate cover.

Step 8

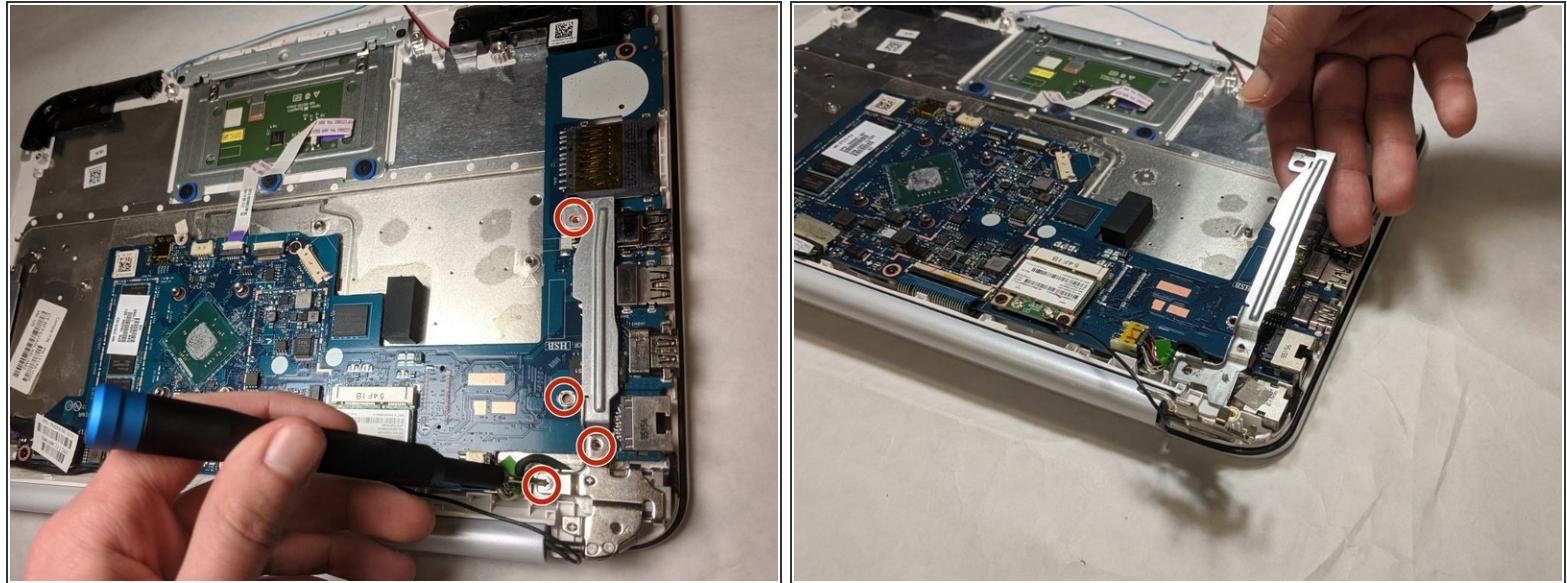



- Remove the four 3.5 mm screws from the metal arm using the JIS #00 screwdriver.

Step 9

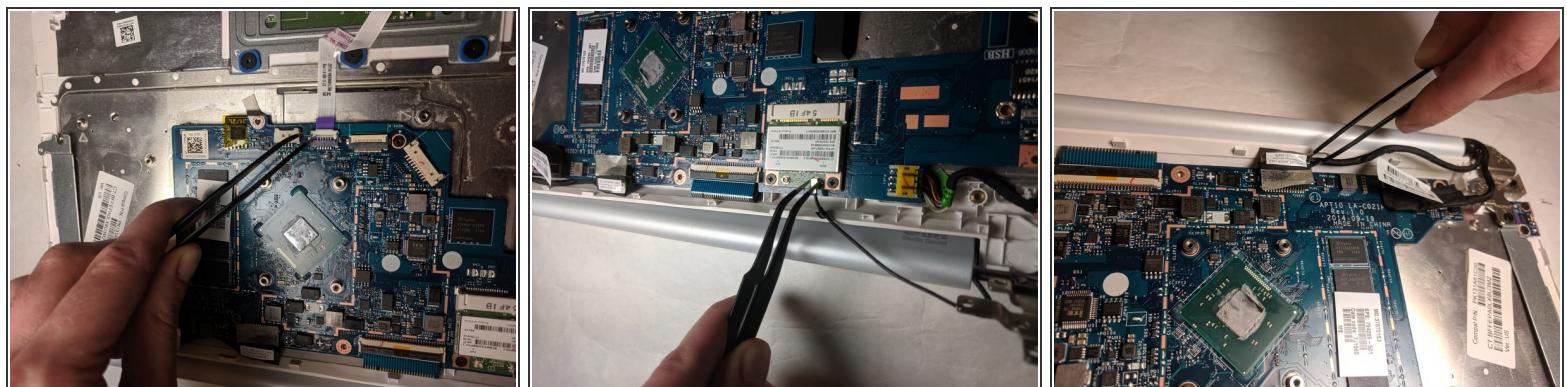


- Detach all remaining wires from the motherboard using the tweezers.

Step 10

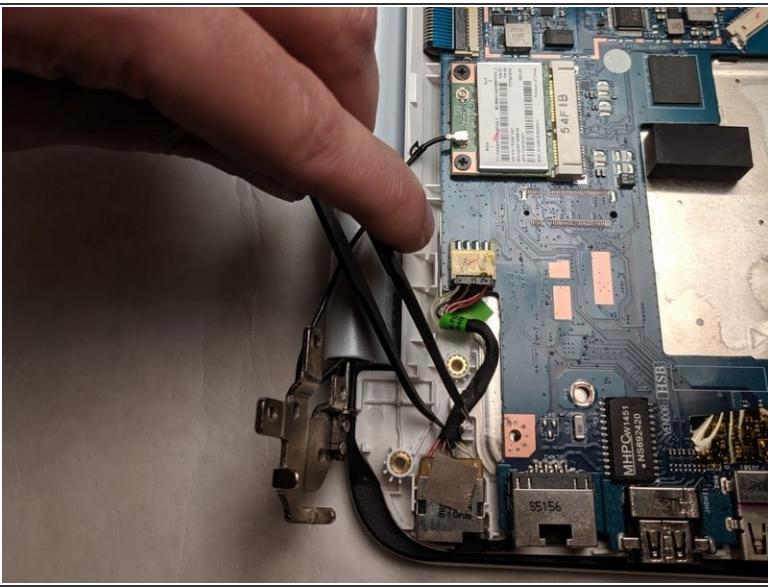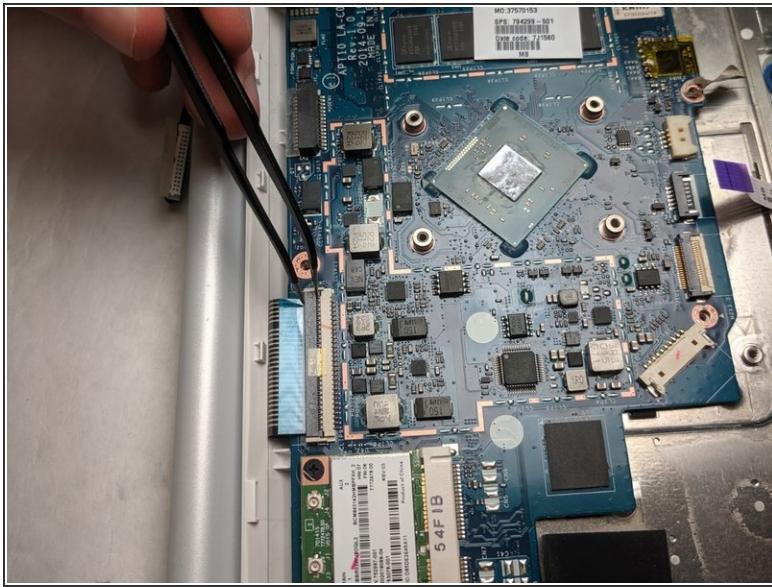

- Detach all remaining wires from the motherboard using the tweezers.

Step 11

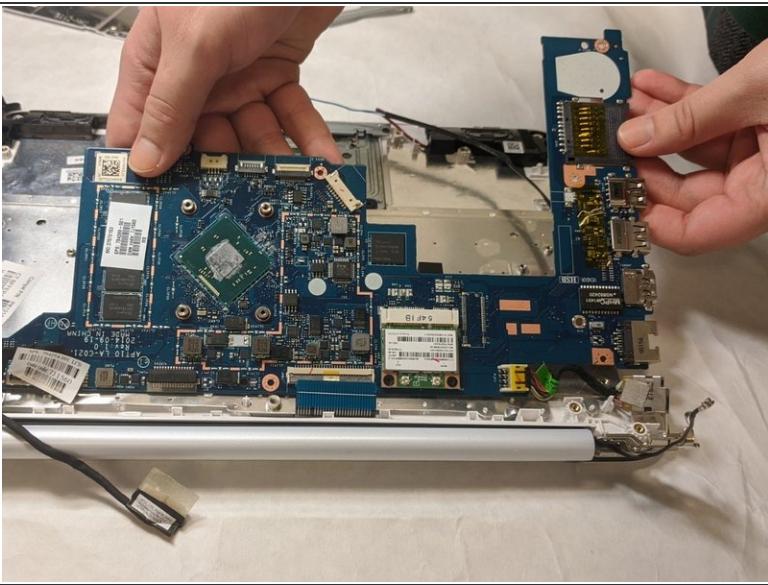

- Remove the six 3.5 mm screws from the motherboard using the JIS #00 screwdriver.
- Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.