


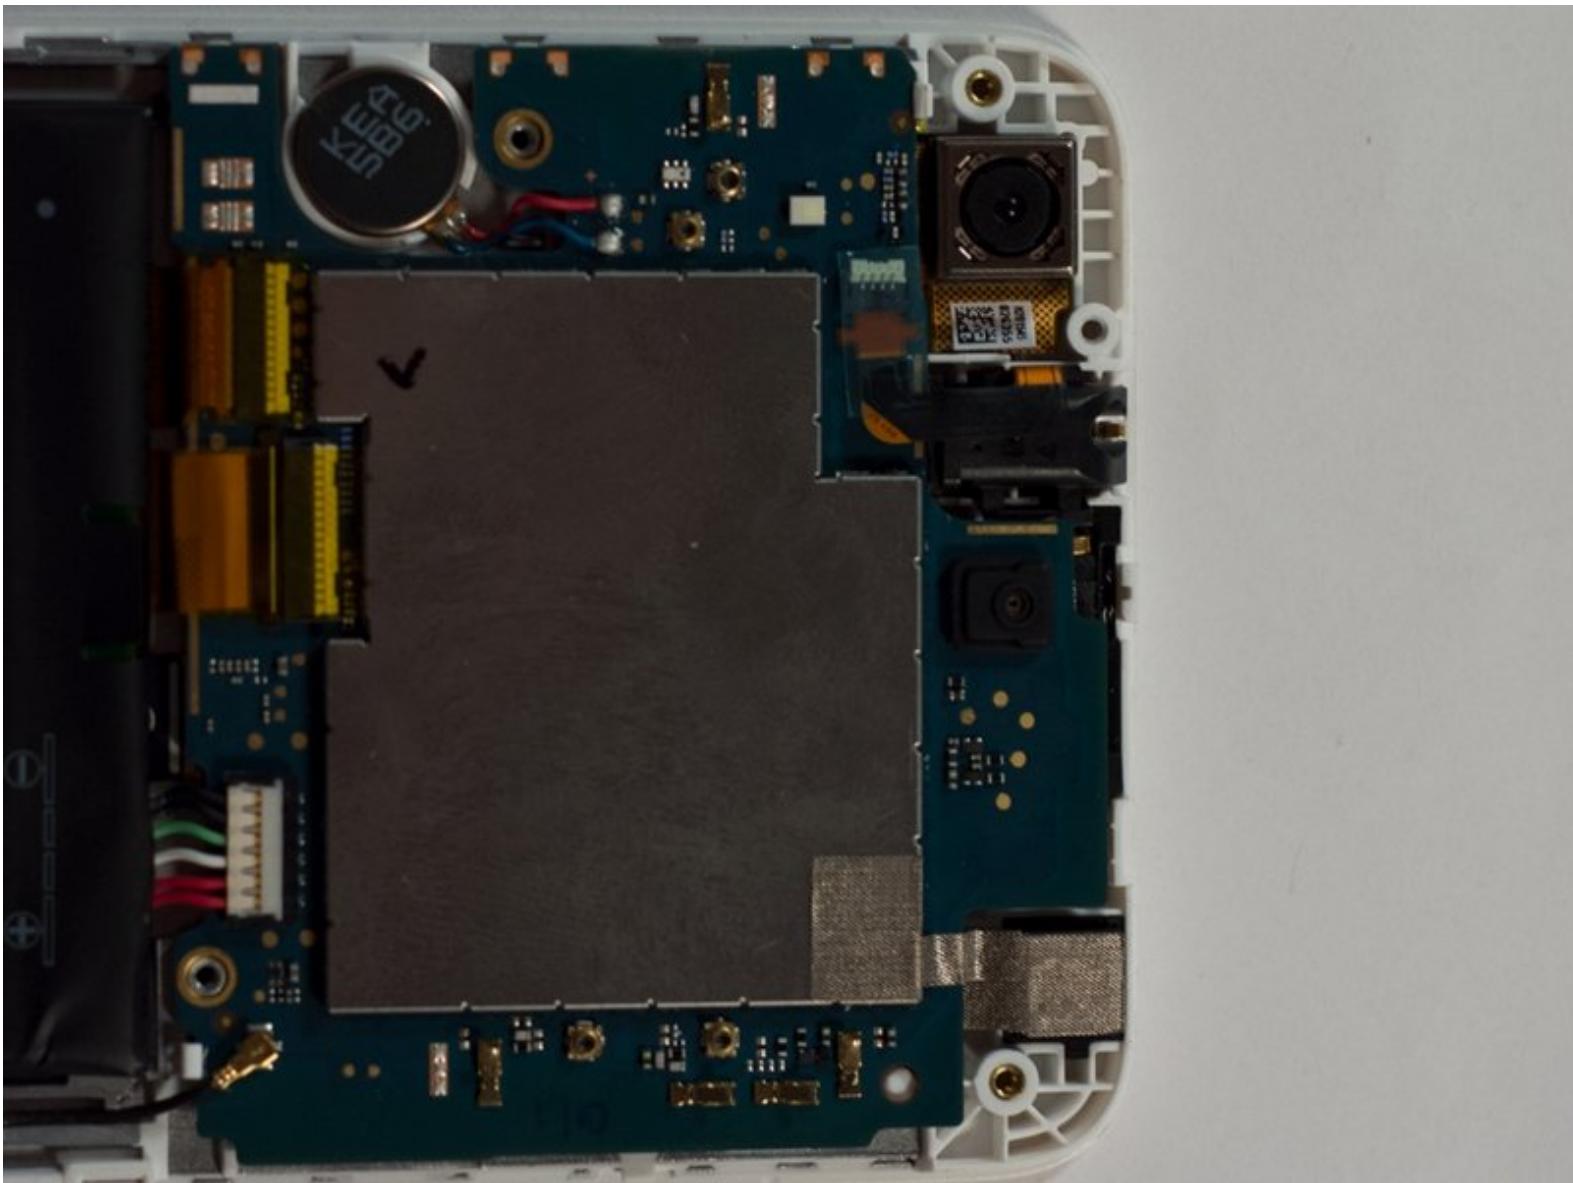

HTC OPM9200 3.5mm Headphone Jack Replacement

Replace the 3.5mm Headphone Jack in your HTC OPM9200.

Written By: Steve Gilland




INTRODUCTION

Not able to listen to your favorite band on Spotify? Get back to rocking out with this guide.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Backplate Removal Prereq

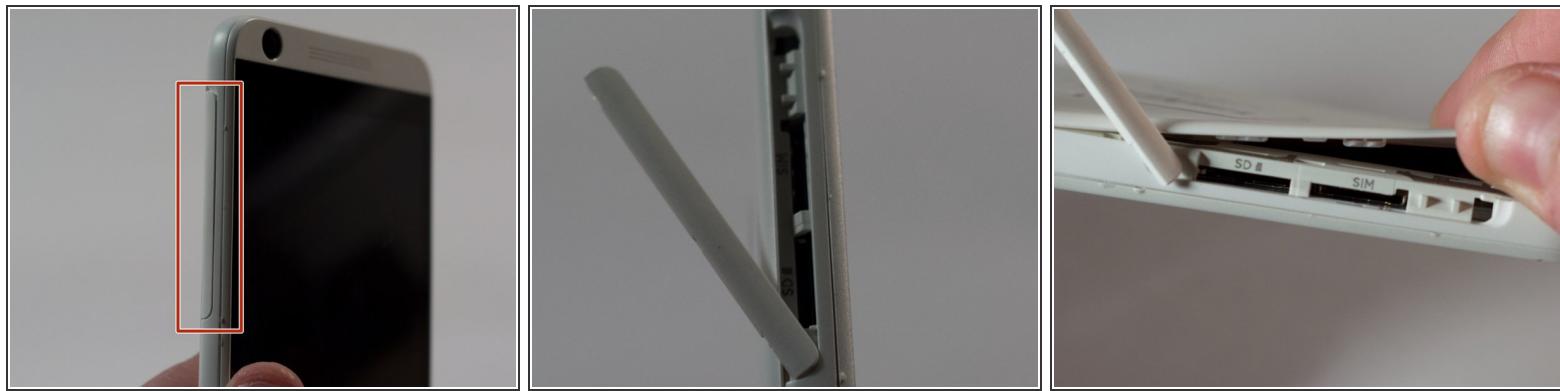

! Before you proceed, discharge your device battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off the device.
- Locate the SD Card/SIM Card cover flap on the left side of the device.
- Upon opening the cover flap you will find slots for SD Card and the SIM Card. Carefully remove these items if your device has them and set them aside.
- Lift on the back cover to begin the removal process. Continue removing the back cover by working along the edge. Once removed set aside the back cover.


Step 2



- Remove the five 3.5mm T4 Torx Screws.
- Remove the two 4.5mm #00 Phillips screws.

i Please be aware of the sticker below the battery. Following this guide past this point may void your device's warranty.

Step 3

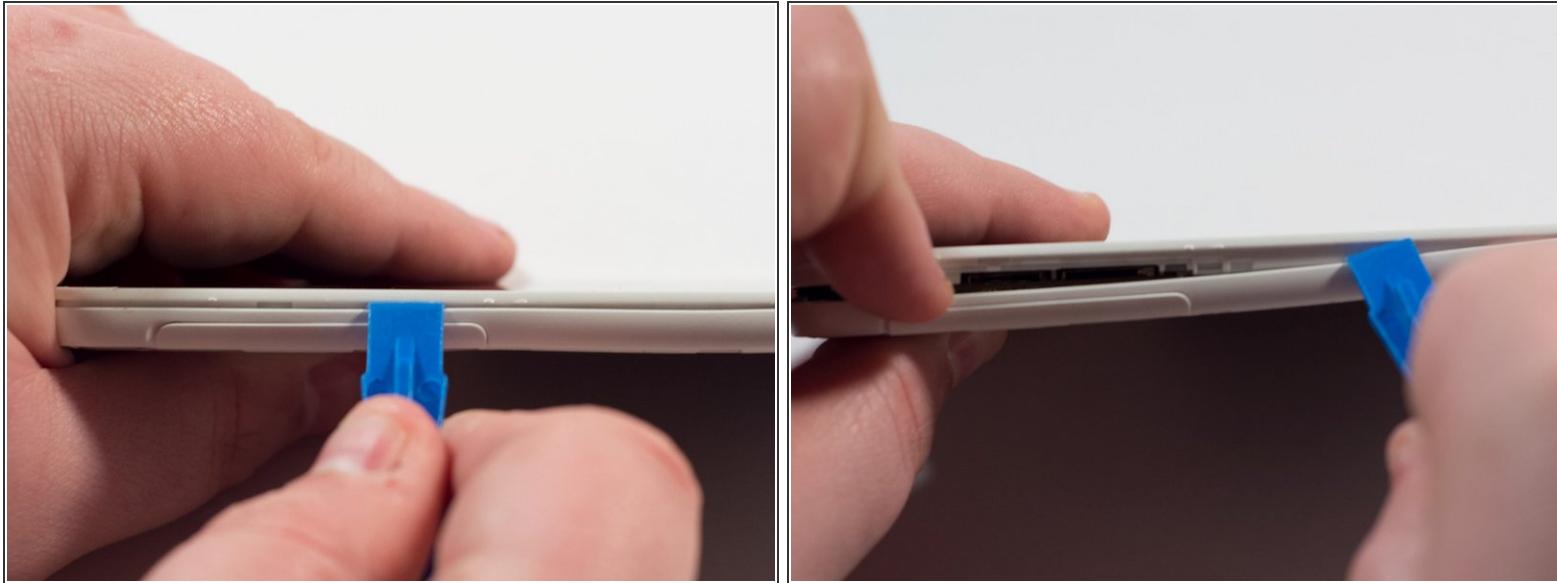


- Place a plastic opening tool along the seam of the front plate and back plate. Run the opening tool along the seam while prying slightly in order to pop the plastic clips away from the front plate.
- Once one or two clips have popped away you may begin to use your free hand to apply additional pressure while continuing to apply prying pressure as well with the opening tool.
- *(i)* Apply constant but controlled pressure while separating the front from the back. Damage may occur if using excessive pressure while separating the plates along the seam.

Step 4




- Continue working your way around the seam between the two parts and eventually you will be able to separate the entirety of the backplate revealing the internals of the device.

Step 5 — 3.5mm Headphone Jack

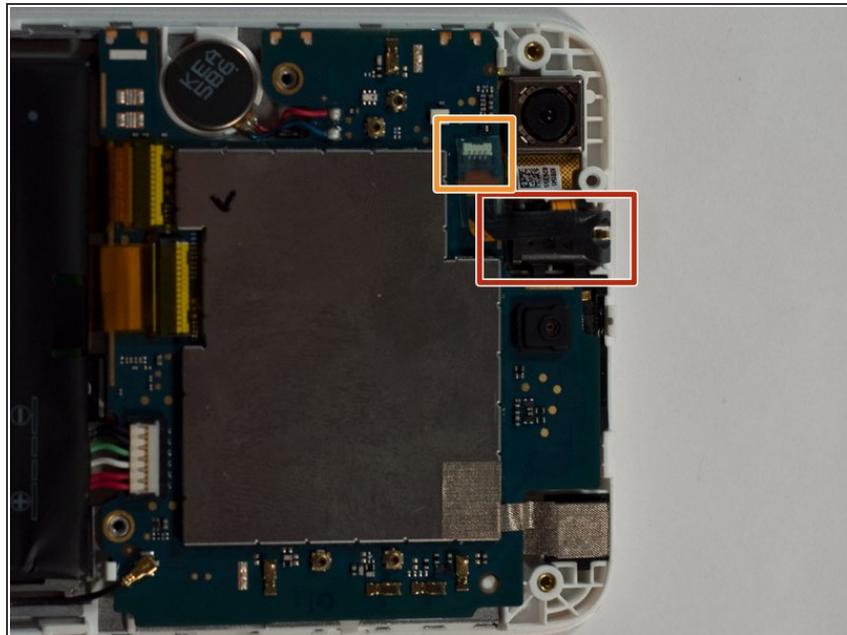

- Note the position of the 3.5mm Headphone Jack.
- And the connector to the main board for the jack.

Step 6

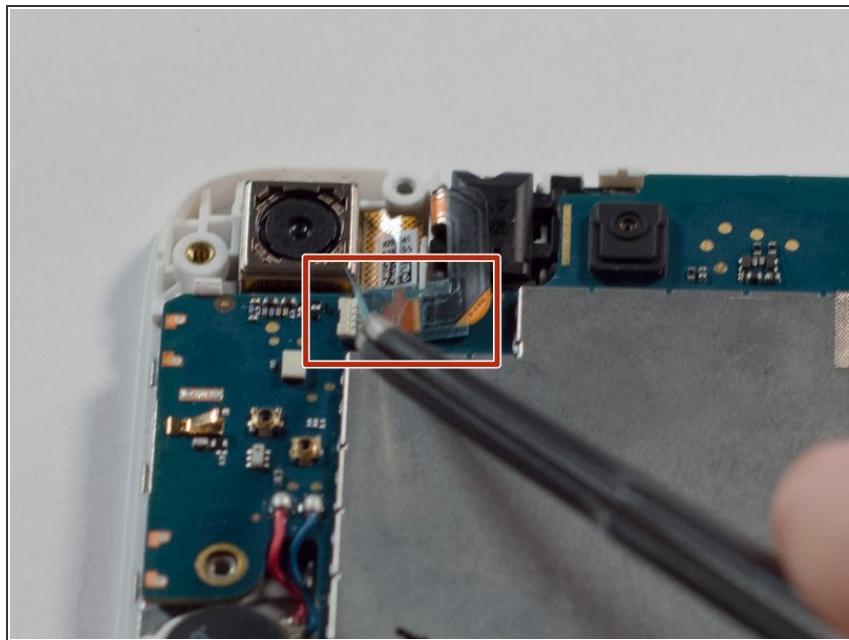

- Grab the edge of the blue tape and pull away from the white connector. Set the tape aside as you will need it for the replacement.
- i* You may find that the ribbon cable will pull away from the connector as you remove the tape. If this is the case continue to remove the tape from the ribbon cable as you will need to use this on the replacement to ensure proper installation.

To reassemble your device, follow these instructions in reverse order.