


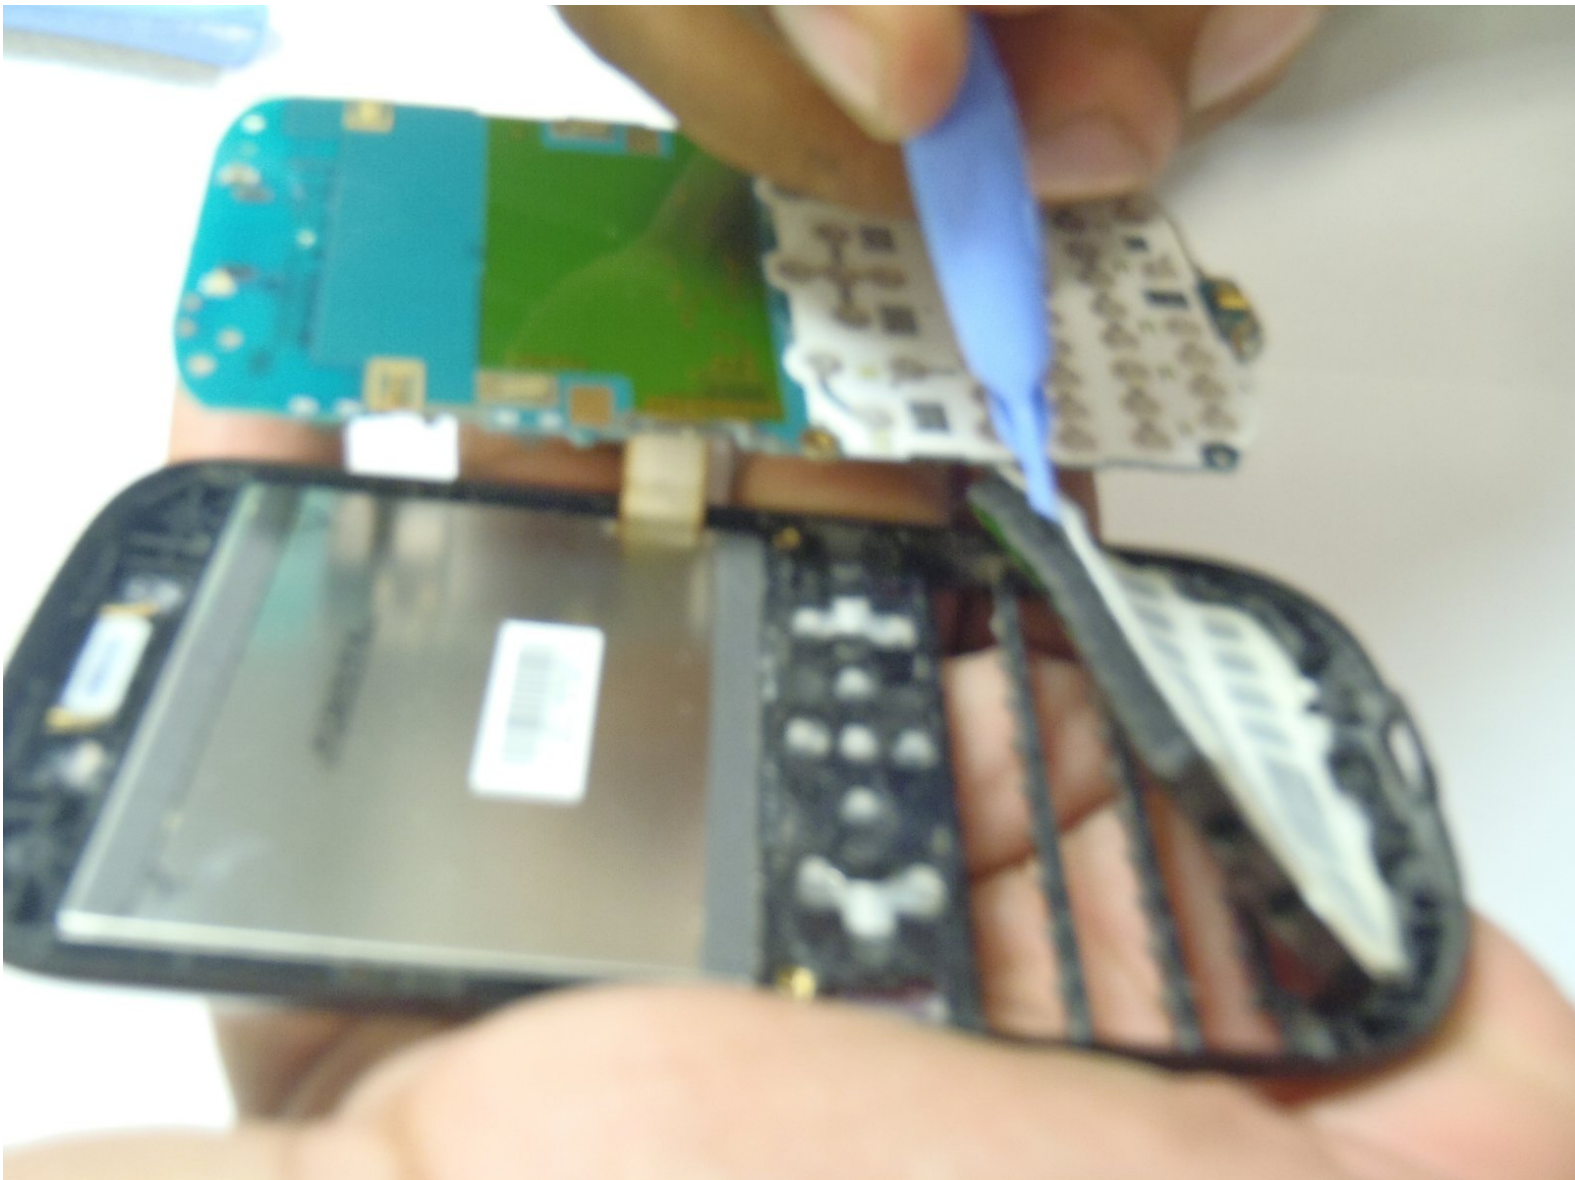

HTC Ozone Keyboard Replacement

Remove the keyboard from the phone.

Written By: Marco Jokada





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Battery Cover



- Flip the phone over to have the rear cover facing up.
- The camera lens should be towards the top of the phone.

Step 2



- Slide the cover up, towards the top of phone, to unlock the battery cover.
- Lift the cover off phone and remove it.

Step 3 — Battery



- Use your finger to push the top of the battery downwards and lift the battery out of the phone.

Step 4 — Frame




- Remove the six Torx #5 screws that are securing the rear frame.

Step 5




- Pry the frame open, releasing the eight plastic tabs around the edge of the frame, using the plastic opening tool.
- ❗ A plastic card can be used instead of the plastic opening tool.

Step 6 — Motherboard

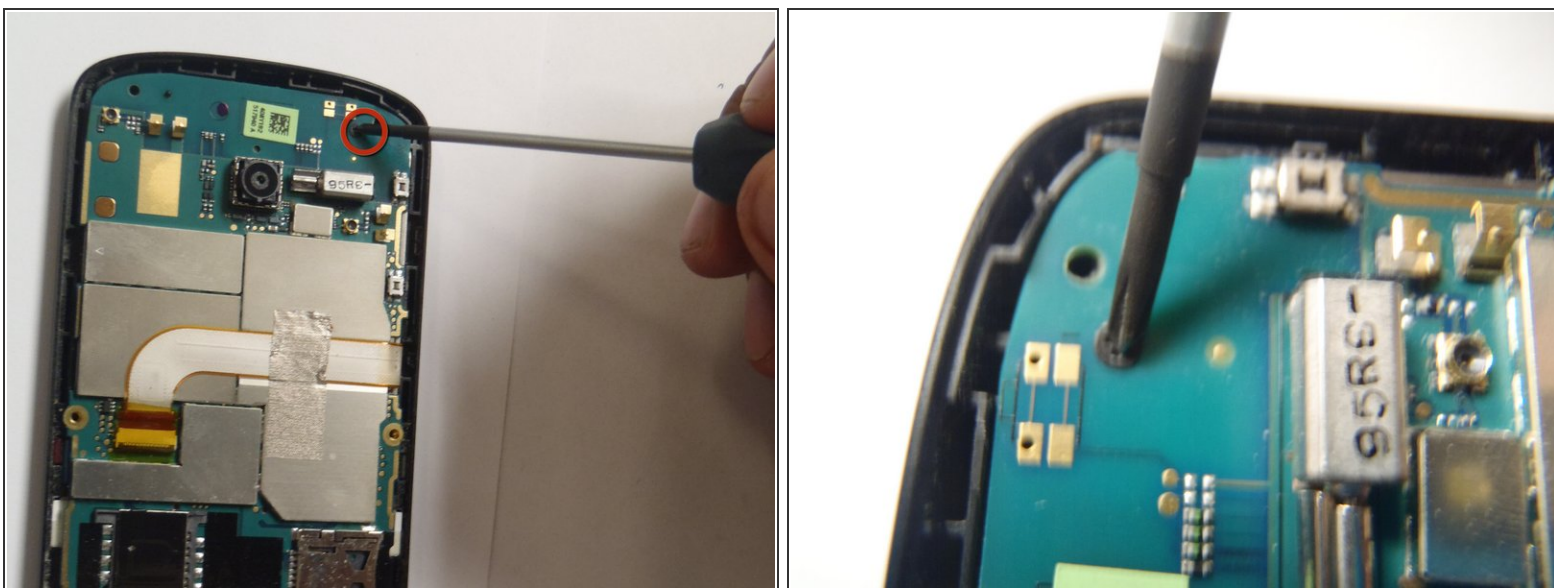

- Remove the single Phillips #0 screw that is securing the motherboard to the front case of the phone.

Step 7

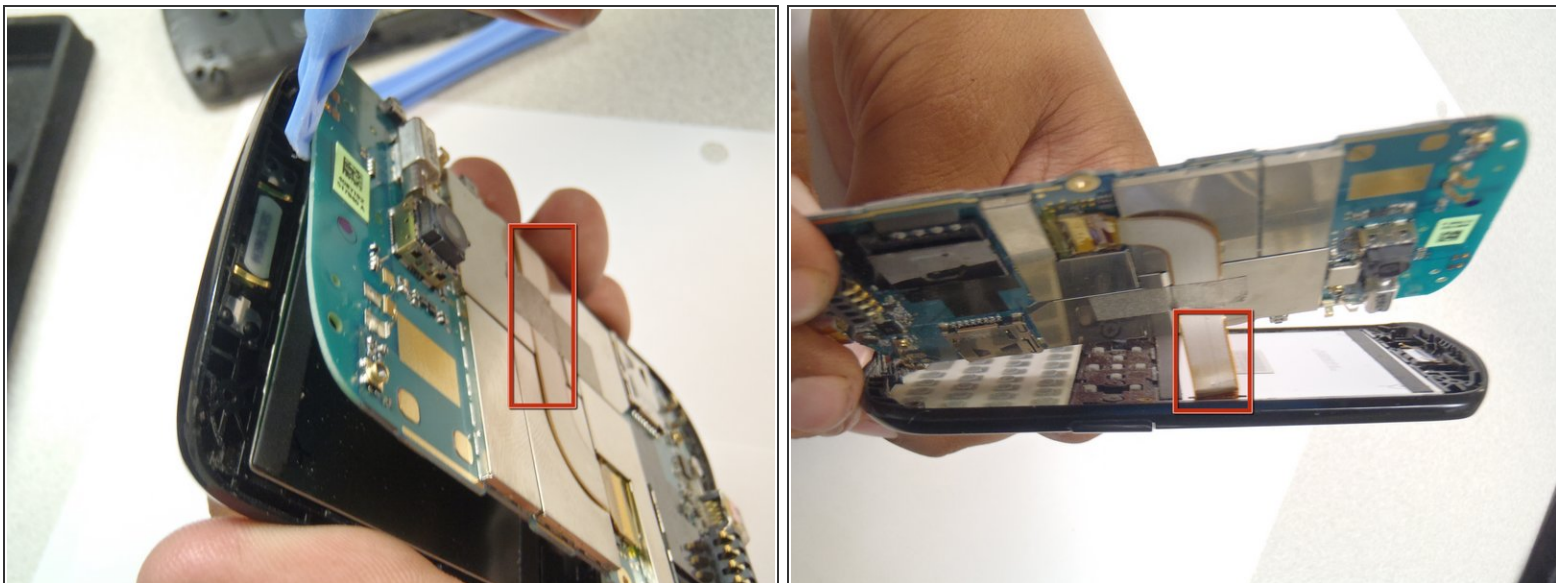

- Pry the motherboard away from the front of the plastic case using a plastic opening tool.

⚠ Be careful not to break the ribbon cable when prying away the motherboard.



Step 8



- Remove the plastic cover from the LCD display and the motherboard.


⚠ The Motherboard and the LCD are still attached together.

Step 9 — LCD Display

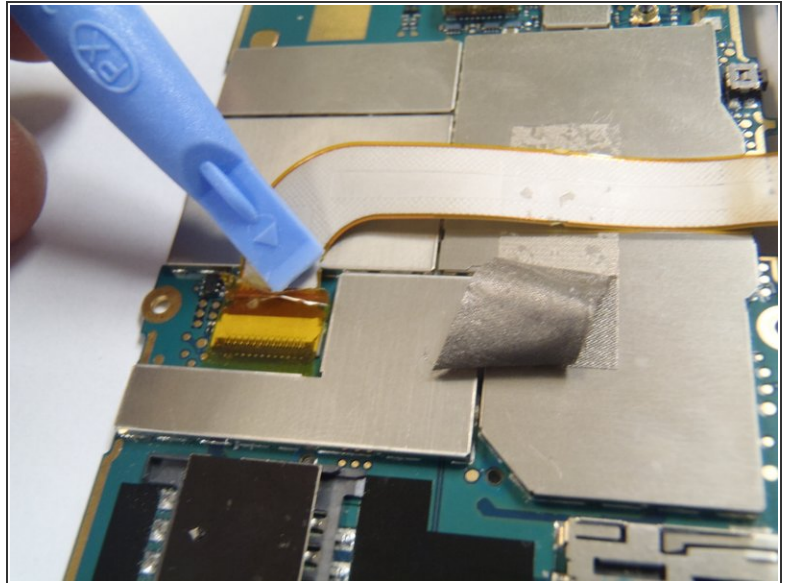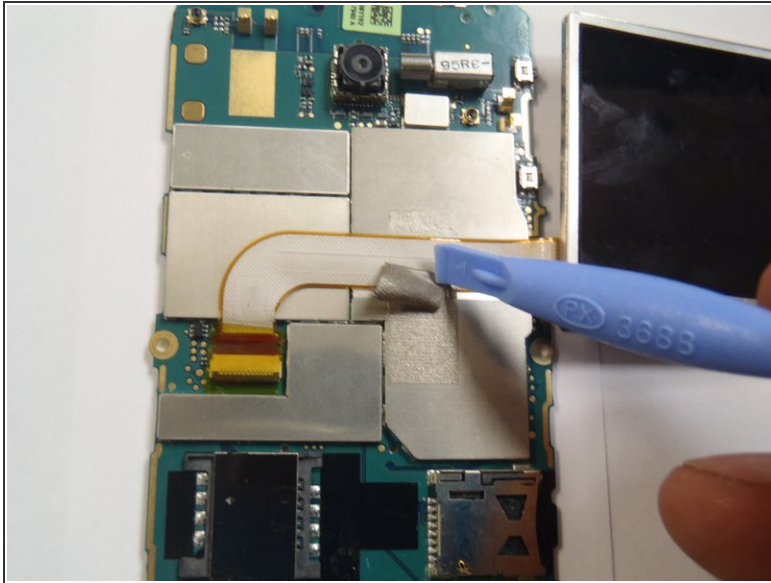


- Remove the gray tape securing the ribbon cable.

Step 10

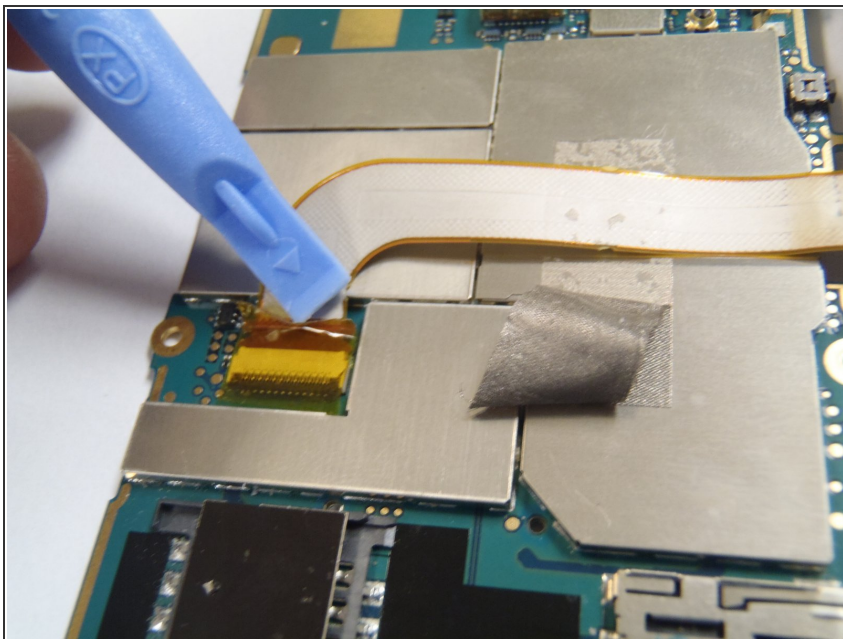


- Remove the yellow tape securing the connector lock.

Step 11

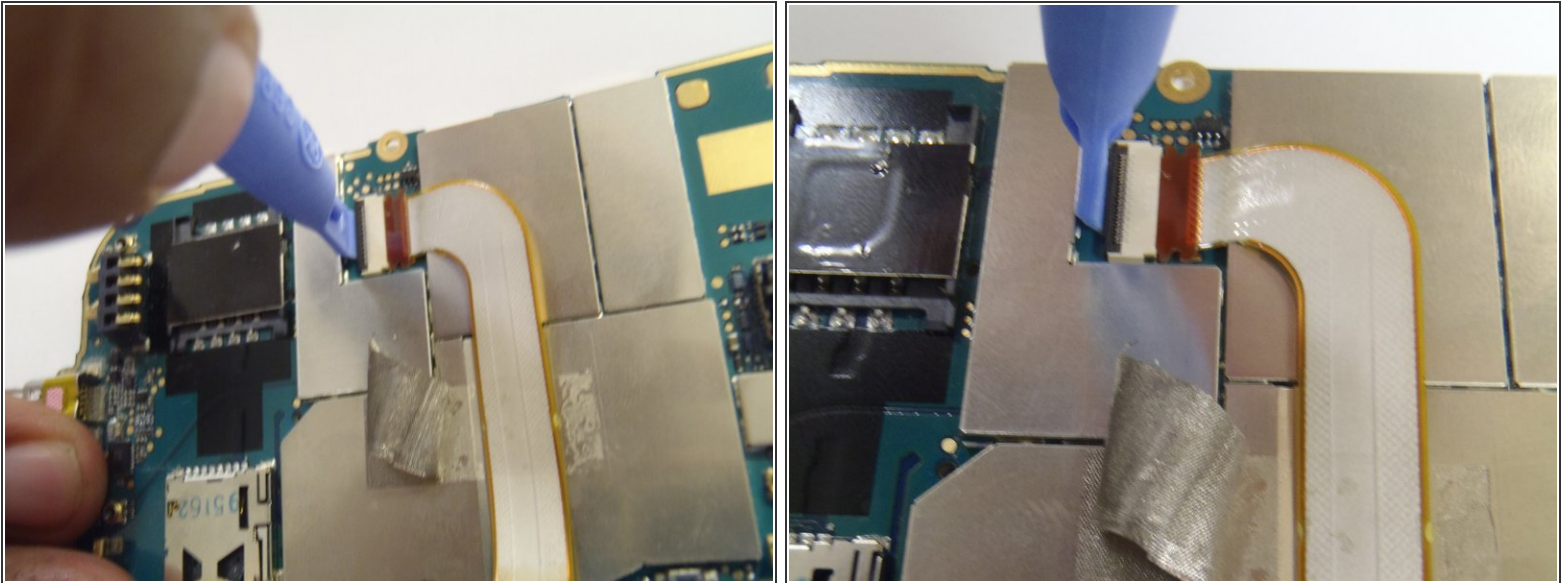


- Carefully lift the black lock to release the ribbon cable, using the plastic opening tool.

Step 12

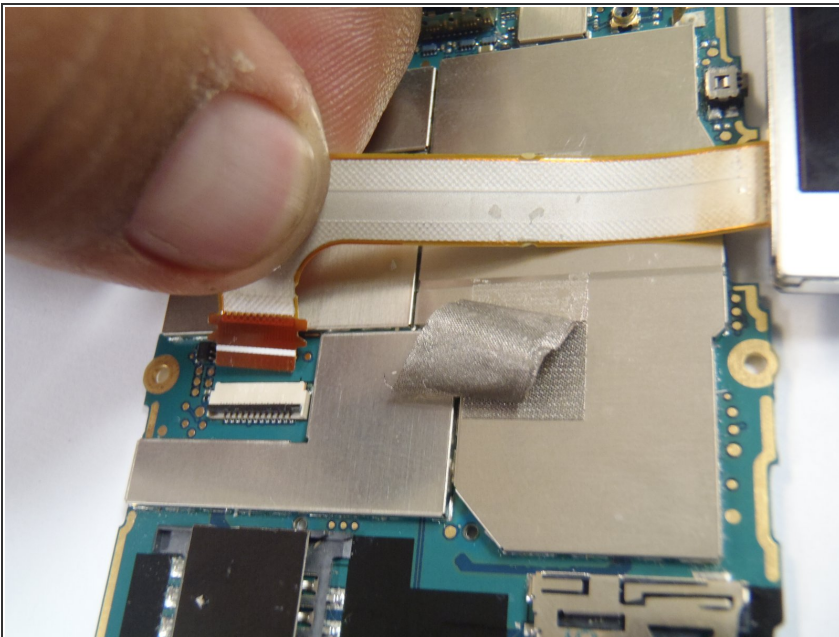


- Pull the ribbon cable upwards, disconnecting it from the Motherboard.

Step 13

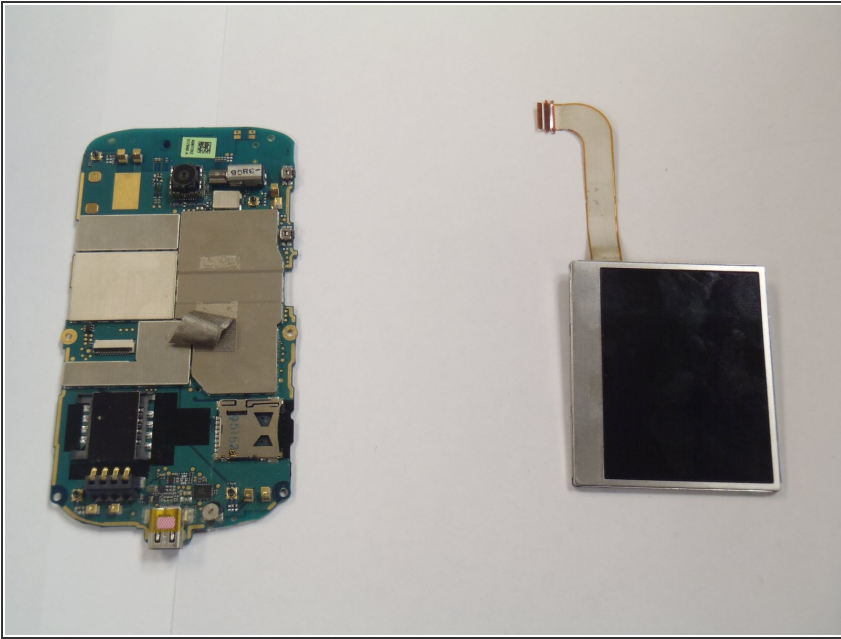



- Lift the Motherboard away from the LCD display.

Step 14 — Keyboard

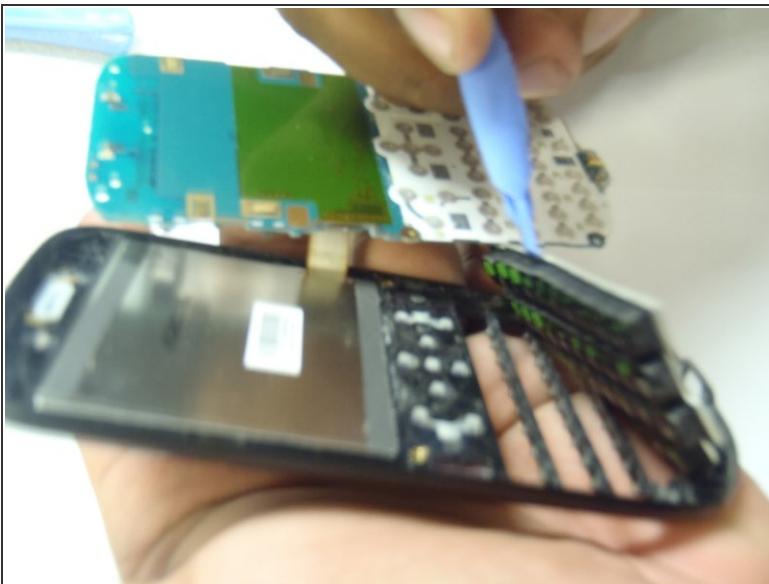


- Lift off main keyboard from front plastic case using plastic opening tool.

Step 15

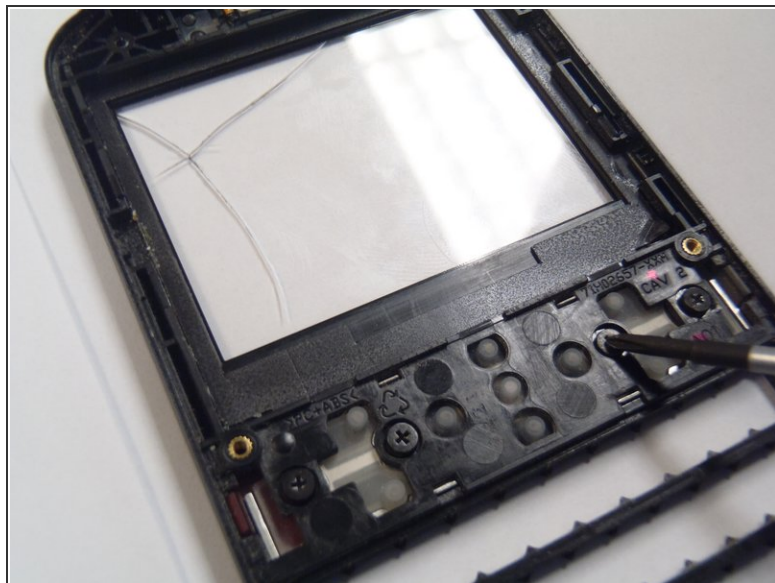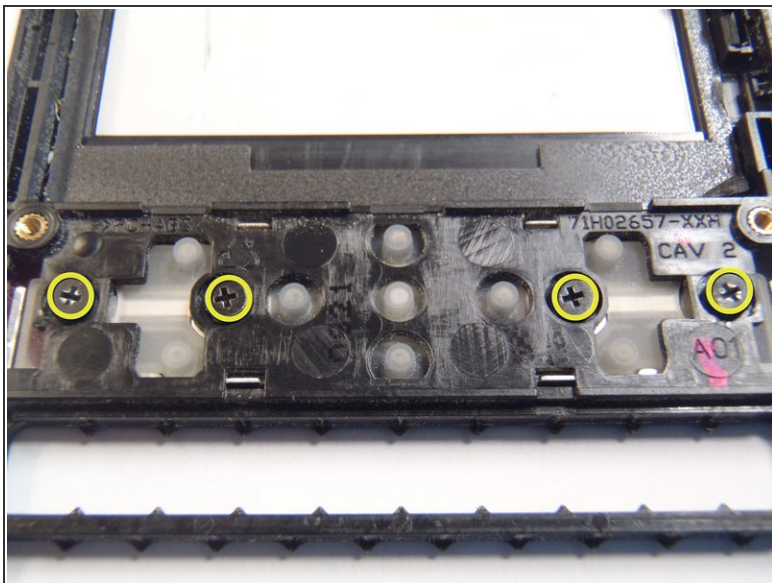

- Remove four Phillips #00 screws securing function keys.

Step 16

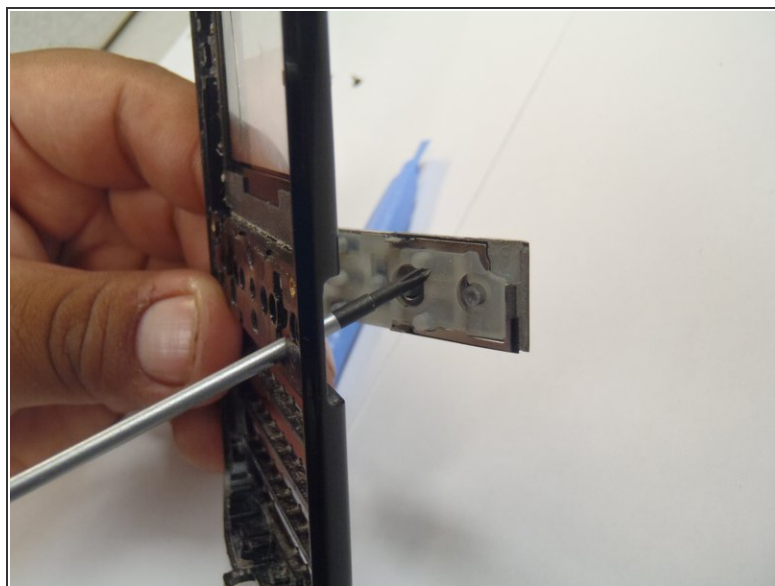

- Pop keys out by pushing keys from back of the phone.

To reassemble your device, follow these instructions in reverse order.