




Handset Replacement

This guide will walk you through handset disassembly.

Written By: Caleb Thomas

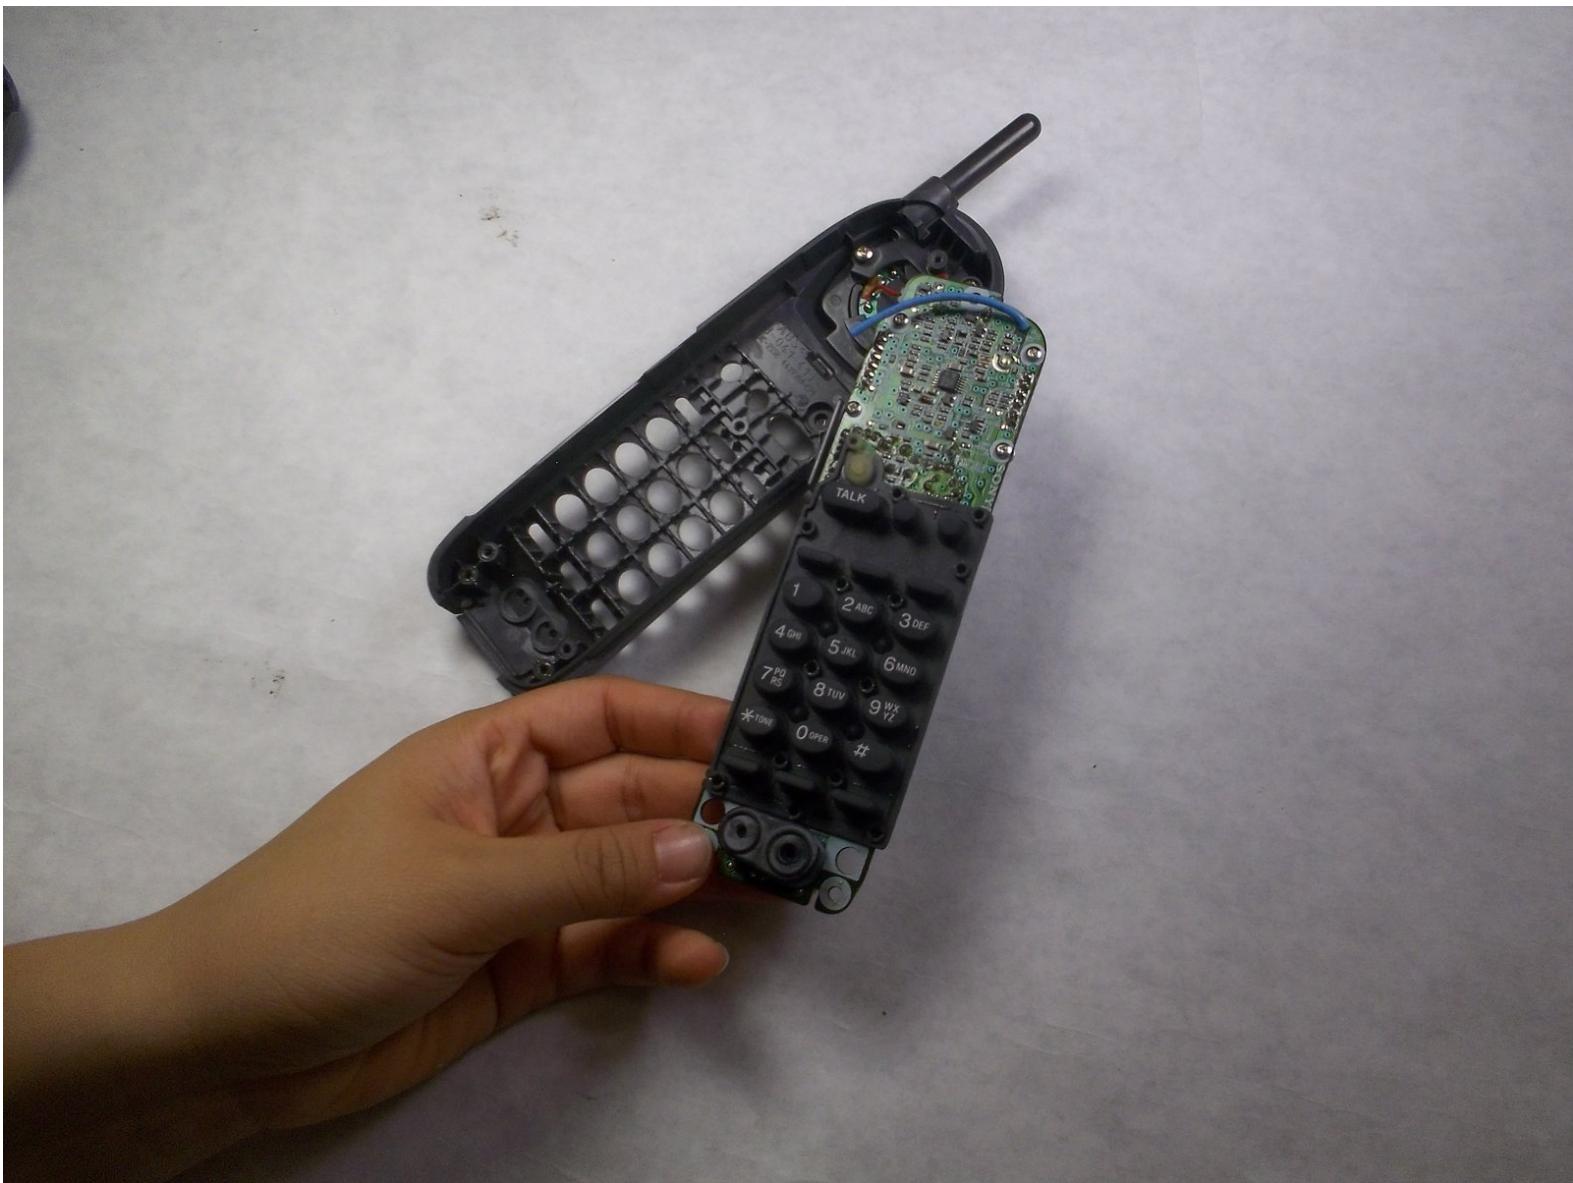

INTRODUCTION

Prerequisite Only


TOOLS:

- Metal Spudger Set (1)
- Phillips #0 Screwdriver (1)

PARTS:

- BP-T18 (1)
- Two 11mm Philips 0 screws (1)
- One 7mm Philips 0 screw (1)

Step 1 — Battery

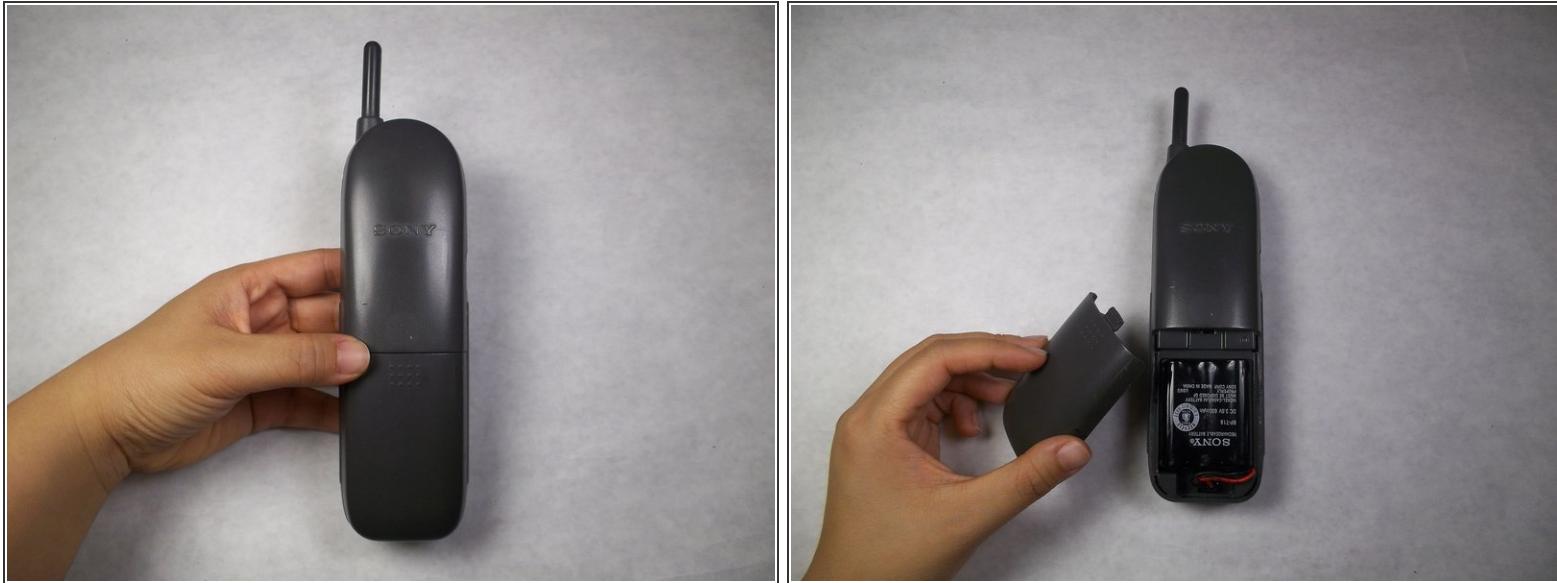

- Remove the battery cover by placing your thumb on the cover and gently push towards the base of the phone.

Step 2



- Remove the rechargeable battery pack (BP-T18) by pressing down on the power cable connector and pulling at the same time.

Step 3 — Handset



- After removing the BP-T18 battery pack, you will see two 11mm Phillips #0 screws located at the bottom of the phone. Remove both screws with a screwdriver.



 Product is made of brittle plastic.

Step 4



- Locate an easy point of access for a spudger, and then slowly insert it into the gap and pry it open.
- The opening should become bigger if you exert force at a 30 degrees angle.
- Increase the degree of slant until the back cover is completely removed.

Step 5

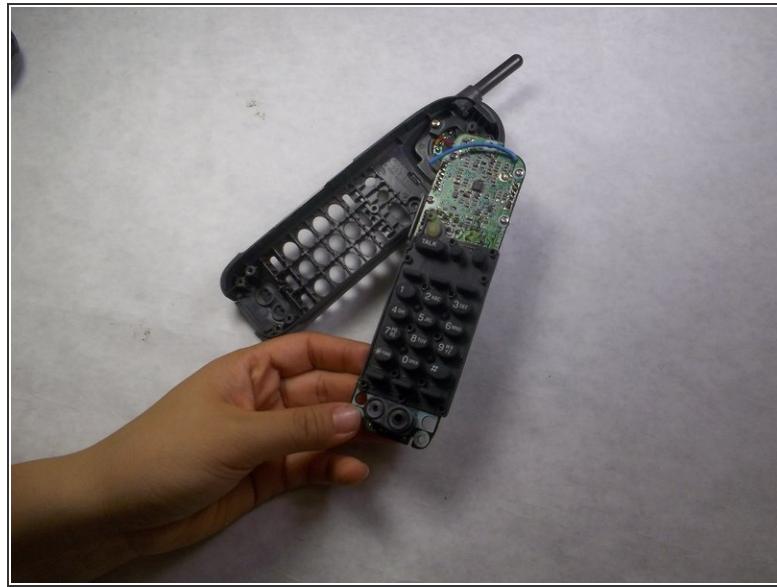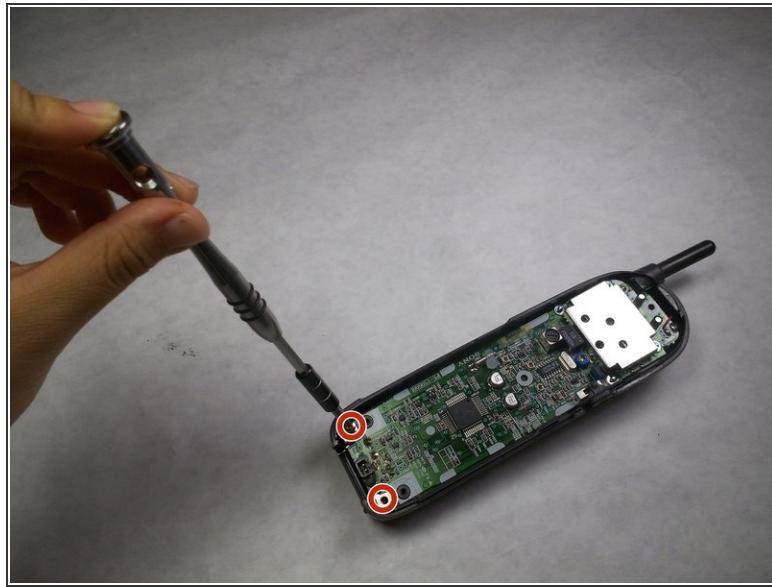

- After removing the back cover, you will see 3 screws: one 7mm Phillips #0 screw at the top and two 11mm Phillips #0 screws at the bottom.
- Use a screwdriver to remove all 3 screws.

To reassemble your device, follow these instructions in reverse order.