



How to Repair Wall Texture

In this guide I will explain how to repair a textured wall.

Written By: Jeffrey Dean



INTRODUCTION

In this guide I will be providing the information on how to repair a textured wall. For this repair I am mainly focusing on the repairing wall texture but in most cases where there is damages wall texture there is a damaged wall. So, I will be showing how to prepare for the fixing of the wall texture as well.

TOOLS:

- [Precision Utility Knife \(1\)](#)
- [Dap Drydex Spackling \(1\)](#)
- [Aerosol Wall Texture \(1\)](#)
- [Drywall Mesh Tape \(1\)](#)
- [Putty knife \(1\)](#)

Step 1 — How to Repair Wall Texture



- First, Inspect and clean the location that needs repair.

Step 2



- Clean up the edges with a box cutter.

Step 3



- Apply a single sided mesh tape used for patch work to increase the strength of the material.

Step 4



- Apply spackling paste over the mesh tape to fill the hole.

Step 5



- Let the spackling paste sit and dry.

(i) The quick dry spackling paste will change colors from a pink to a white indicating that the paste has dried.

Step 6




- Sand the rough edges of the spackling paste to smooth the surfaces until it is flush with the wall.

Step 7



- Spray aerosol wall texture over the leveled patch in a quick fluid motion from one side to another.

Step 8

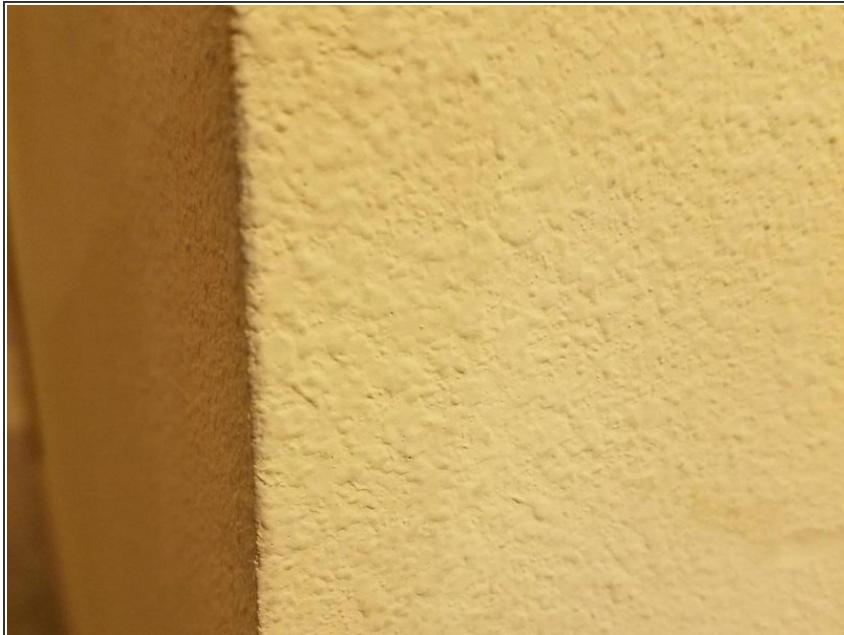

- Let the texture dry overnight.
- Paint the wall with your desired color to complete the wall texturing repair.

To reassemble your device, follow these instructions in reverse order.