



Huawei Ascend P6-U06 Back Panel Replacement

Learn how to replace the back panel on your Huawei Ascend P6-U06.

Written By: Alison Jones



INTRODUCTION


Follow this guide to replace the back panel on your Huawei Ascend P6-U06.

Step 1 — Back Panel



- Firmly push down on the black plastic covering at the bottom of the phone, and pull down.
- ⓘ You may need a sharp thin object to get underneath the plastic.

Step 2

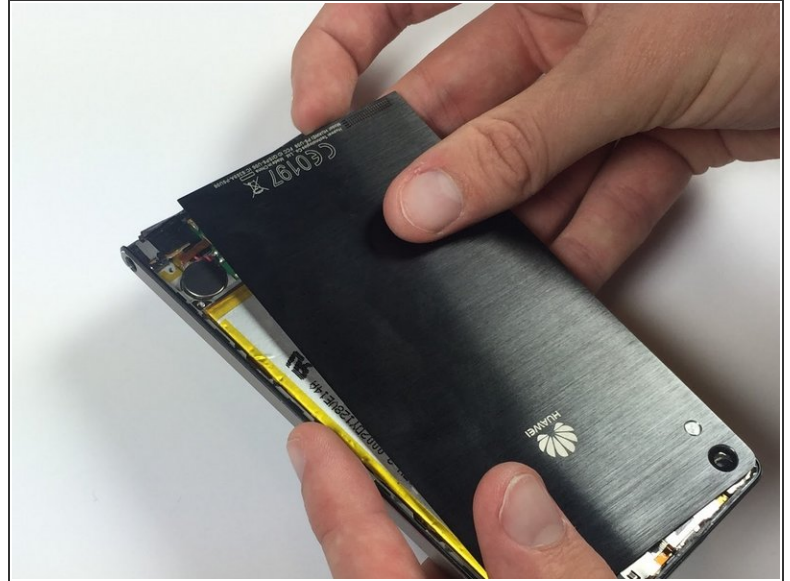

- Rotate the phone 180 degrees so that the bottom of the phone is now facing up.
- Firmly push up on the back panel with your thumbs.
- Lift up the back panel from the top right corner and gently pull it away from the phone.

To reassemble your device, follow these instructions in reverse order.