



Huawei H881C Screen Replacement

Replacement

This guide will give you step-by-step pictures to replace the screen on the Huawei H881C.

Written By: GadgetERService



INTRODUCTION

In this guide, we're going to show you how to replace the broken screen/digitizer on your Huawei H881C

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Cooktop \(1\)](#)
- [Heat Gun \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Screen Replacement




- This is where we begin! At the bottom of the phone, pull the plastic back cover off.
- Ahh, the battery. Simply pull the battery up and out of the housing.

Step 2



- 8x T5 torx screws are what we need to remove next. There is one hiding below a black sticker. **WARNING: This will void your warranty!**

Step 3

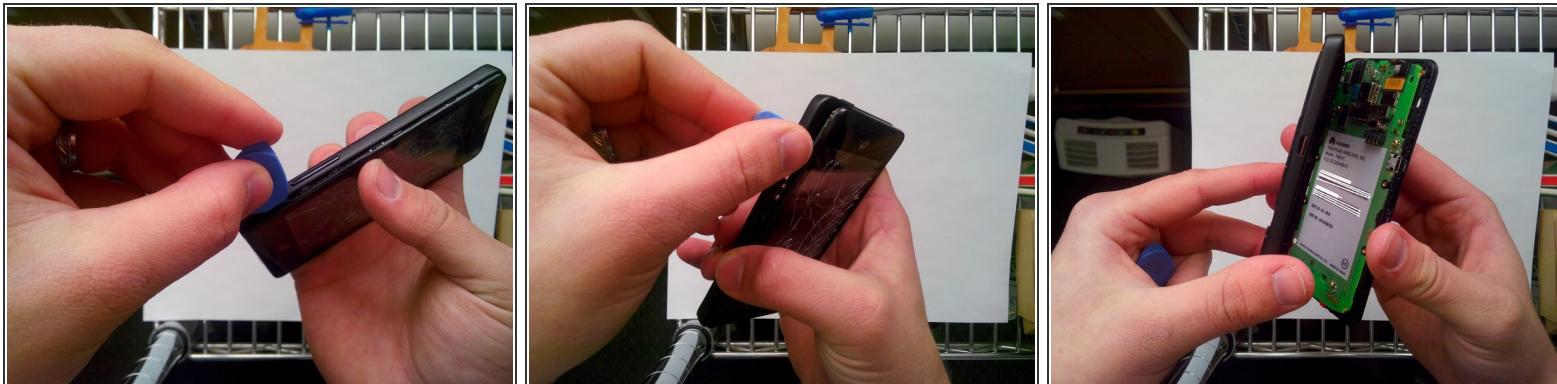


- Now that the screws are removed, grab a spudger tool or a thick guitar pick. Start at the volume rocker and work your way around the phone by carefully pulling back the frame.

Step 4




- We're inside! At this step, there are 3 ribbon cables we need to disconnect to continue. Carefully pull these ribbon connections up.

Step 5

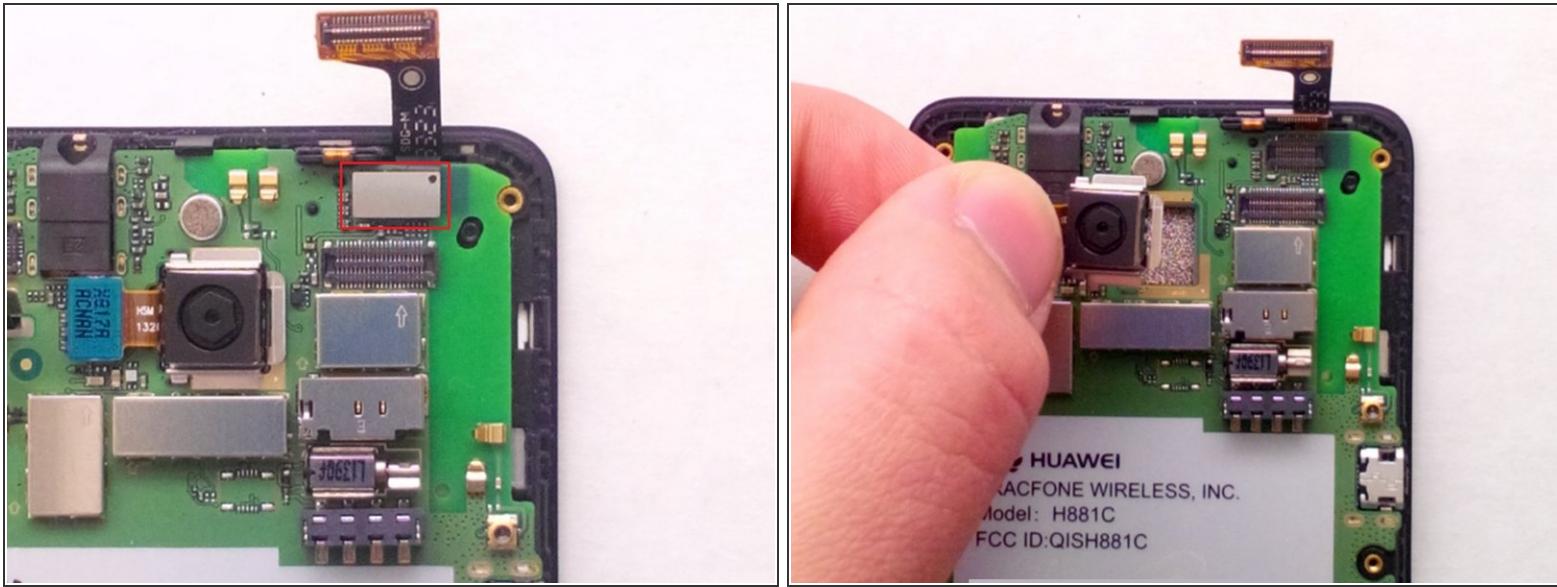

- Under the screen/digitizer connection, there is one more cable. Carefully disconnect this one was well.
- Remove the camera by pulling straight up.

Step 6

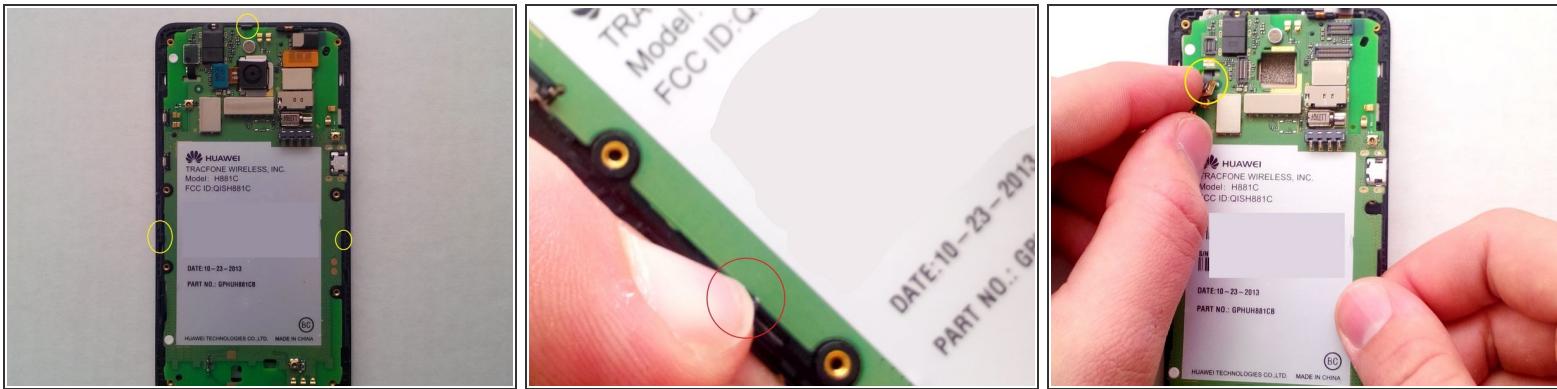

- Don't mind the ugly "circles". What is circled is the clips you need to pull back to remove the motherboard from the frame.
- Your fingernail will work perfect for this.
- Let's remove the motherboard. With your right hand, slowly pull back the motherboard. With your left hand, guide the ribbon cable through the hole to avoid damaging it.

This document was generated on 2019-09-20 11:03:29 AM (MST).

Step 7



- Now that the motherboard is out, this is the screen/digitizer/LCD assembly. From here, we need to only remove the digitizer.
- We recommend using a heat gun or a hot plate if you have one. If you don't have either, use a blow dryer!

Step 8



- After its hot enough, use a thick guitar pick to peel back the broken screen from the frame. Be careful, it may be hot and glass could get everywhere.
- Once you've removed the old screen/digitizer, apply new adhesive on the frame and put the new part on. Make sure that you get the old adhesive peeled off. We recommend heating the adhesive before applying the new screen for better bonding.
- That's it! Now, follow the steps backwards to reassemble your device. Congrats! You've replaced the screen!

To reassemble your device, follow these instructions in reverse order.