


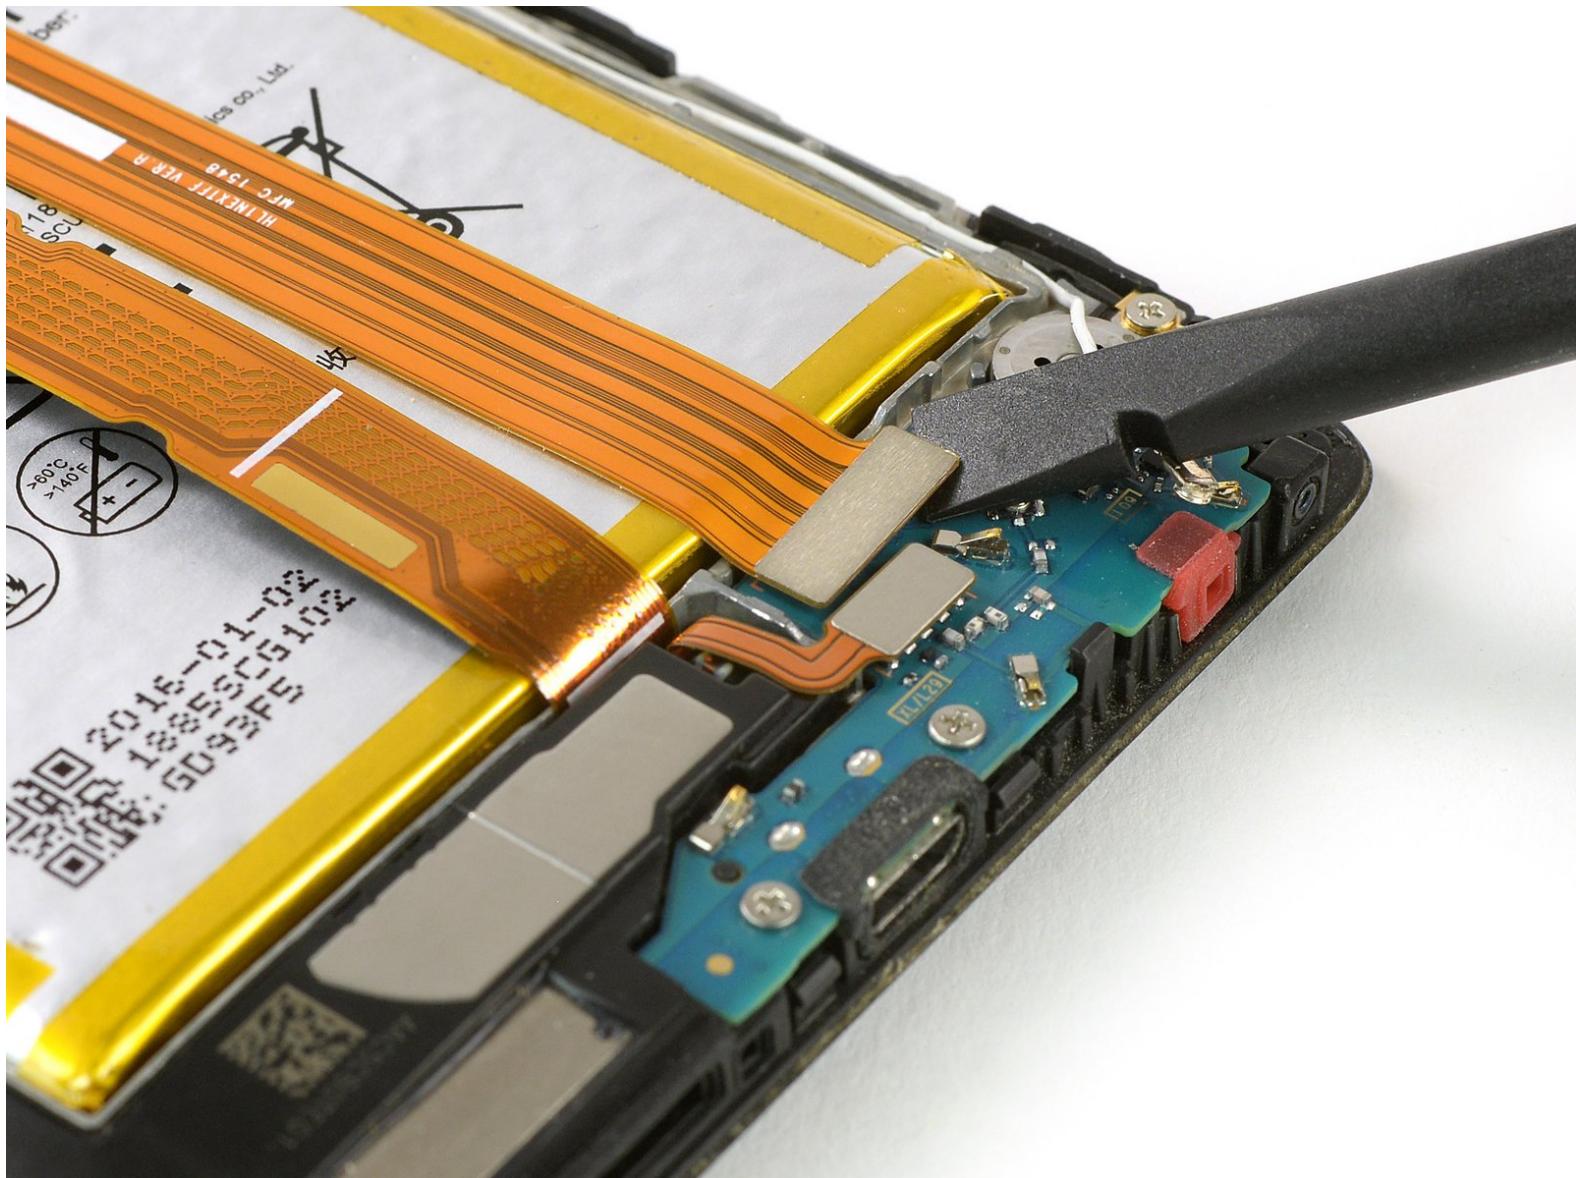

# Huawei Mate 8 Battery prereq

Prereq to disconnect the interconnect cable.

Written By: Dominik Schnabelrauch



# INTRODUCTION

Prereq only

## TOOLS:

- [T2 Torx Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [iOpener](#) (1)
- [iSclack](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Daughterboard interconnect cable



- Remove the liquid indicator sticker.
- Remove the Phillips #00 screw that holds down the metal shield.

**⚠** The metal shield is tightly held in place. If you try to remove it without holding it down on one side, it'll break easily.


- Use a spudger to remove the metal shield.

## Step 2




- Use the flat end of a spudger to disconnect the display, daughterboard interconnect, and battery cables.

## Step 3

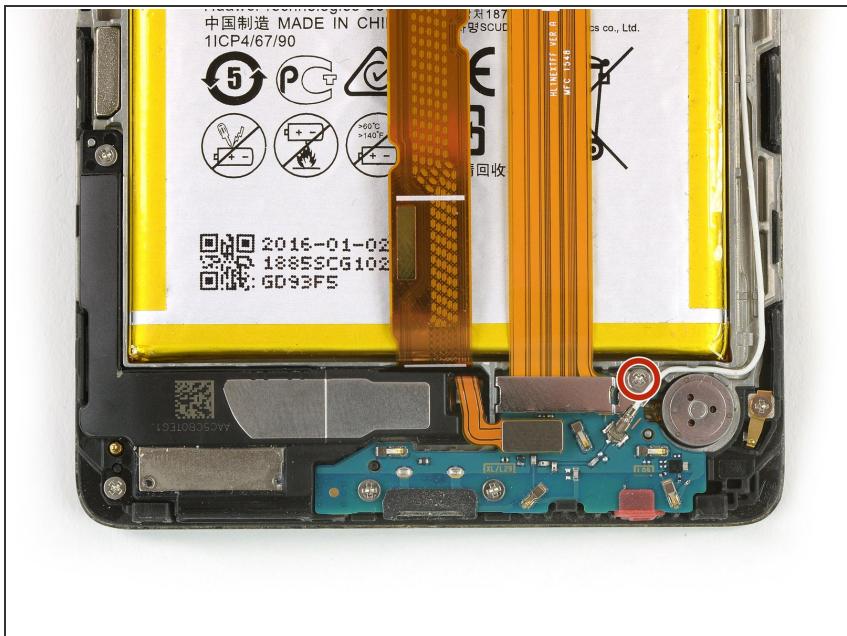


- Remove the Phillips #00 screw that holds down the interconnect cable bracket.

## Step 4

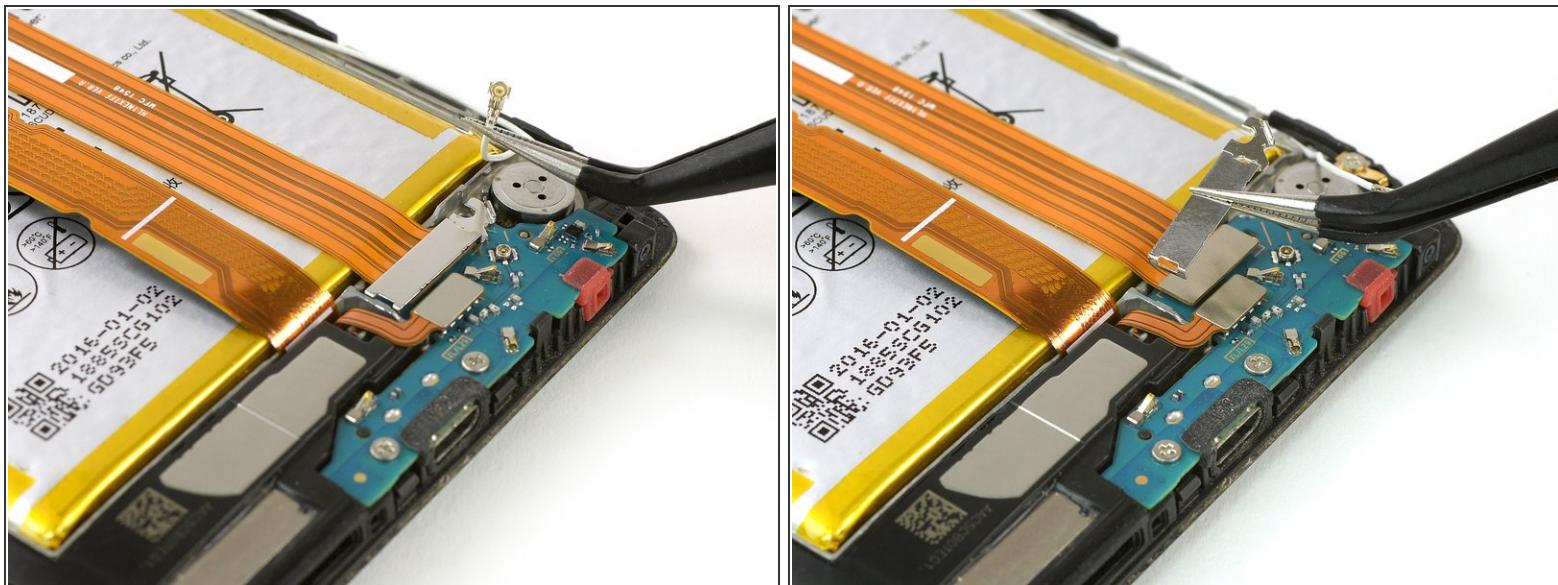

- Lift the coaxial connector off of its socket to allow access to the daughterboard interconnect cable bracket.
- Remove the bracket.

## Step 5

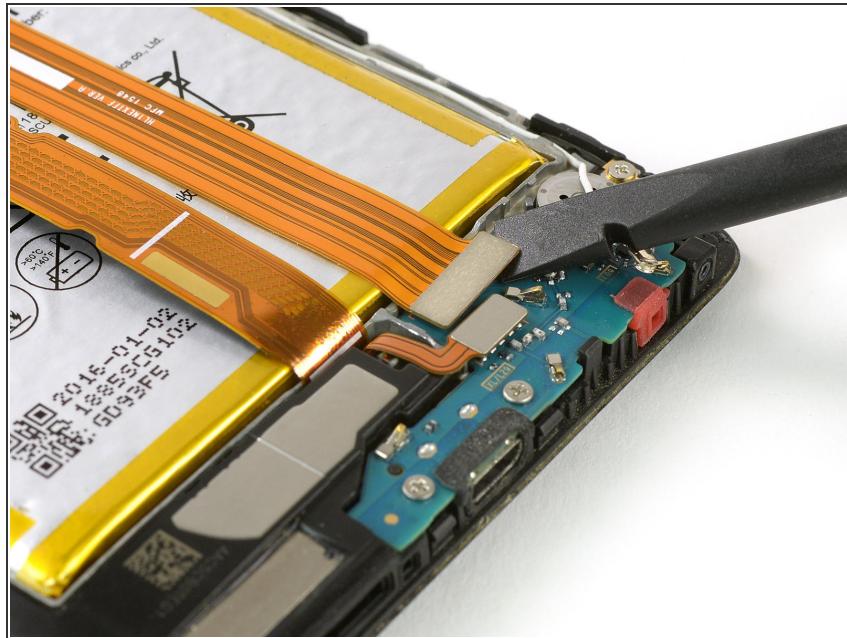

- Use a spudger to disconnect the interconnect cable.
- Remove the interconnect cable.

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.