



Huawei P10 Lite Battery Replacement

This guide shows how to replace the battery in your Huawei P10 Lite.

Written By: Dominik Schnabelrauch



INTRODUCTION

Use this guide to replace the battery in your Huawei P10 Lite smartphone.

TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)
- Tweezers (1)
- iFixit Opening Picks set of 6 (1)
- iOpener (1)

PARTS:

- [Huawei P10 Lite, P9, P9 Lite, and Honor 8 Replacement Battery \(1\)](#)

Step 1 — Back cover



- Insert the tip of an opening pick between the back cover and the mid frame and slide it around the phone, to cut the adhesive.
- Using a suction handle to lift the back cover may help to get an initial gap for the opening pick to put in.

i If the adhesive is hard to cut, [use an iOpener](#) to loosen it.

Step 2




- After you cut the adhesive on every edge, twist your opening pick, to separate the rear cover from the phone.
- Flip the rear cover over to the right side of the phone.

Step 3



- Use a pair of tweezers to remove the sticker.
- Remove the two Phillips #00 screws.
- Remove the four 2.5 mm Phillips #00 screws.

Step 4

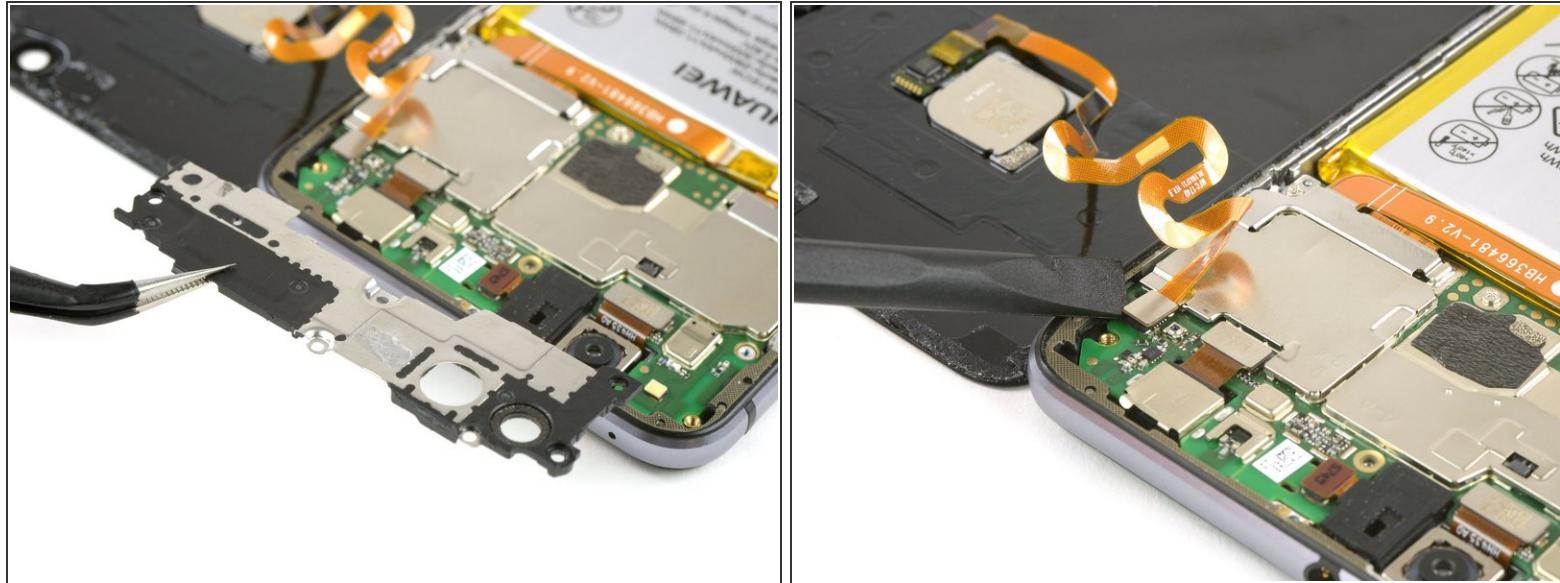

- Use tweezers to remove the mainboard shield.
- Use the flat end of a spudger to disconnect the finger print sensor flex cable.
- When reassembling apply new adhesive where it is necessary.

Step 5 — Battery Disconnection




- Remove the Phillips screw holding the battery connector plate in place.
- Remove the battery connector plate.
- Use the flat end of a spudger to disconnect the battery flex cable.

Step 6 — Battery



- Use an [iOpener](#) to loosen the adhesive beneath the battery.
- Insert a spudger between the battery and the mid frame to create a gap.
⚠ Be careful not to puncture or crease the battery.
- Insert an opening pick or use the spudger in the gap to cut the adhesive beneath the battery.
⚠ There are flex cables running under the battery. Don't damage them with your tools.

Step 7

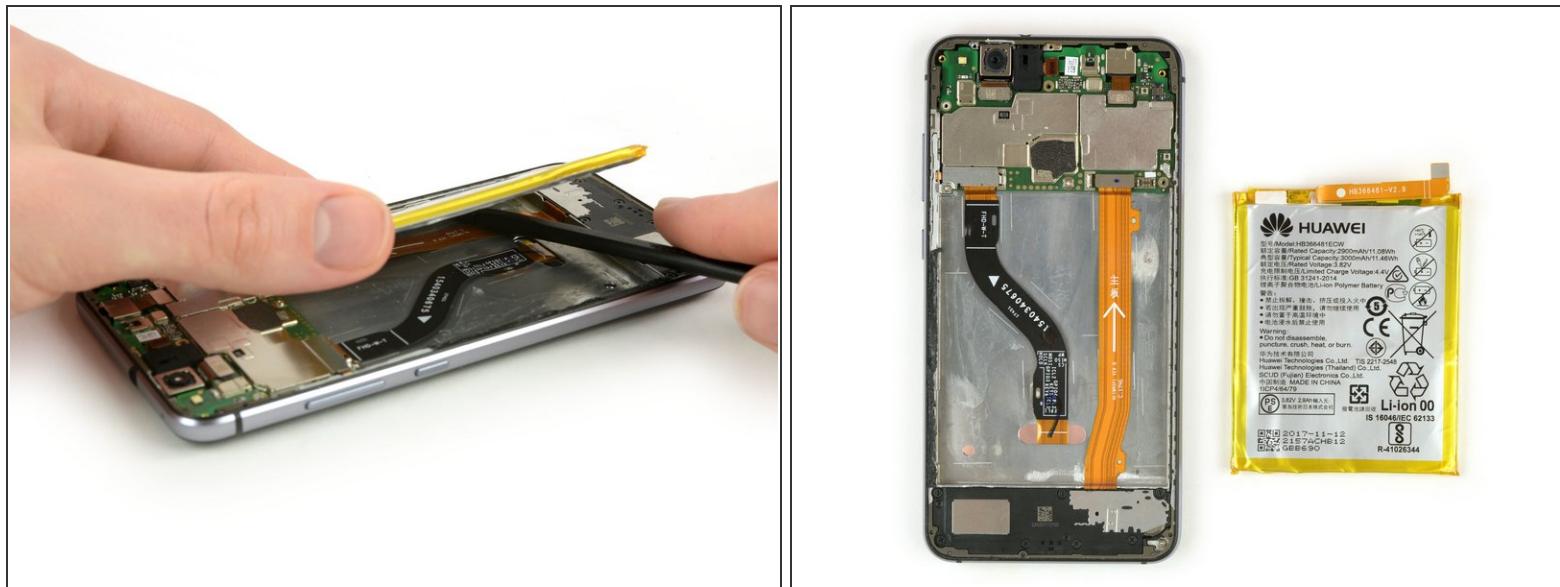

- Use a spudger to cut the rest of the adhesive and lever the battery out of the phone.
- Remove the battery.

 When reassembling your phone replace old adhesive with [double-sided tape](#) or [pre-cut adhesive strips](#).

 Never reinstall a battery that has been bent or damaged during removal.

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.