



# Huawei P8 Lite (2017) Fingerprint Replacement


Written By: Skyphone



 **TOOLS:**

- Heat Gun (1)
- Suction Handle (1)
- Plastic Cards (1)



## Step 1 — Fingerprint

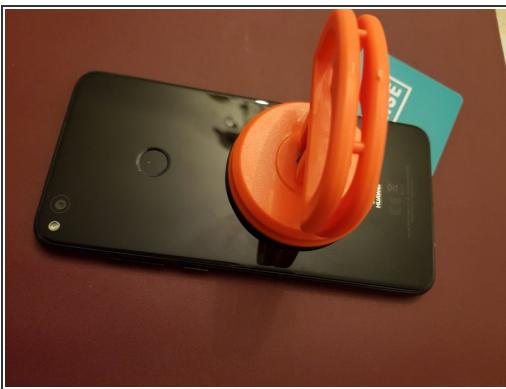

- Heat the backglass with a heat gun.
- Use a suction cup and a card to gently remove the back glass.



**⚠** Don't hesitate to heat again if there is any resistance.

## Step 2 — Disconnect the fingerprint cable.

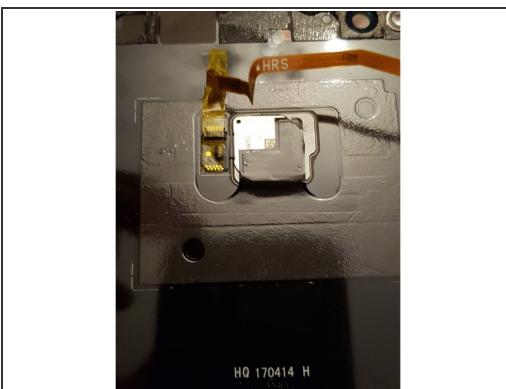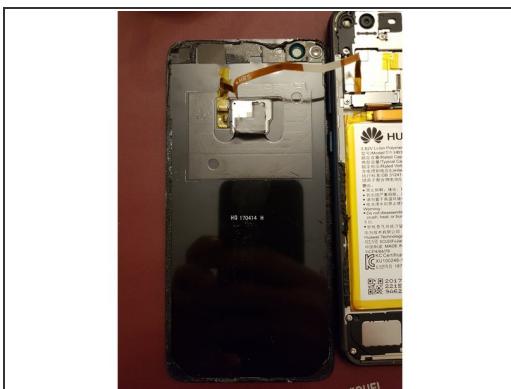

- Disconnect the fingerprint cable.
- You have to open the lock of the cable on the back glass.

## Step 3 — Remove the fingerprint.

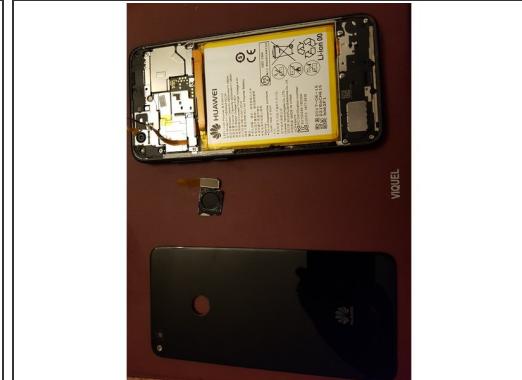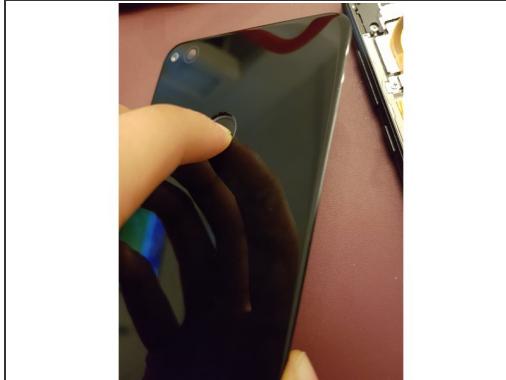

- Use the heat-gun to heat the fingerprint.
- Push the fingerprint to remove it from the backglass

To reassemble your device, follow these instructions in reverse order.