



Huawei P8 Lite Motherboard Replacement

A replacement guide for the motherboard of the Huawei P8 Lite.

Written By: Brayden Mann



INTRODUCTION

In this guide, instructions will be laid out to guide the replacement of the Huawei P8 Lite's motherboard.

Before starting, please refer to the device's [teardown guide](#) to get started.

TOOLS:

- [SIM Card Eject Tool](#) (1)
- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Motherboard




- Remove the SIM that is connected with the mother board.

Step 2




- Remove the back cover. It is not fastened with screws or adhesive, therefore it can be removed with your finger nails, spudger or other gentle tools.

Step 3

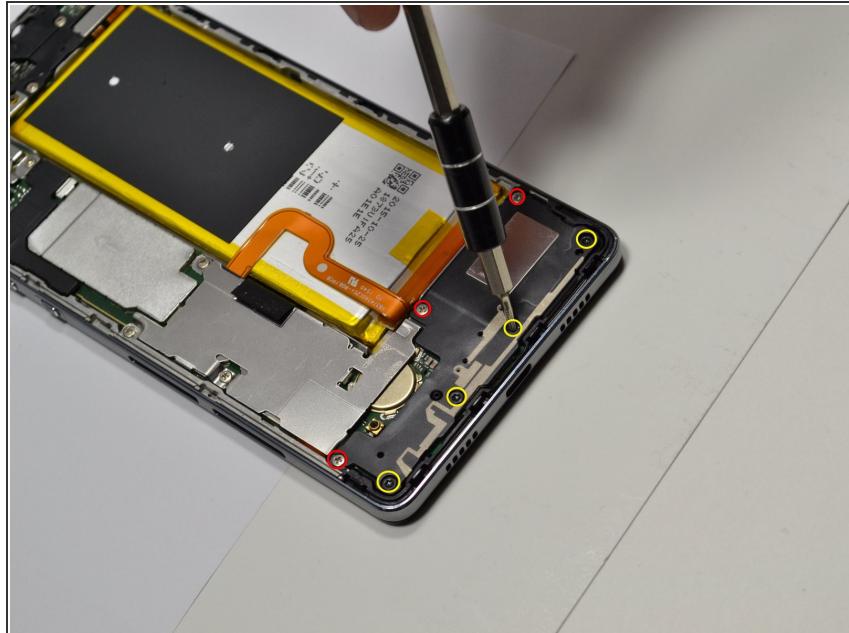


- Use screwdriver from [54 Bit Driver Kit](#) to unscrew the screws. Be sure to keep the screws separate to avoid confusion.
 - PH000 Bit
 - T5 Torx

Step 4

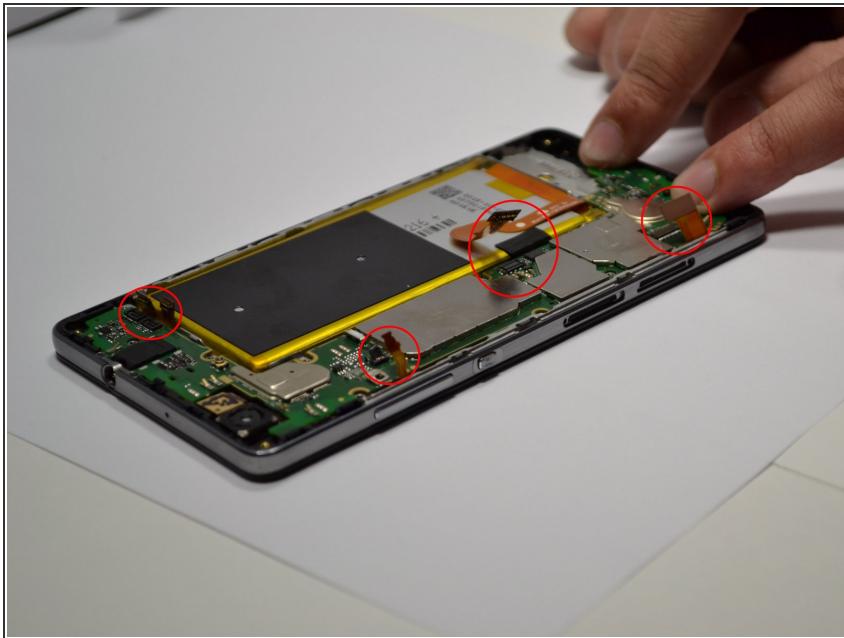

- Gently pull the connectors attached to the motherboard to disconnect the motherboard. See the highlighted areas in the photos.

Step 5

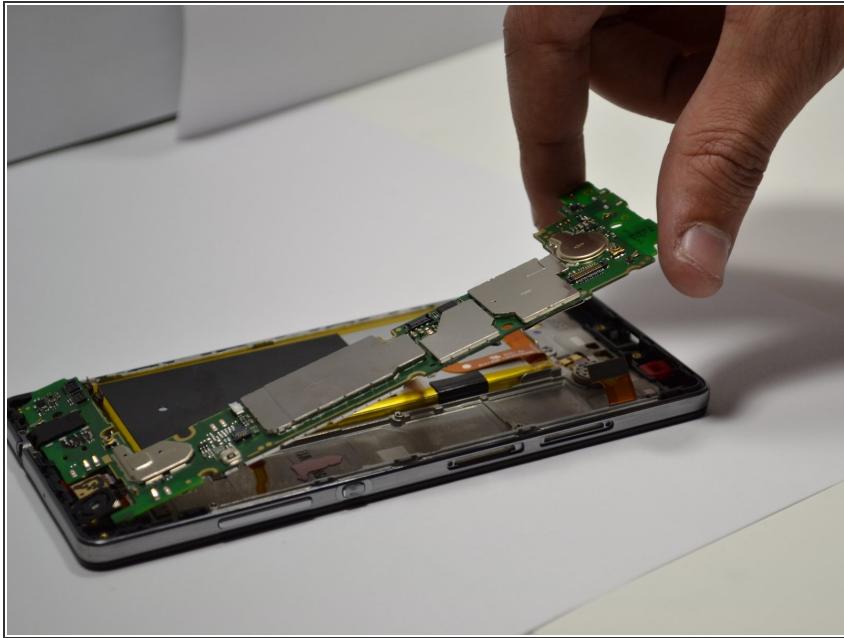

- Remove the motherboard carefully
- Replace the motherboard with the new motherboard. To replace the motherboard, do it in the reverse order as the [teardown process](#).

To reassemble your device, follow these instructions in reverse order.