




Huawei P8 Lite Teardown

Written By: Sophia

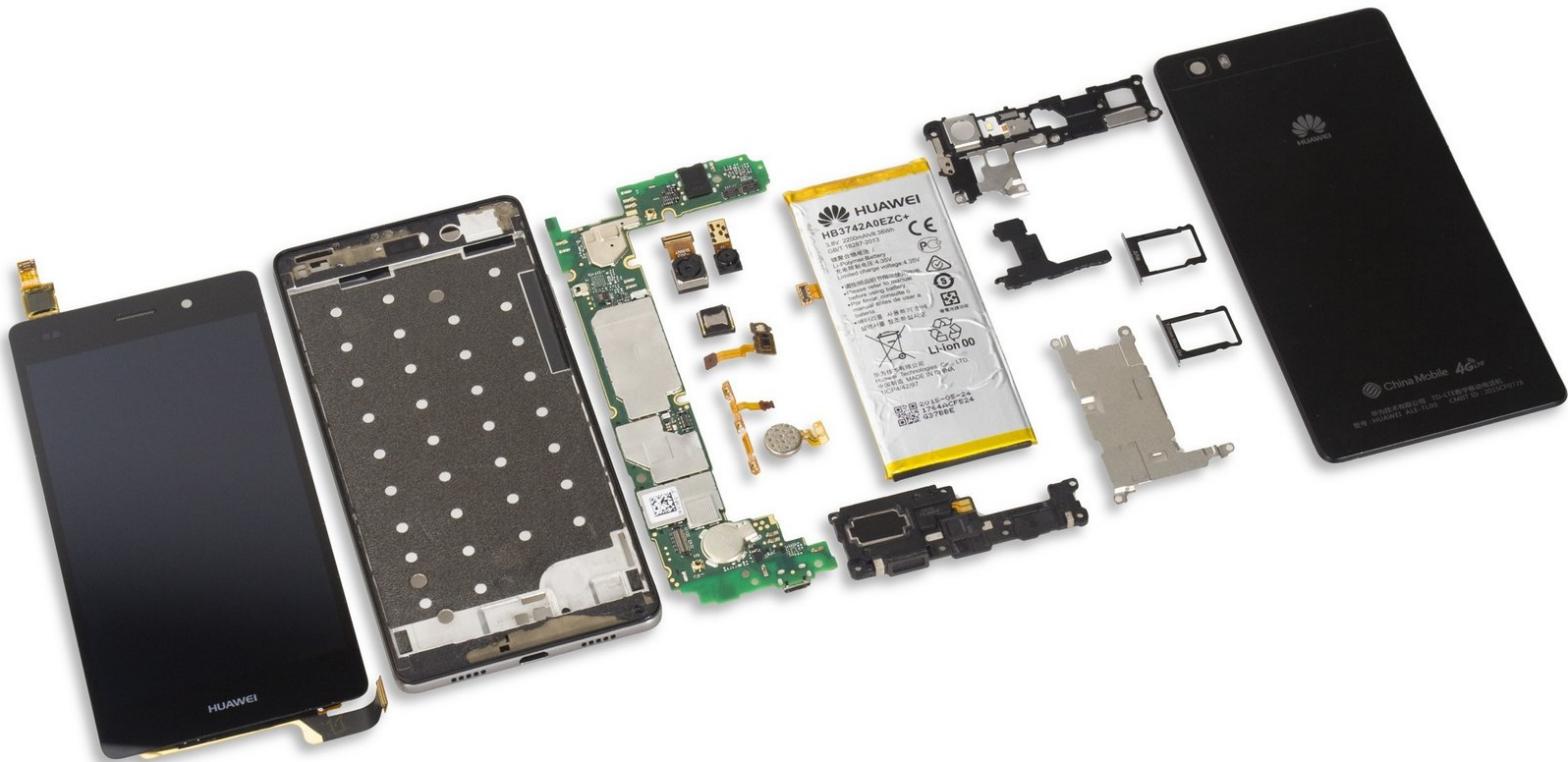

INTRODUCTION

[video: <https://youtu.be/goz4hDW1UeQ>]

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Heat Gun](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)

Step 1 — Huawei P8 Lite Teardown



- Remove the SIM & SD card trays first.

Step 2



- Remove the battery door—it's fastened tightly by clips. Free the clips with your fingernail or a pry tool.


⚠ Be careful because the midframe is easily scratched, and the glass at the top of the battery door is easily broken.

Step 3



- Remove the torx screws on the back.

Step 4

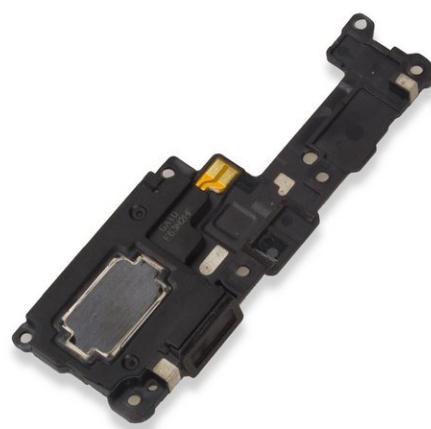

- Remove the loudspeaker by prying it up with a spudger.

Step 5



- Remove the securing brackets covering the motherboard.

Step 6



- Carefully release all the connectors on the board, and remove the motherboard.

Step 7



- Remove the rear camera and front camera.

Step 8



- Remove the power flex.

Step 9




- Remove the battery. There is strong adhesive under the battery—work carefully to pry it free and be careful not to puncture the battery.
- Try an iOpener or hairdryer to heat the adhesive behind the battery. This softens the adhesive, making it easier to release the battery.

Step 10



- Remove the motor vibrator.

Step 11

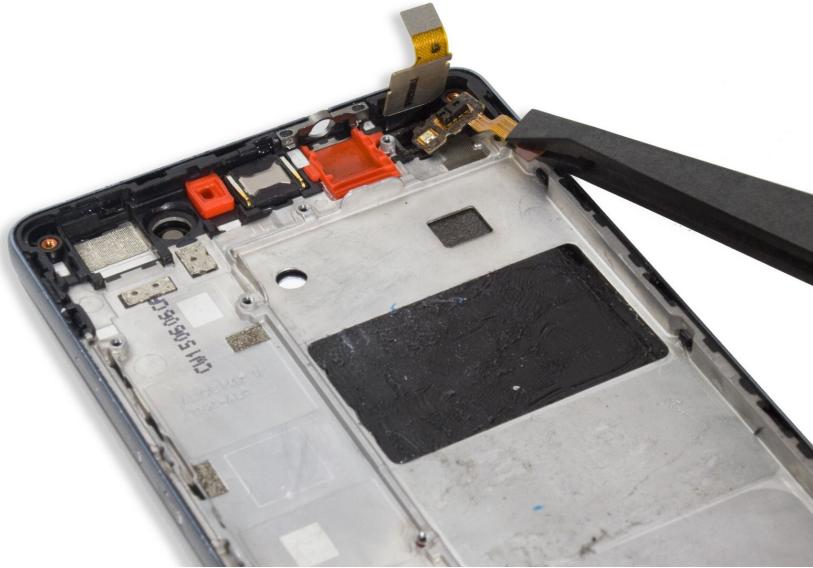

- Remove the sensor flex. It's covered under the digitizer flex and fastened by adhesive.

Step 12



- Remove the earpiece speaker.

Step 13



- Heat, cut the adhesive sticker and remove the screen carefully.

Step 14



- You're done!

To reassemble your device, follow these instructions in reverse order.