



Huawei Phone P7 Headphone Jack & Vibration Motor Assembly Replacement

Written By: Sophia



 **TOOLS:**

- Heat Gun (1)
- Suction Handle (1)
- iFixit Opening Picks set of 6 (1)
- Spudger (1)
- Phillips #000 Screwdriver (1)

 **PARTS:**


- Huawei Ascend P7 headphone jack assembly (1)

Step 1 — Headphone Jack & Vibration Motor Assembly




- Remove back cover.

Step 2

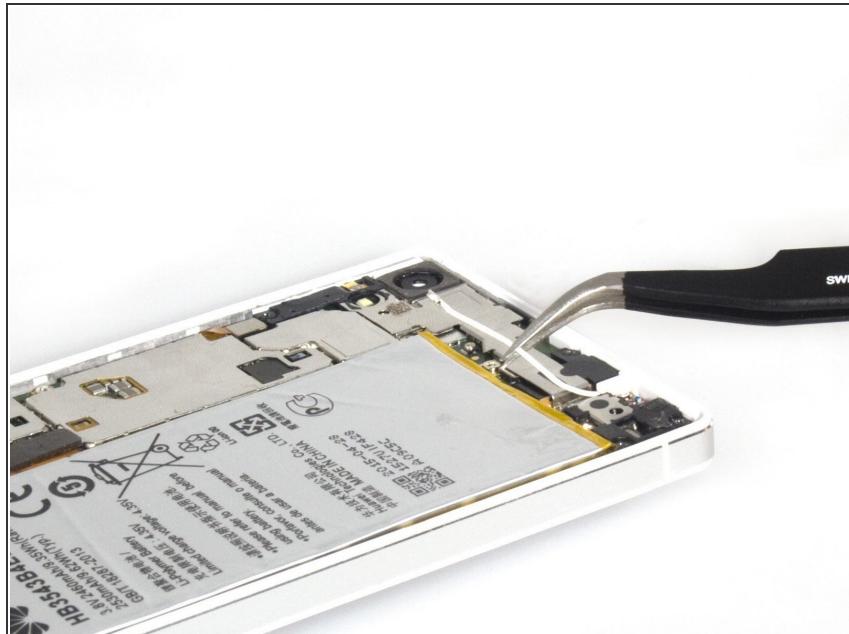

- Remove small signal cable.

Step 3

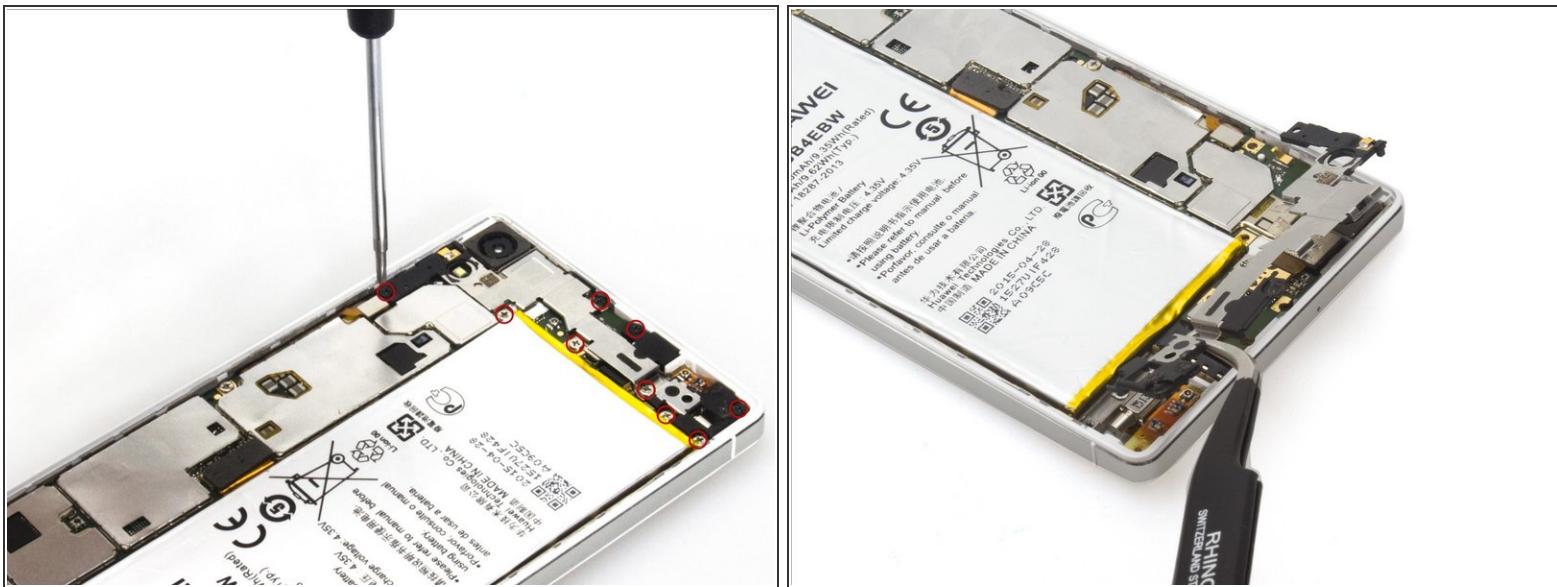

- Twist off those nine screws and remove the bracket.

Step 4



- There is adhesive under the vibration motor, so release the connector and pry up to remove the assembly.

To reassemble your device, follow these instructions in reverse order.