




# IBM Thinkpad T61 Trackpad Replacement

This guide will show how to replace the Track pad

Written By: Raymond Lawton

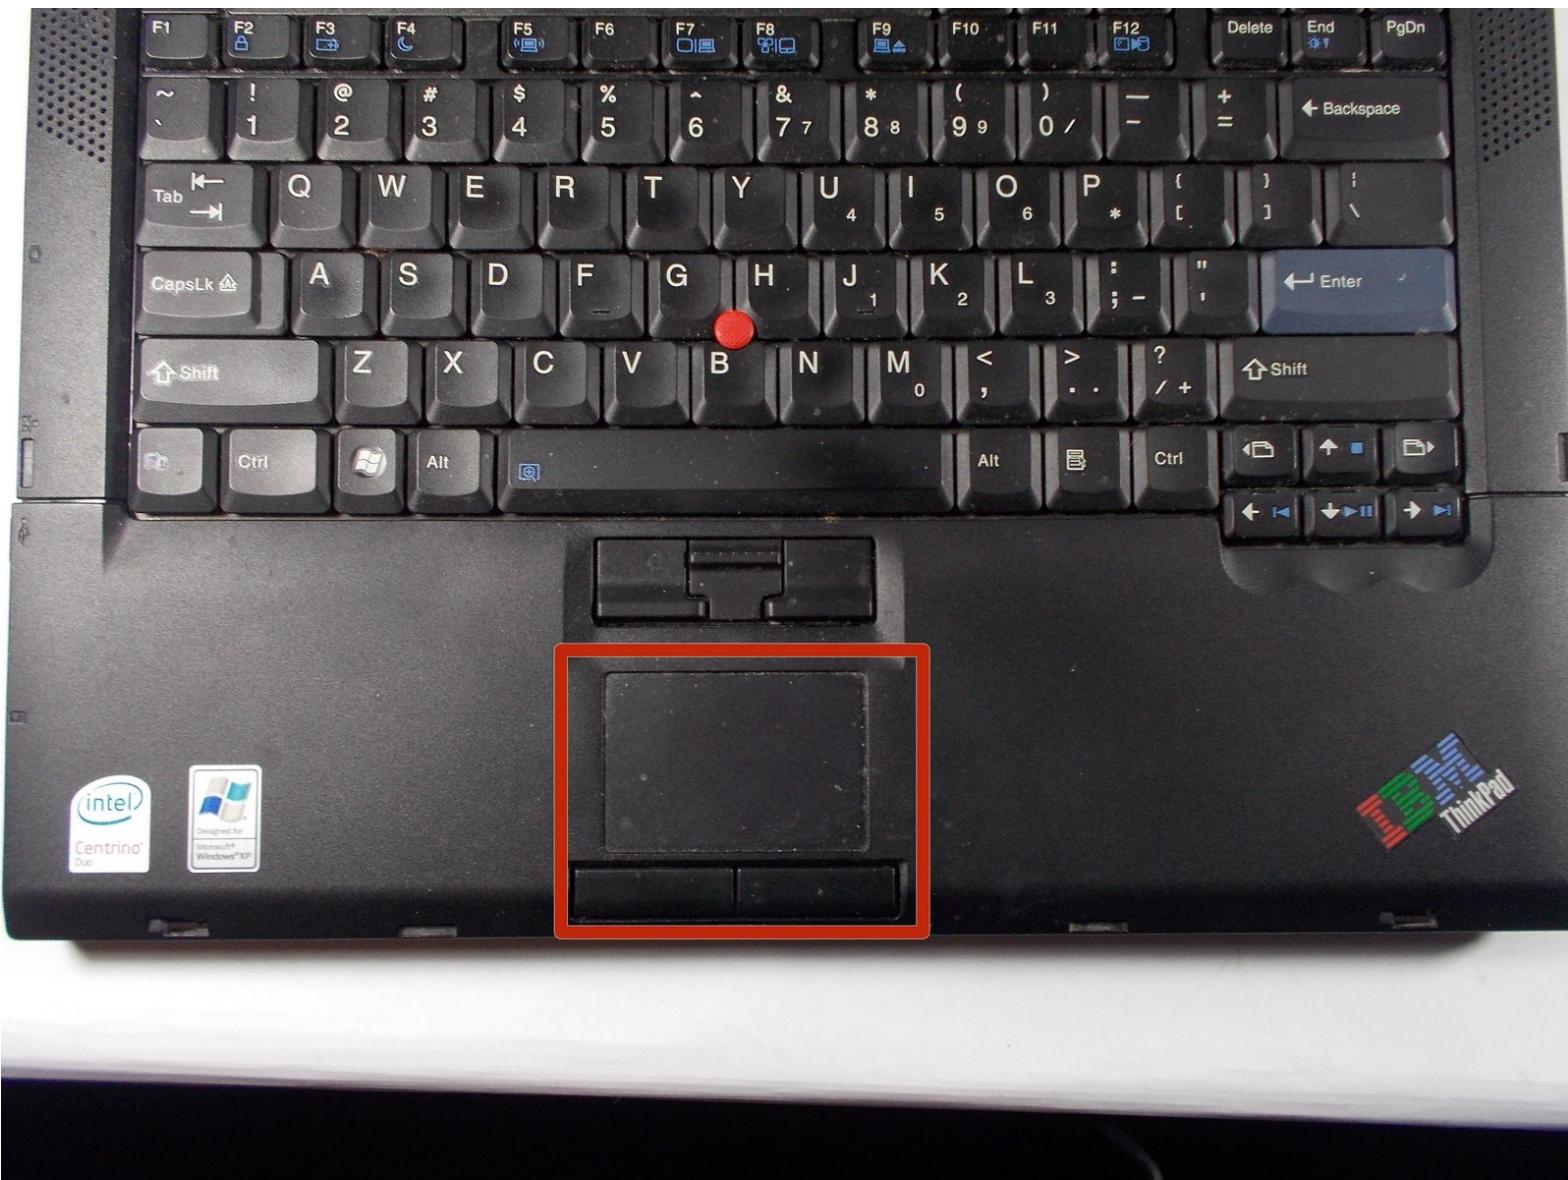

 **TOOLS:**


- Phillips #1 Screwdriver (1)

## Step 1 — Trackpad Replacement



- This image shows the track pad which is going to be replaced.

## Step 2

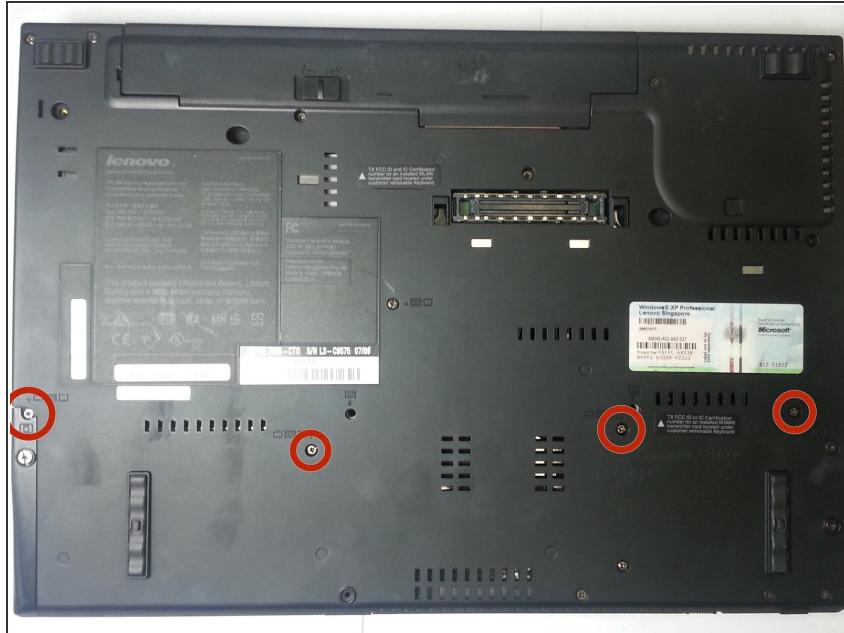



- Remove the screws with the PH1 bit.

## Step 3




- With the screws removed, the top part of the keyboard should lift as shown.

## Step 4

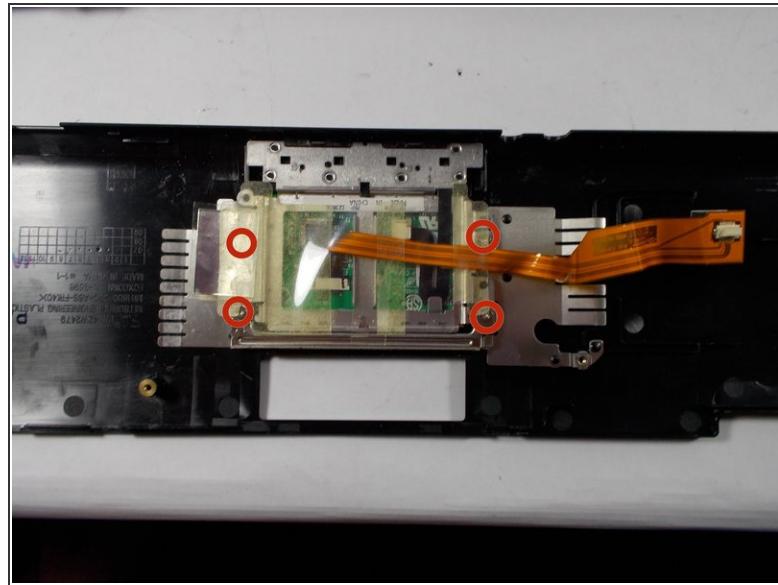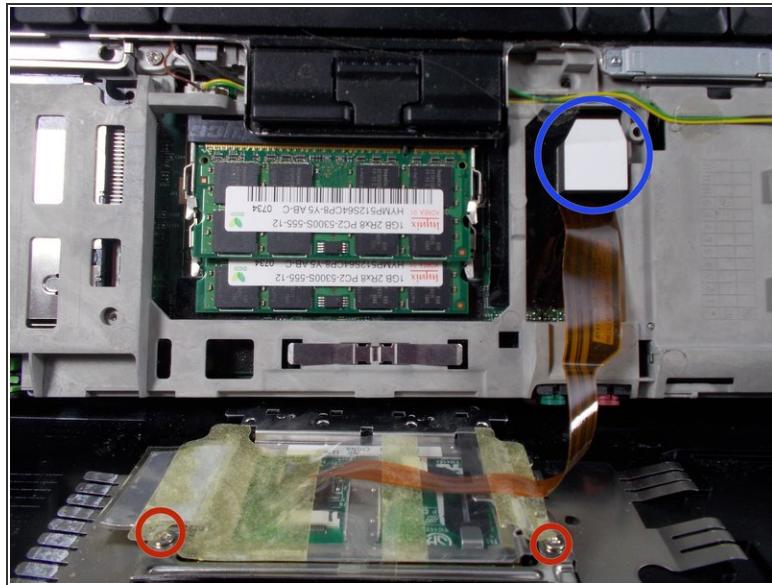


- Remove plug
- Use a Philips head screwdriver to remove the screws. Two of the screws are located just under the plastic.

## Step 5

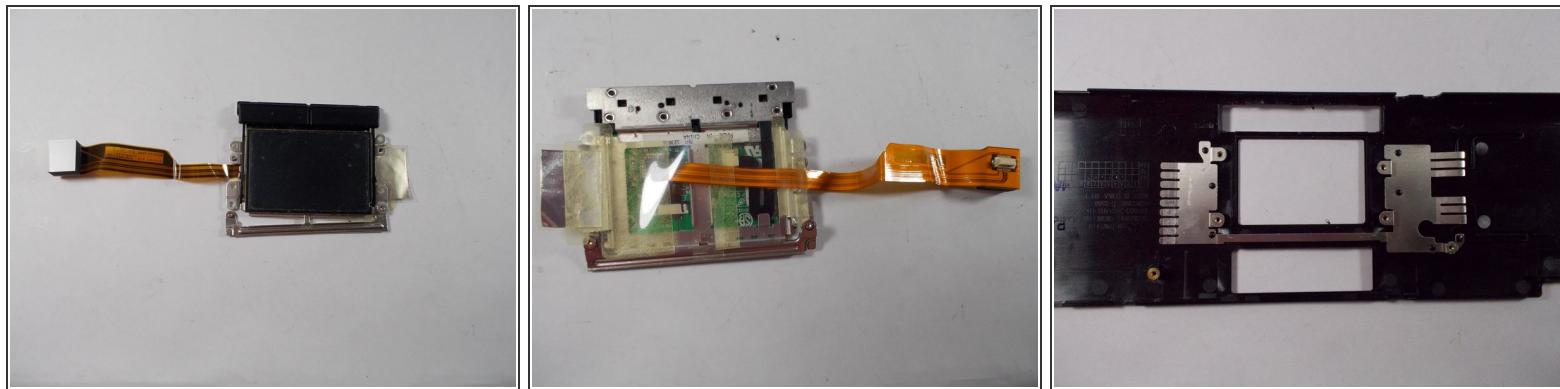


- Once the screws have been removed, the touch pad, and bottom mouse buttons should be ready to replace.

## Step 6

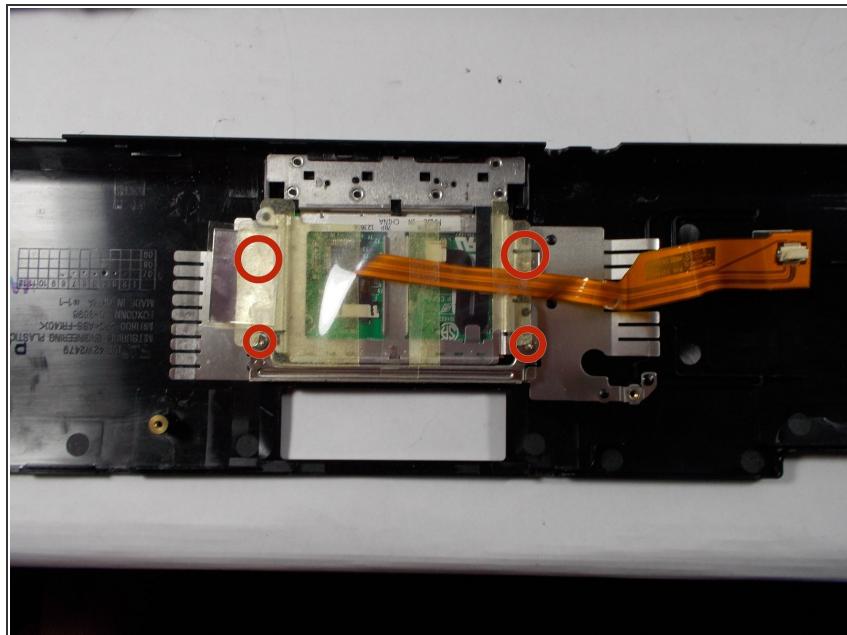


- Insert the new touchpad and replace the screws with a PH1 bit

## Step 7

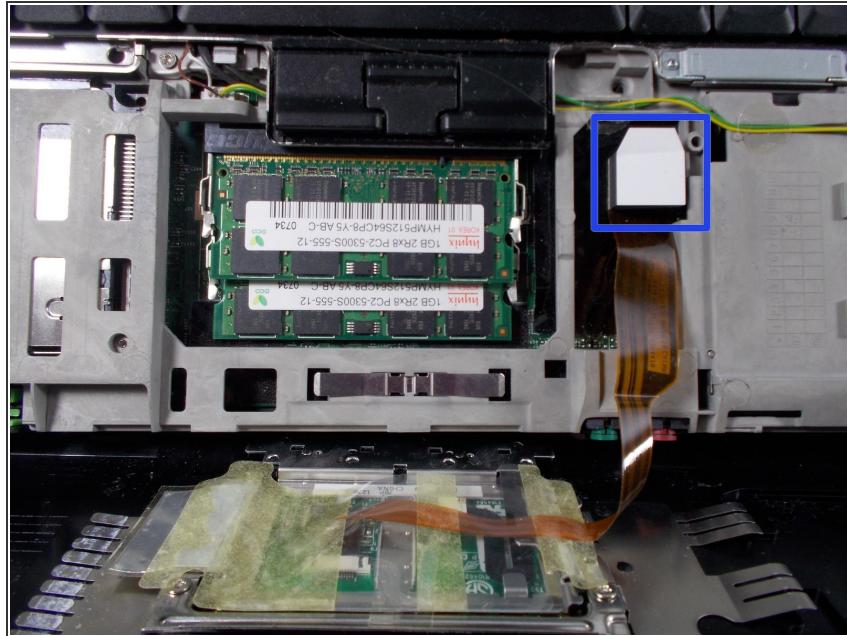

- Reinsert the plug.

## Step 8

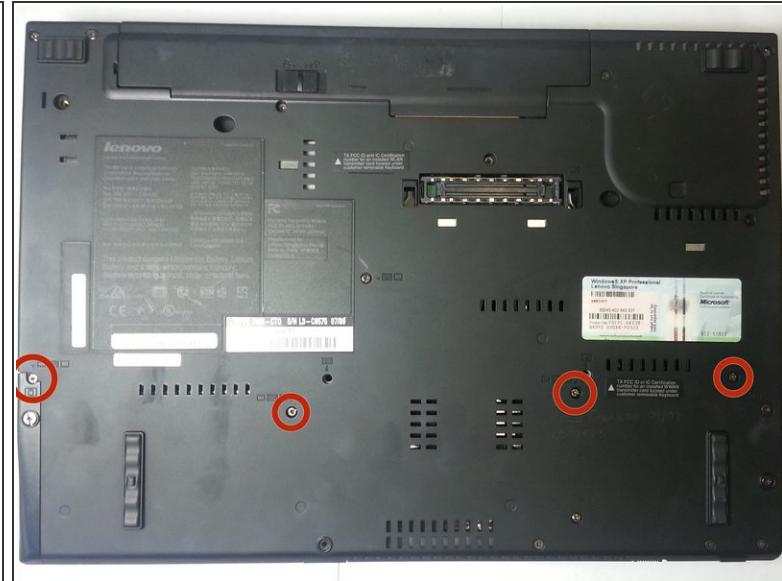

- Re-insert the touch pad panel
- Replace the screws with a PH1 bit.

To reassemble your device, follow these instructions in reverse order.