




Kingbox (Generic Android) Teardown

Teardown of a Generic Android Tv Box

Written By: Dan

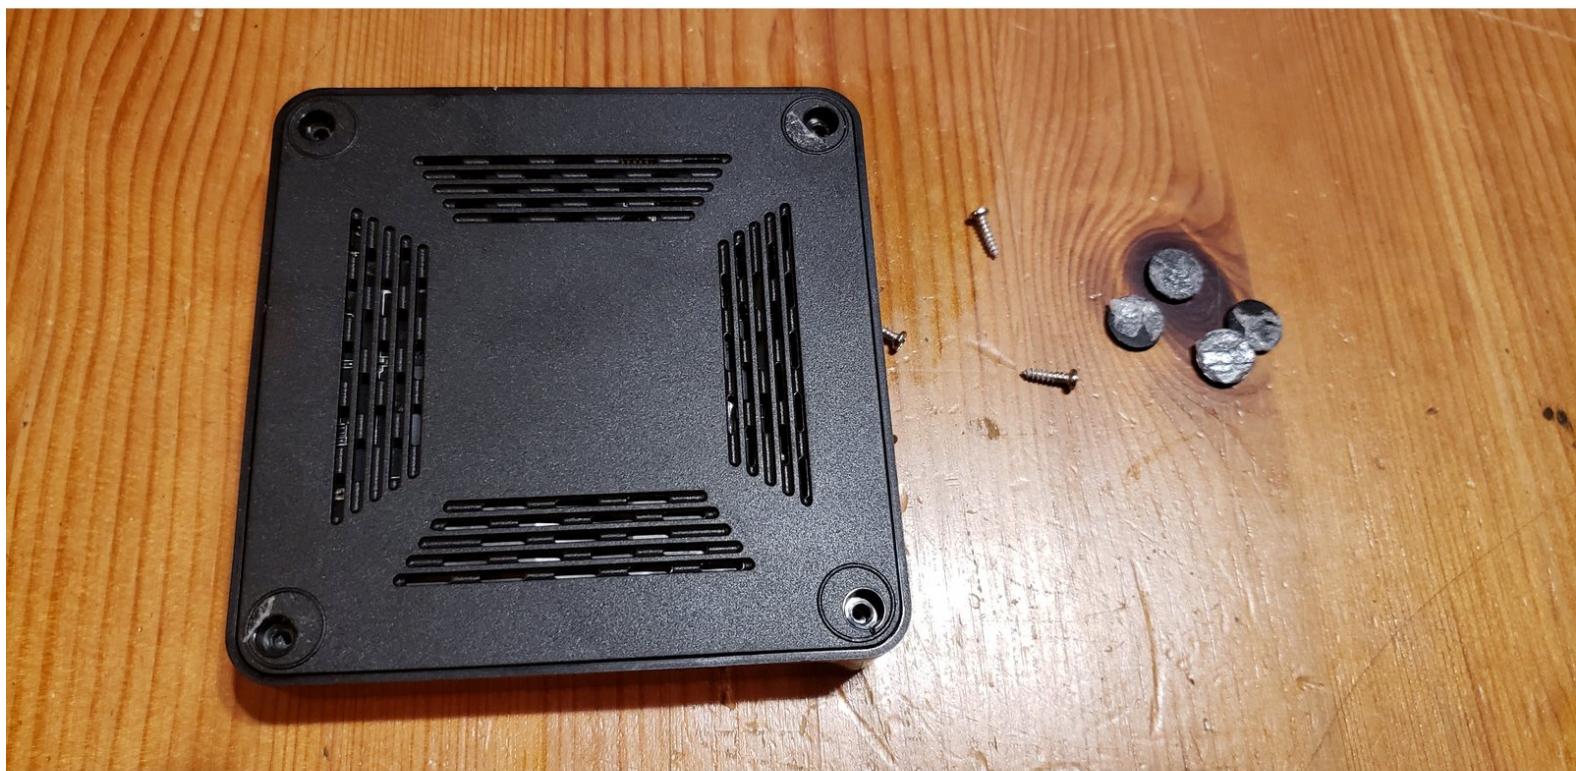

 **TOOLS:**

- Phillips #2 Screwdriver (1)

Step 1 — Open the bottom





- Remove the four pads.
- Use a Philips 2.0 and remove the four screws
- Remove bottom cover

Step 2



- Remove board from case

Step 3 — Motherboard

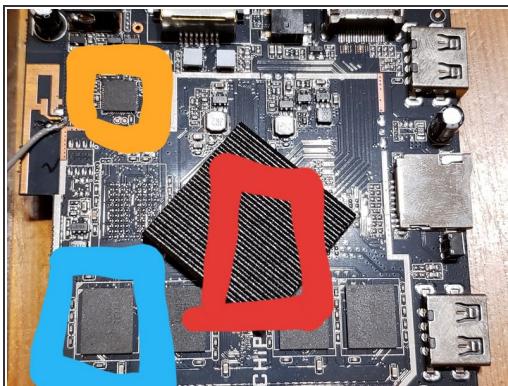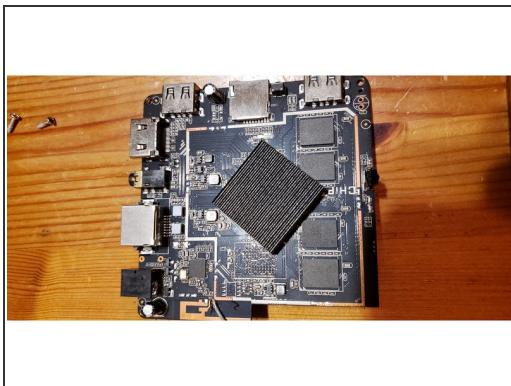

- Samsung 641 kmvtu000lm chip - was also in the Galaxy S3
- WiFi chip - iComm sv6256p
- Micron ram
- Rockchip CPU