



# Lenovo IdeaPad 100s-14IBR USB/Headphones Jack Replacement

This guide will help the users replace the USB/Headphone Jack board that is found in the Lenovo IdeaPad 100S-141BR.

Written By: Mohammed Younis




## INTRODUCTION

This guide will help the users replace the USB/Headphone Jack board that is found in the Lenovo IdeaPad 100S-141BR.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — USB/Headphones Jack

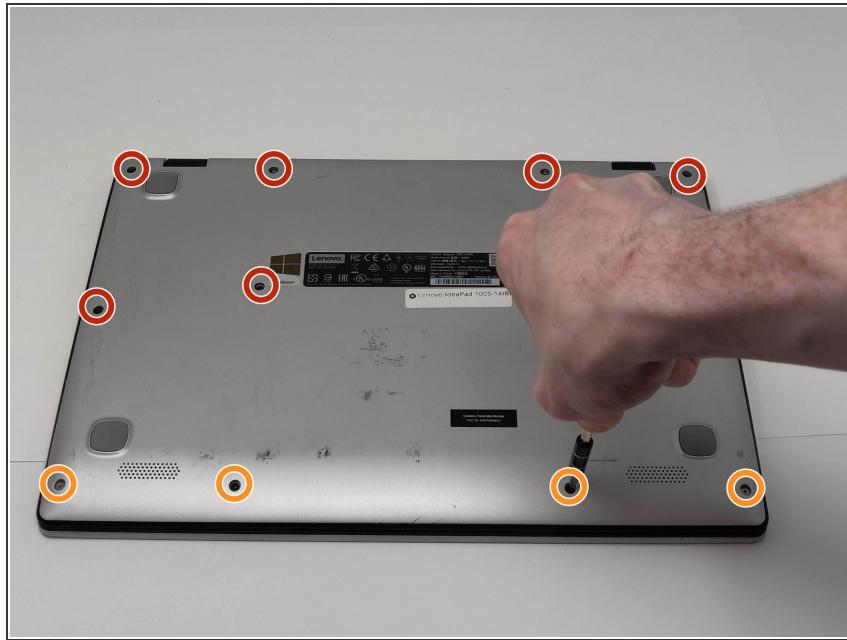

- Remove the eight 4mm PH00 screws.
- Remove the four 2mm PH00 screws.


## Step 2



- Use the nylon spudger to loosen the back cover from the back of the device.


**⚠** You may hear a bit of a snapping sound, but this is normal.

## Step 3

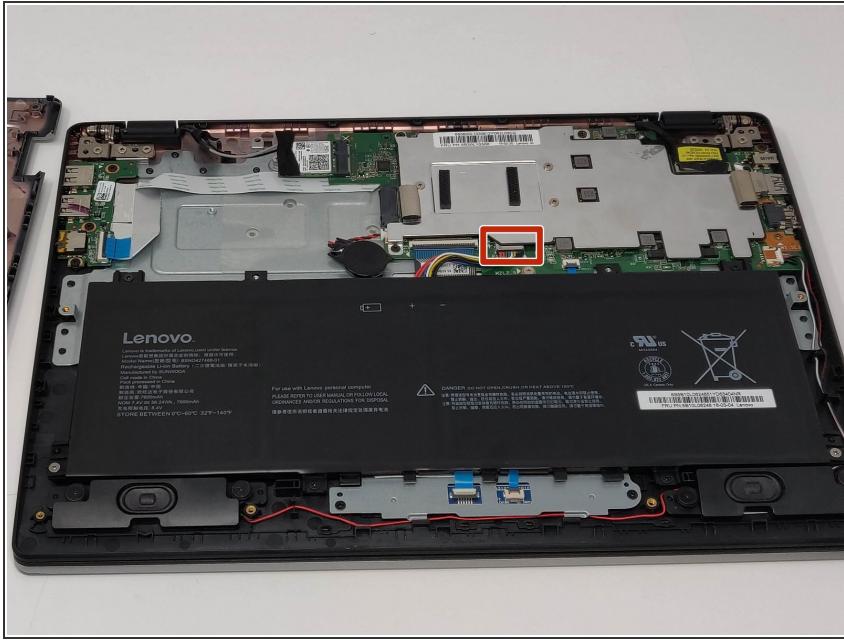

- For safety reasons, disconnect the wires connecting the battery to the motherboard with the nylon spudger.


## Step 4

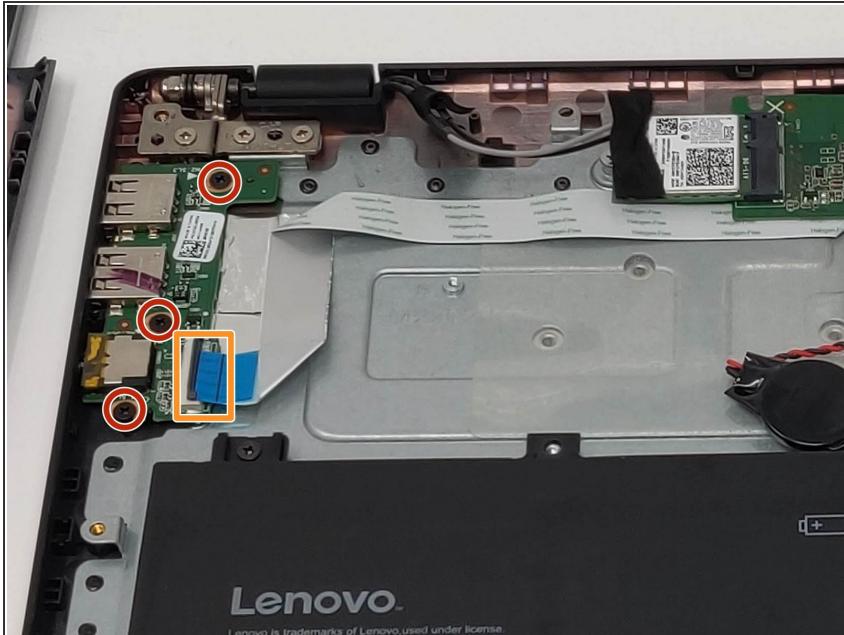

- Remove the three 4mm PH00 screws.
- Unplug the ribbon wire connected to the USB/Headphone Jack PCB by lifting the black plastic tab holding the ribbon cable down.

**⚠️** Be extra careful not to bend the ribbon cable too much as it is fragile.

## Step 5

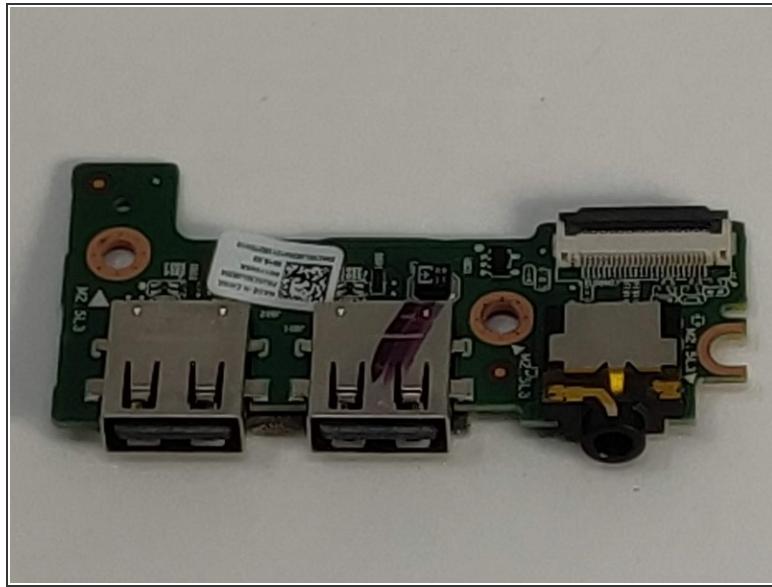

- Lift the USB/Headphone Jack PCB off of the board gently and put it to the side.

To reassemble your device, follow these instructions in reverse order.