




Lenovo IdeaPad U310 Screen Replacement

If your Lenovo IdeaPad U310 is having screen issues, this repair guide will show you how to replace the screen.

Written By: Andrew Capra

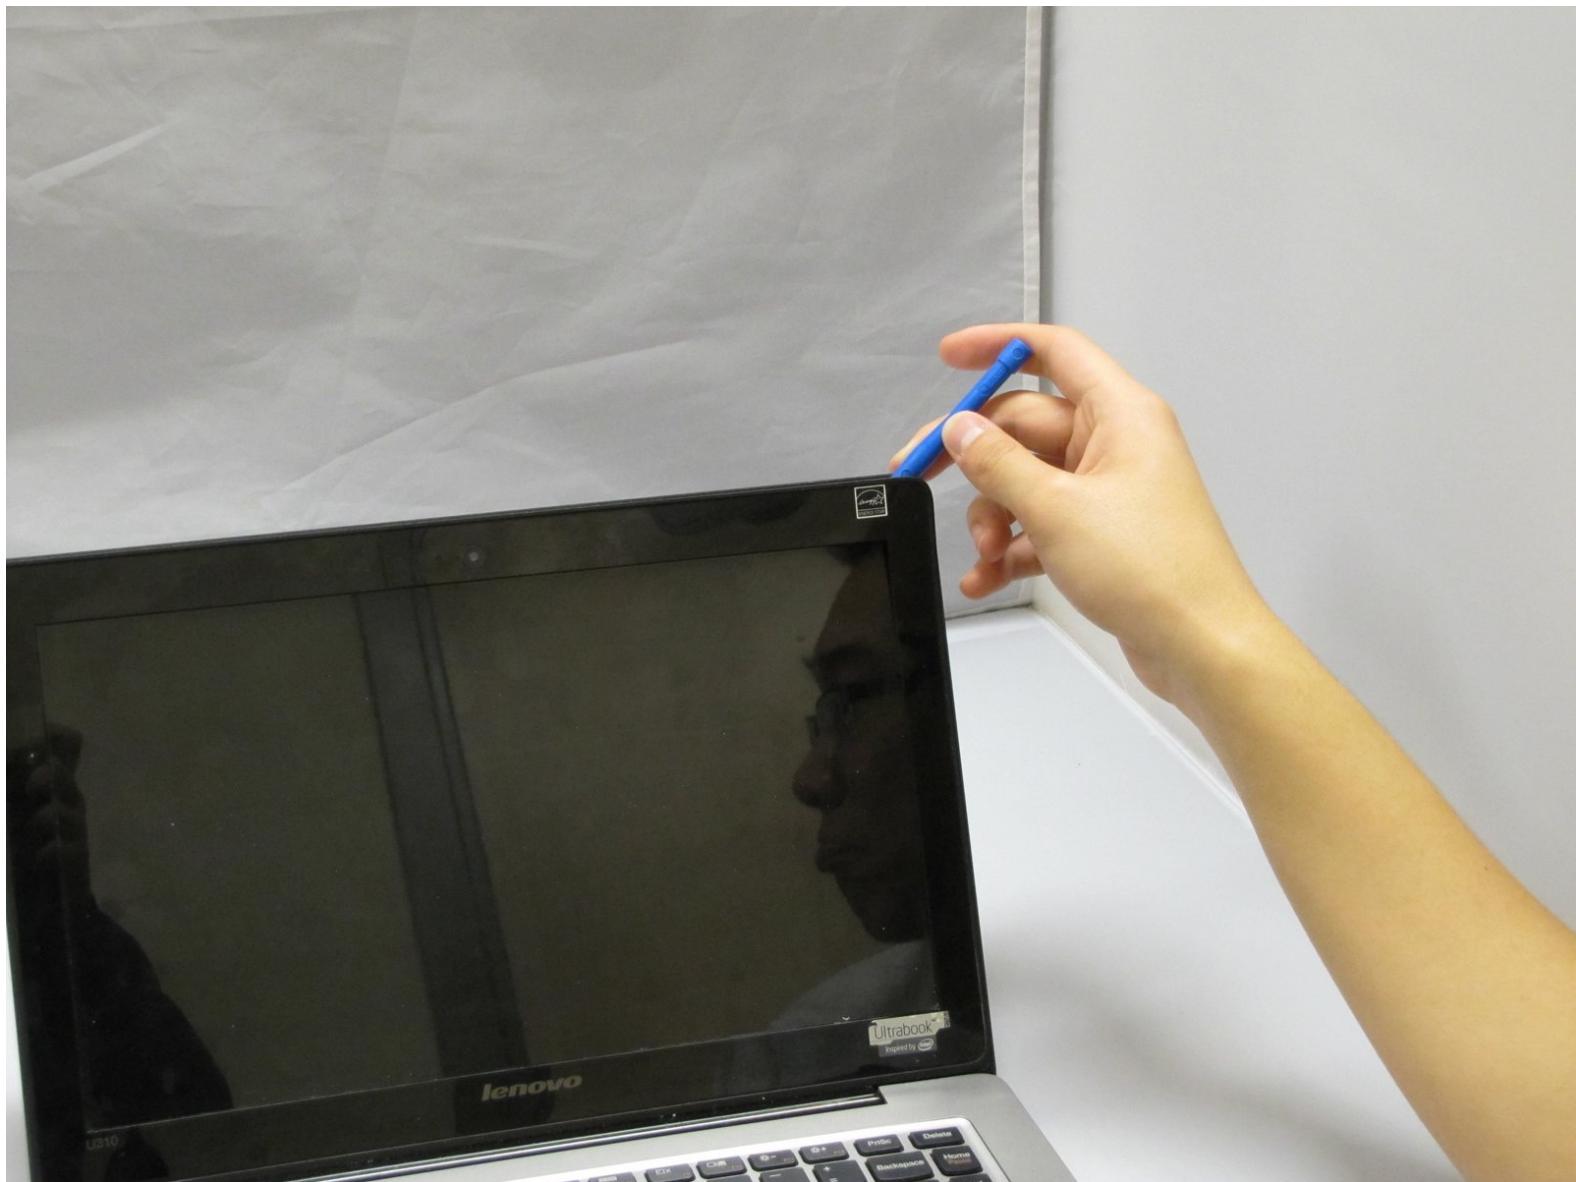

INTRODUCTION

Is your screen too dim, plagued with dead pixels, or just not working at all anymore? Fixing it can be a lot easier than you might think with this screen replacement guide for the Lenovo IdeaPad U310.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Battery



- Flip the device over so the bottom panel is facing up.
 - Remove the rubber feet by pinching and pulling in an upward motion.
- *i* The rubber feet are missing from this photo, but will be located within the red markups.

Step 2





- Remove the 4 screws securing the bottom panel to the device.
- *i* The screws are missing from this device and are not pictured. They will be located under the rubber feet within the red markups.

Step 3





- Place the plastic opening tool between the bottom panel and device.
- Pry around the device's outer edge until the bottom panel is no longer attached.
- Lift the bottom panel up and away from device.

Step 4

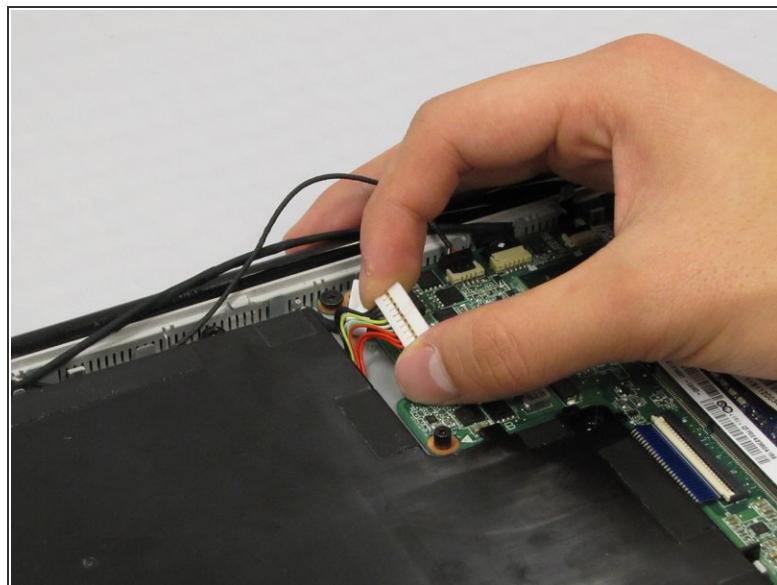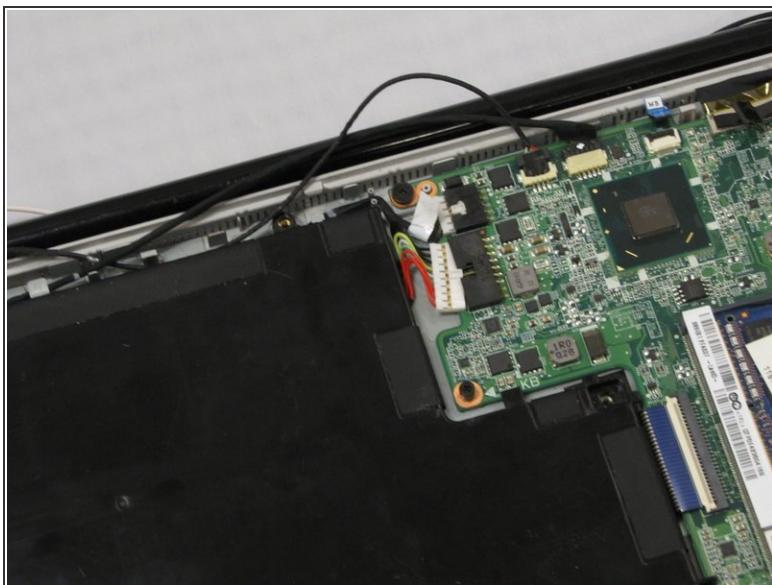



- Unplug the Battery from the circuit board by carefully prying the connector from its housing.

Step 5

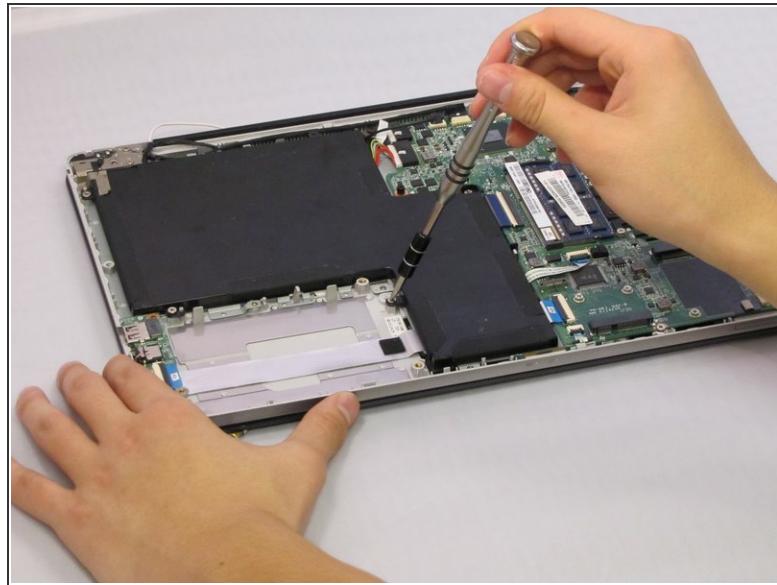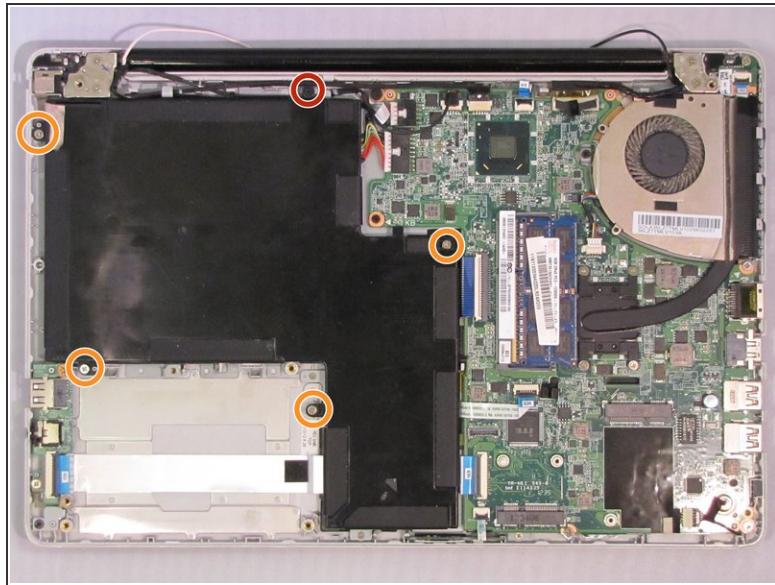


- Remove the 5.6 mm Screw with the PH1 screwdriver.
- Remove the 4.6 mm screws with the PH1 screwdriver.

Step 6

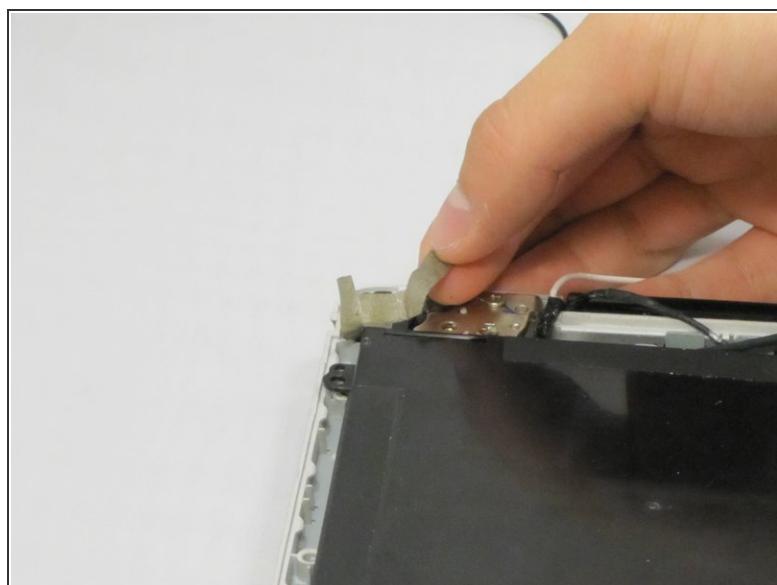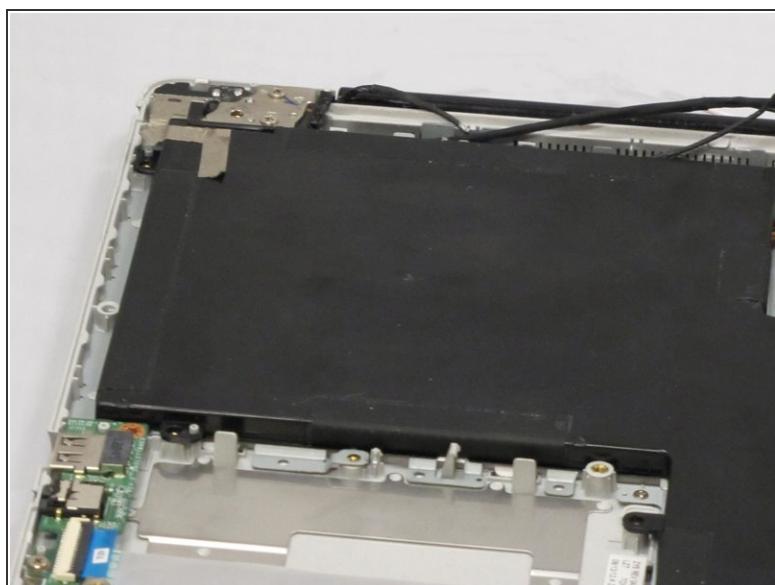


- Lift the strip tape away from the battery, being careful not to completely remove it.

Step 7

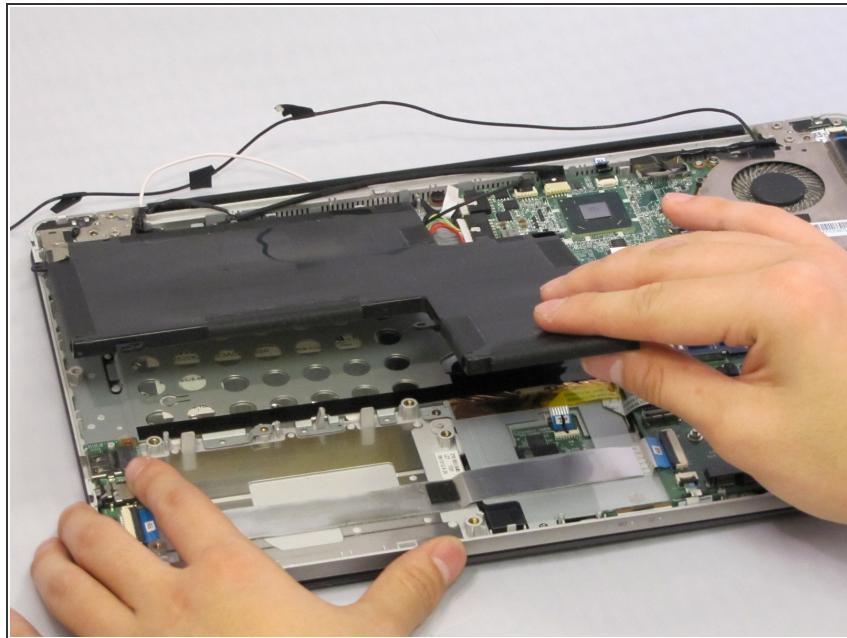


- Remove the battery by lifting up and away from device.

Step 8 — Screen

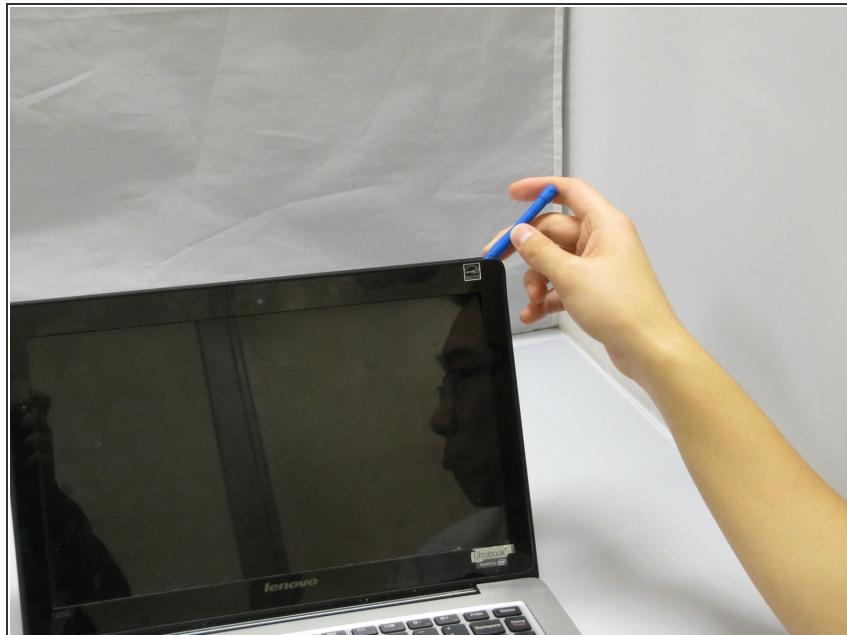


- Insert opening tool between the frame and the back panel of the screen.

Step 9

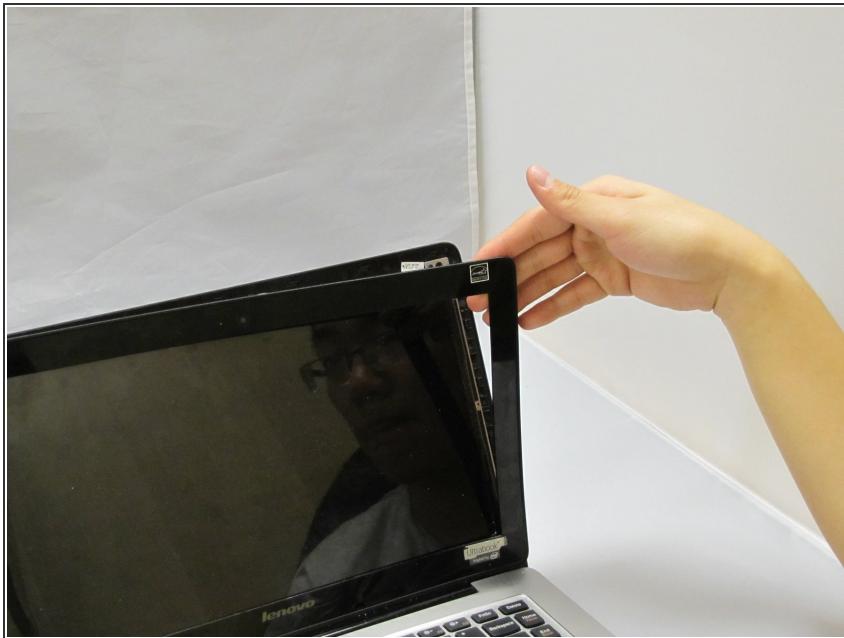

- Work your way around the frame until every connection is loose.

Step 10

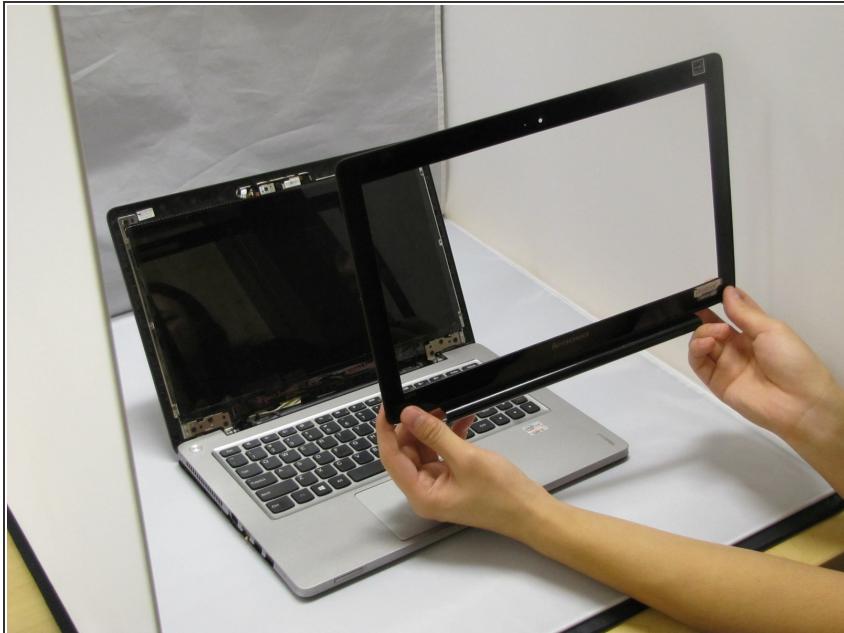

- Lift the screen up and away from the device.

⚠ Do not tamper with the tape on the bottom of the screen labeled "Don't touch".

Step 11



- Remove the 1.9 mm screws using the PH0 screwdriver.


(i) These screws are very short and small, keep track of them.

Step 12



- Once the four screws are removed, gently rest the screen facedown on the keyboard.

Step 13

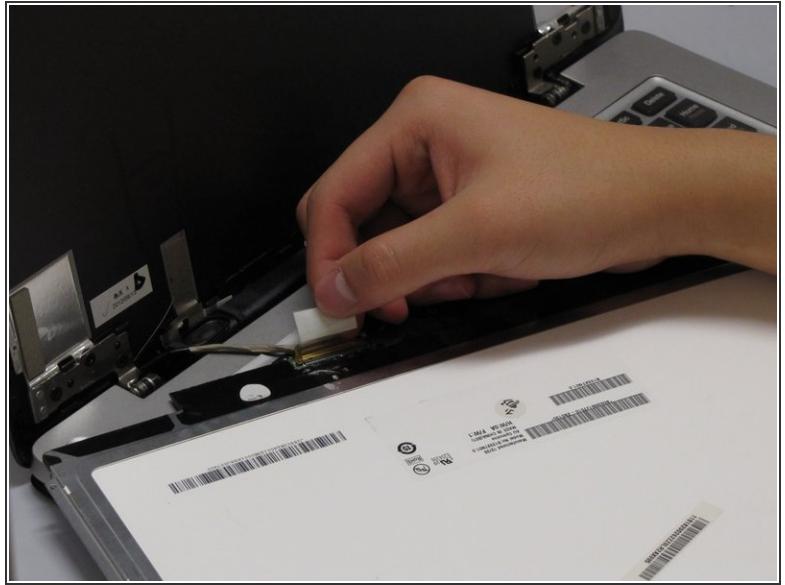

- Peel back the white tape, revealing the power connection.

Step 14



- Unplug the connector, pulling it by the white tape.

To reassemble your device, follow these instructions in reverse order.