



Lenovo ThinkPad X100e Screen Replacement

Use this guide to replace your screen on the Lenovo ThinkPad X100e.

Written By: Jose Orlando Guerra




INTRODUCTION

This guide is for removing the ThinkPad X100e's LCD display and replacing it with a new one.

TOOLS:

- [Spudger \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Screen

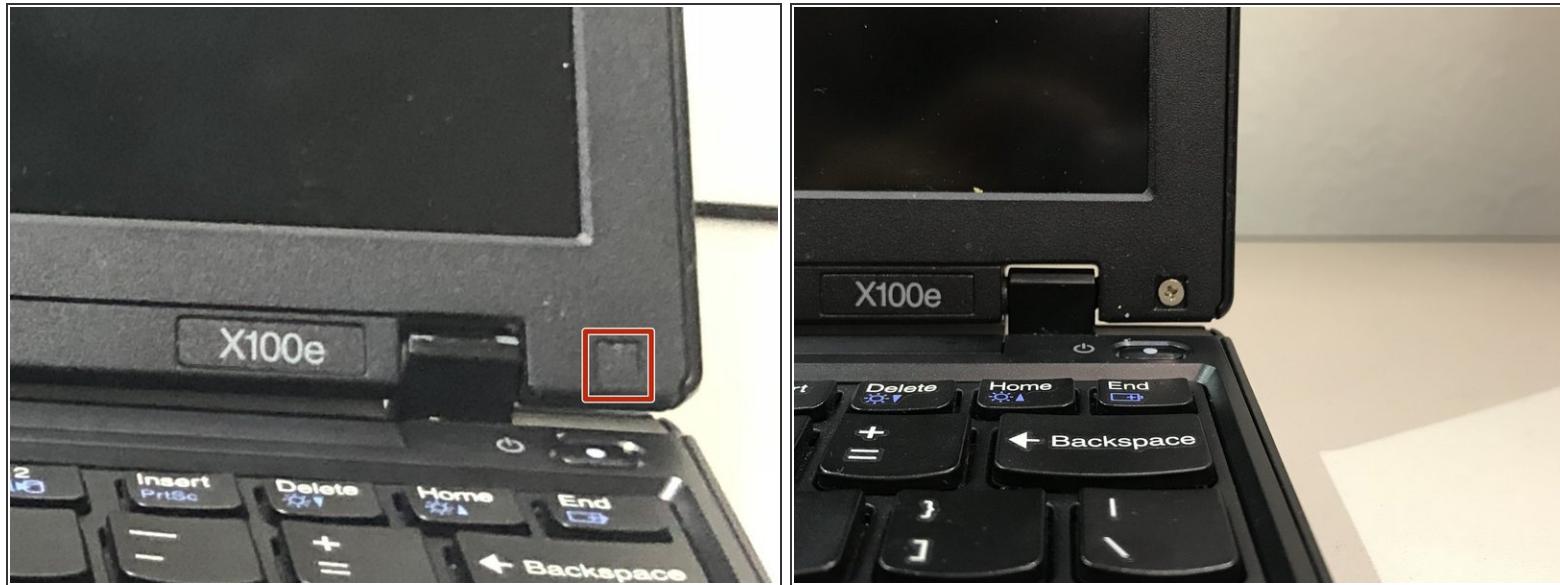


- Use a [Spudger](#) tool to remove the screw covers on each side of the screen.
- ★ Be sure not to lose screw covers.

Step 2



- Using a magnetic screwdriver fit with a PH0 Bit, unscrew the two screws and carefully set the aside.


Step 3

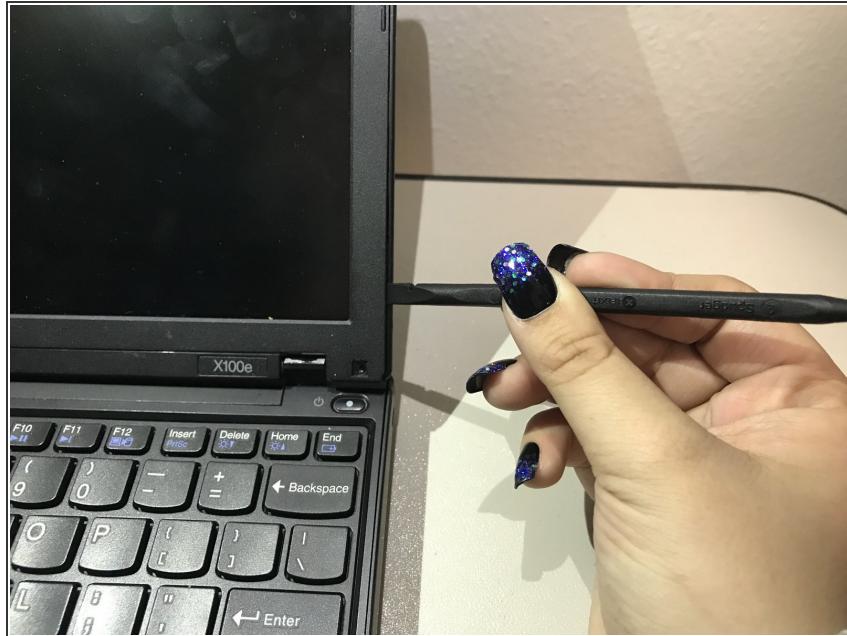

- Pry open the bezel carefully with the spudger tool.

(i) You will want to do this until the frame is completely off.

Step 4

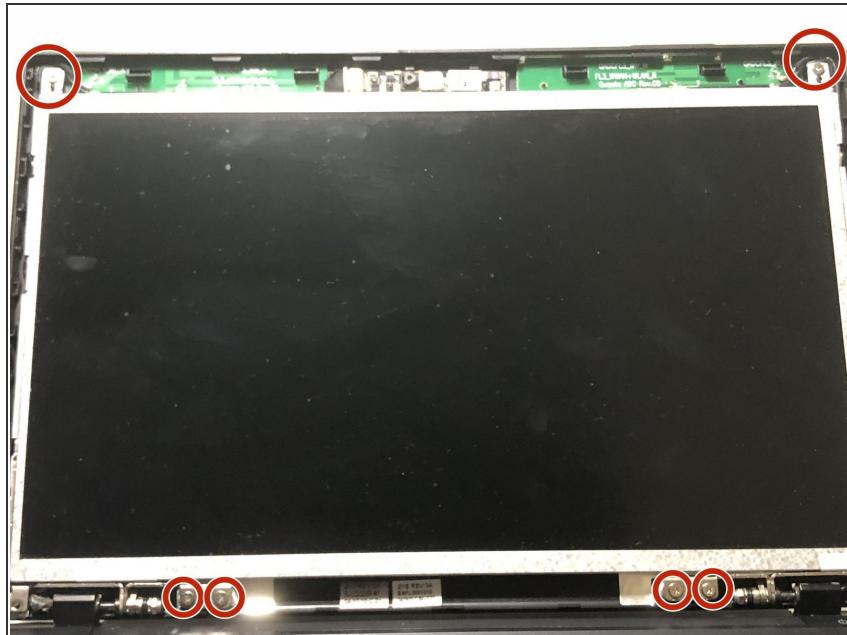

- Remove all exposed screws and carefully set them aside. There should be 6 visible screws.



(i) Be sure to set the screws aside on the magnetic mat.

Step 5




- Lift the screen up carefully, and remove the screws on both sides of the panel. There should be 4 screws.
- ⓘ The other two screws are located in the exact place on the other side.
- ☒ Don't forget to place the screws on the magnetic mat, separate from other screws.

Step 6

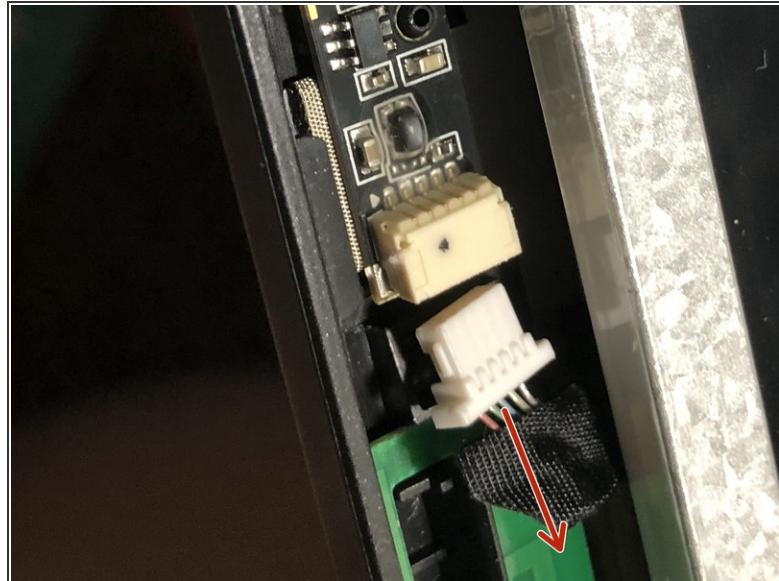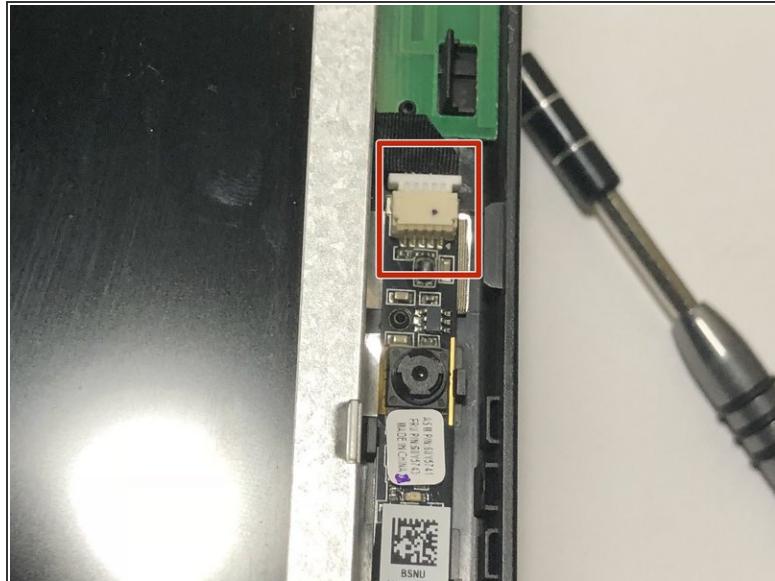

- Remove the connector located at the very top of the screen beside the webcam.
- ⓘ To remove the connector, simply pull the connector out.

Step 7

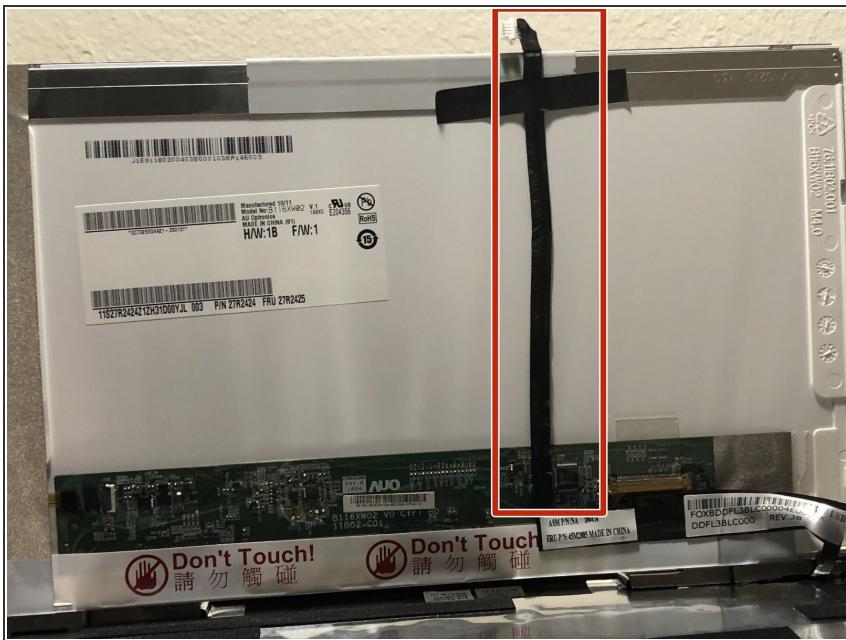

- Fold the panel over until a strip of black tape is visible.
- Peel the tape down until you get to the base.

Step 8



- Peel the piece of transparent tape back.
- At this point there should be some exposed wires underneath the tape.

Step 9



- Remove the connector carefully with the spudger tool.

Step 10



- Remove the black tape fully.
- Now your device is ready for a new panel.

To reassemble your device, follow these instructions in reverse order.