



Mac Mini Late 2014 Hard Drive Assembly Replacement

Prereq to remove the hard drive

Written By: Sam Goldheart




INTRODUCTION

Prereq only

TOOLS:

- T8 Torx Screwdriver (1)

Step 1 — Hard Drive Assembly

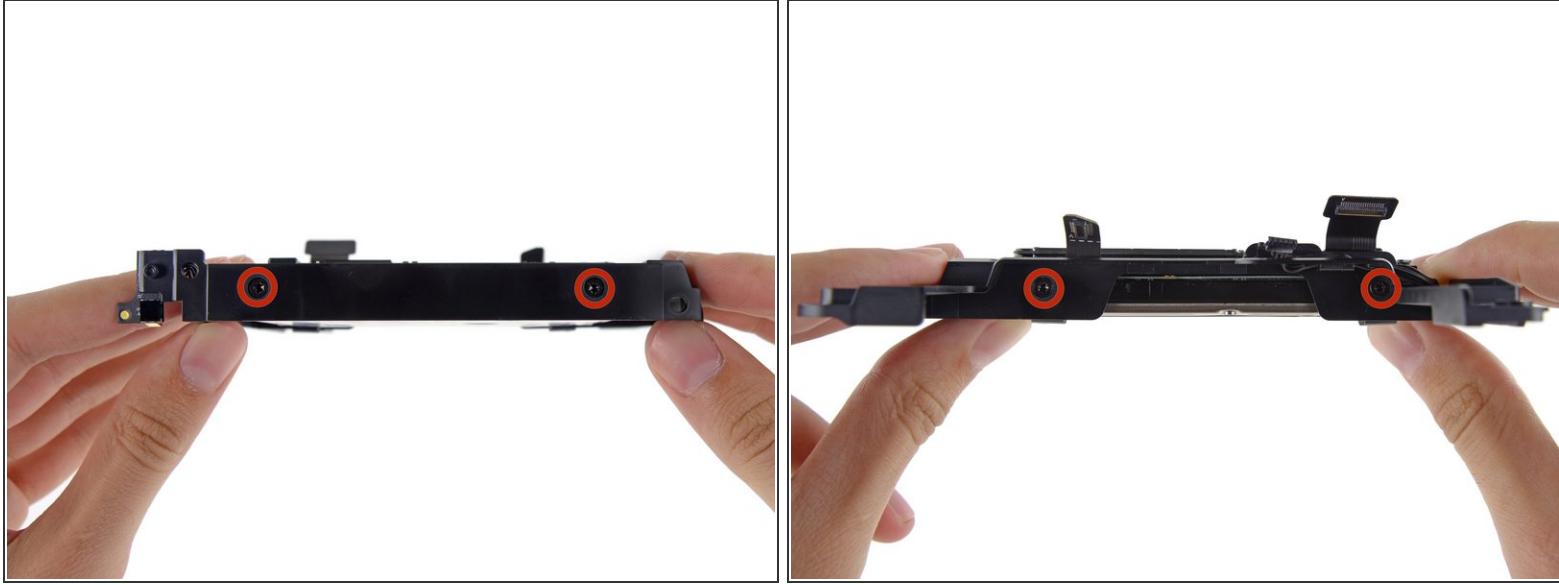

- Remove the four (two on each side) 6.5 mm T8 screws securing the hard drive to the drive tray.

Step 2



- Lift the hard drive up and remove it from the drive tray.

 During reassembly, be sure to thread the hard drive cable through the slot in the drive tray.

To reassemble your device, follow these instructions in reverse order.