




Mac Pro Late 2013 Interconnect Board Replacement

Replace the Interconnect Board in your Mac Pro Late 2013.

Written By: Andrew Optimus Goldheart

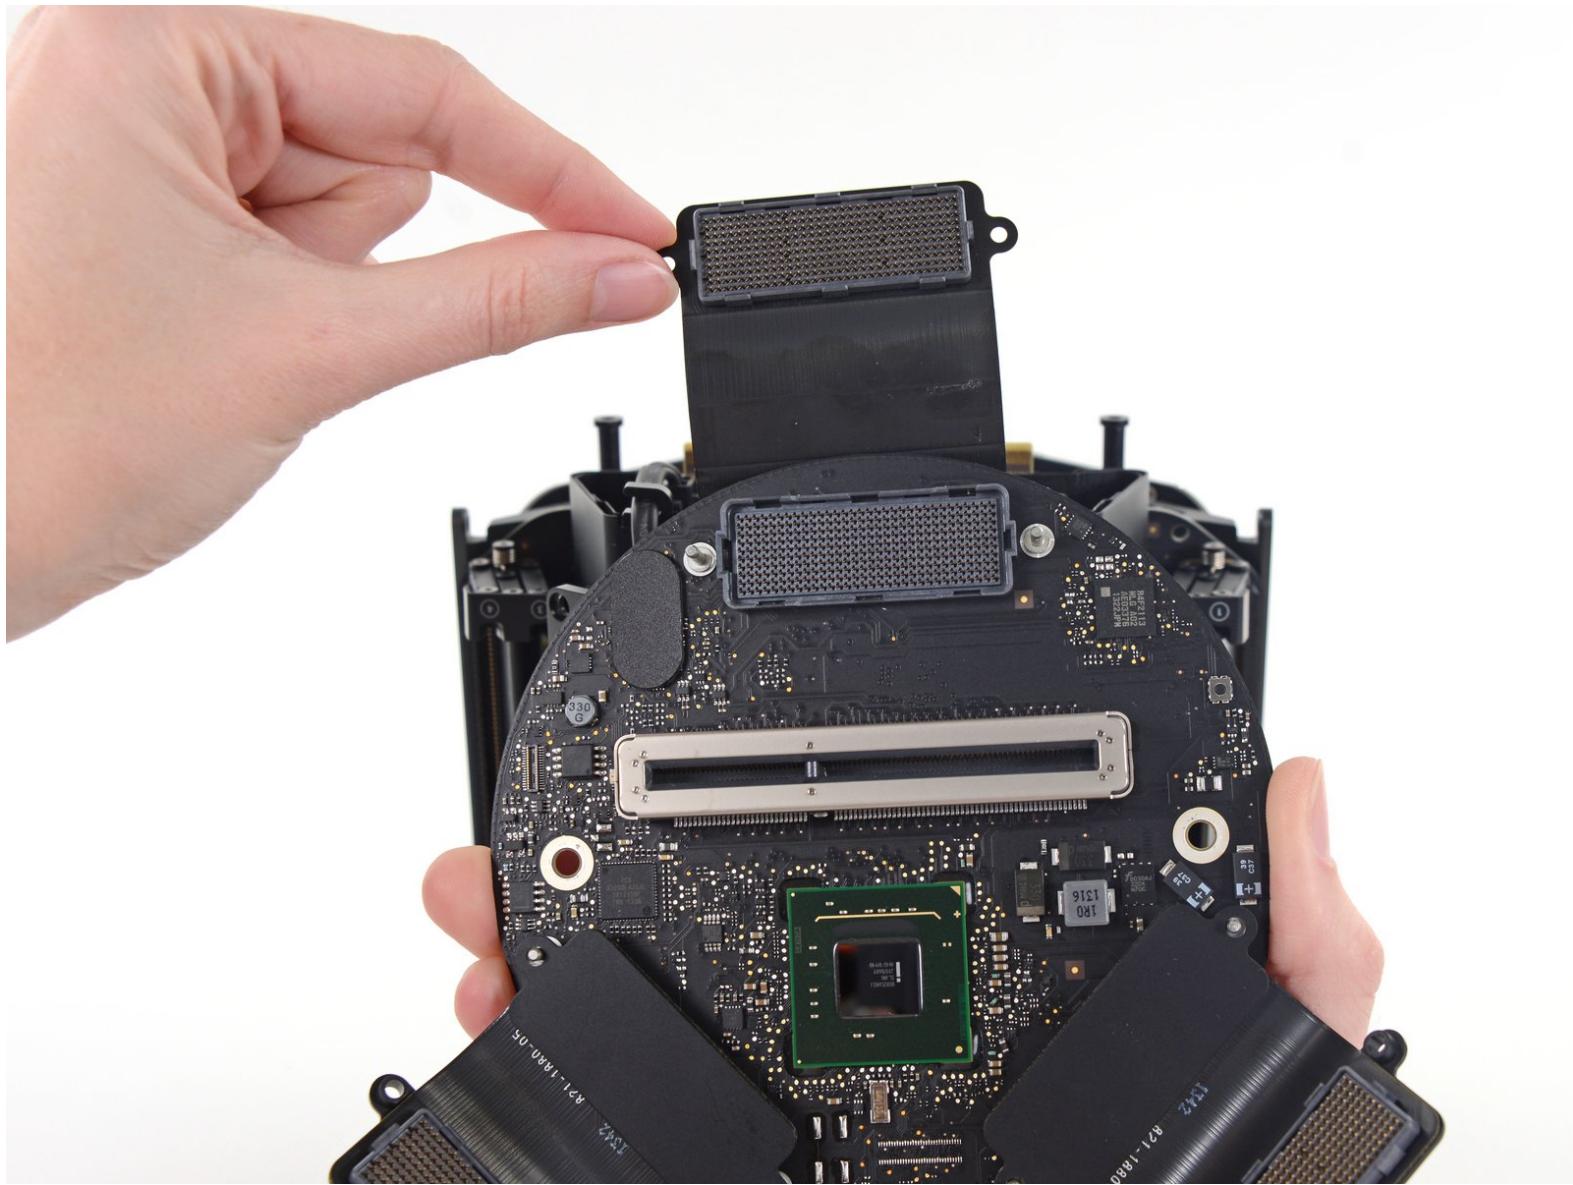

INTRODUCTION

The interconnect board hosts connections to the logic board, IO board, and both GPUs. Use this guide to remove and replace the interconnect board.

TOOLS:

- [T7 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [T10 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Case



- Slide the lock switch to the right, to the unlocked position.

Step 2



- Lift the outer case straight up off the Mac Pro.


(i) It may help to push down on the center of the fan while lifting the case up.

Step 3 — Fan Assembly



- Remove five 5.1 mm T10 Torx screws from around the outer perimeter of the fan assembly.

Step 4

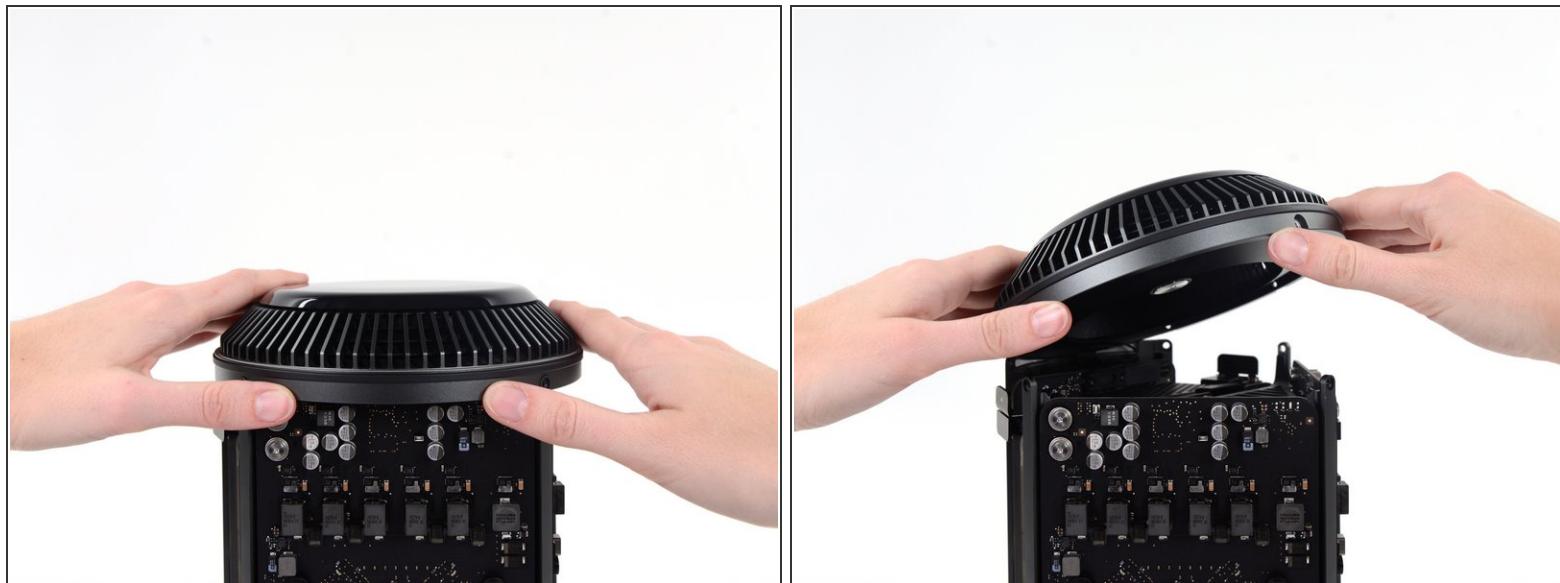

(i) The fan assembly is attached to the rest of the computer by two cables on the IO board side.

- Tilt the assembly up away from the IO board.

⚠ Do not try to remove the fan assembly yet, as it is still attached by two cables.

Step 5



- While supporting the fan assembly with one hand, loosen the two T7 captive screws in the fan cable bracket.


⚠ These screws are captive in the Mac Pro. Do not try to remove these screws from your Mac Pro.

Step 6




- Use a pair of tweezers to pull the fan cable bracket away from the fan assembly.

Step 7

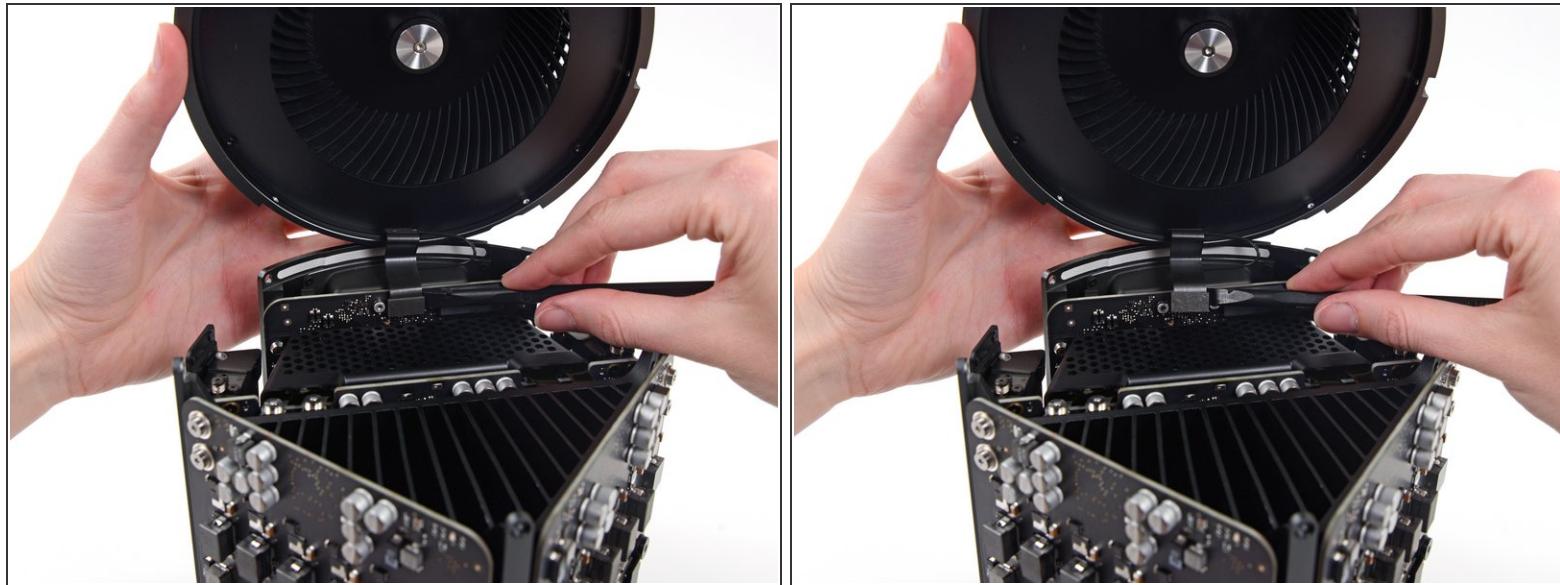

- Use the flat end of a spudger to disconnect the fan assembly ribbon cable from the IO board.

Step 8

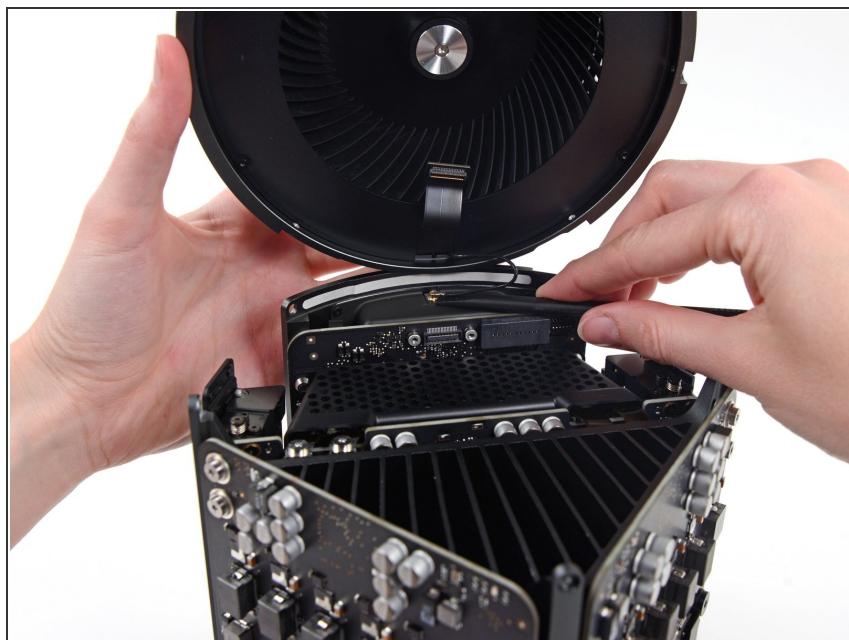

- Disconnect the fan assembly antenna cable from the IO board.
- Remove the fan assembly from the Mac Pro.

Step 9 — Lower Case



ⓘ Flip the Mac Pro upside down, 180 degrees.


- Remove five 5.1 mm T10 Torx screws from the outer perimeter of the lower case.

Step 10



- Carefully lift the lower case up and remove it from the Mac Pro.

Step 11 — Interconnect Board

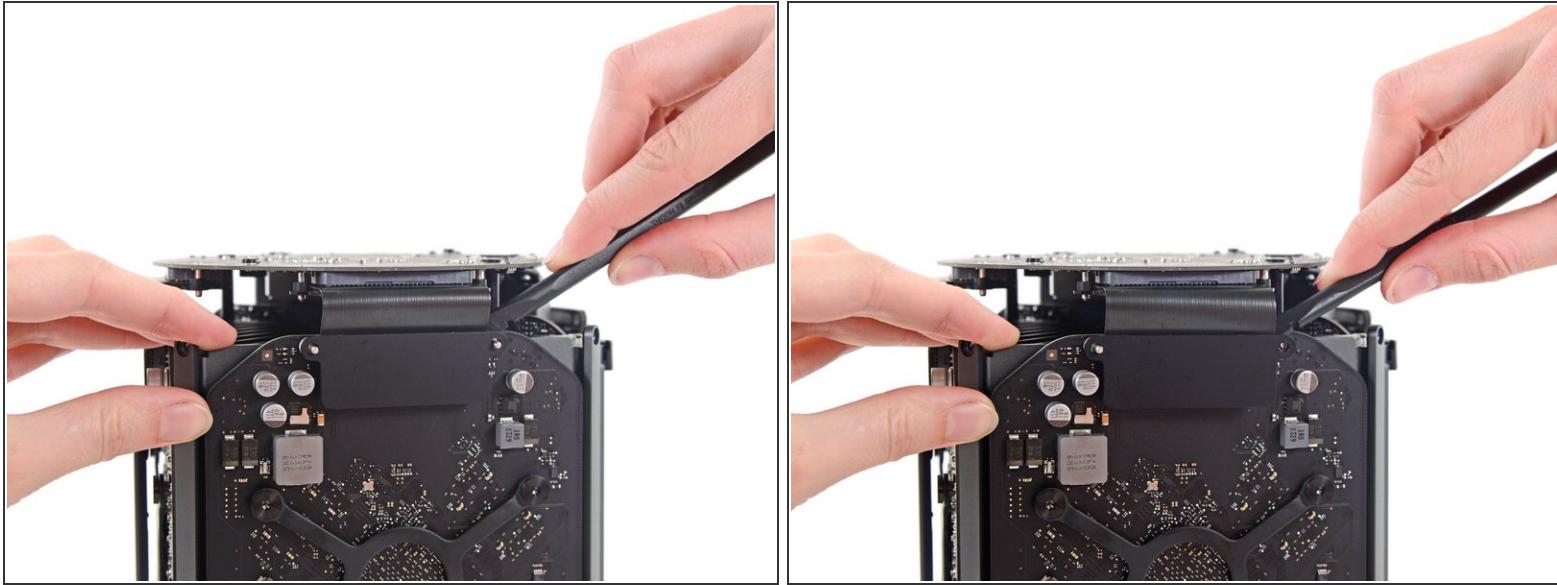

- Use the flat end of a spudger and a twisting motion to gently separate one side of the graphics card data connection.


Step 12



- Gently separate the other side as well.
- Flip the connector up and out of the way of the graphics card.

ⓘ Repeat this procedure on the other graphics card.

Step 13

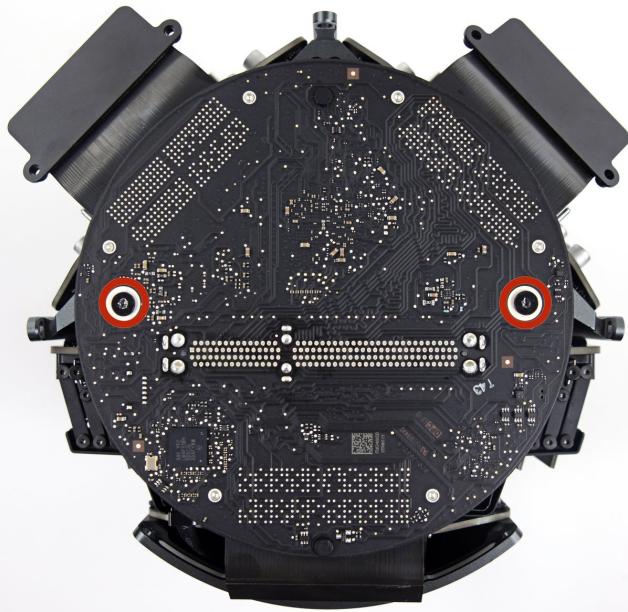

- Remove the two 6.0 mm T7 Torx screws securing the interconnect board to the heat sink.

Step 14




- Gently walk the interconnect board straight up off the logic board's slot connection.

(i) It is recommended to lift one side and then the other.


! Do not try to remove the interconnect board from the Mac Pro yet, as it is still connected to the IO board.

Step 15

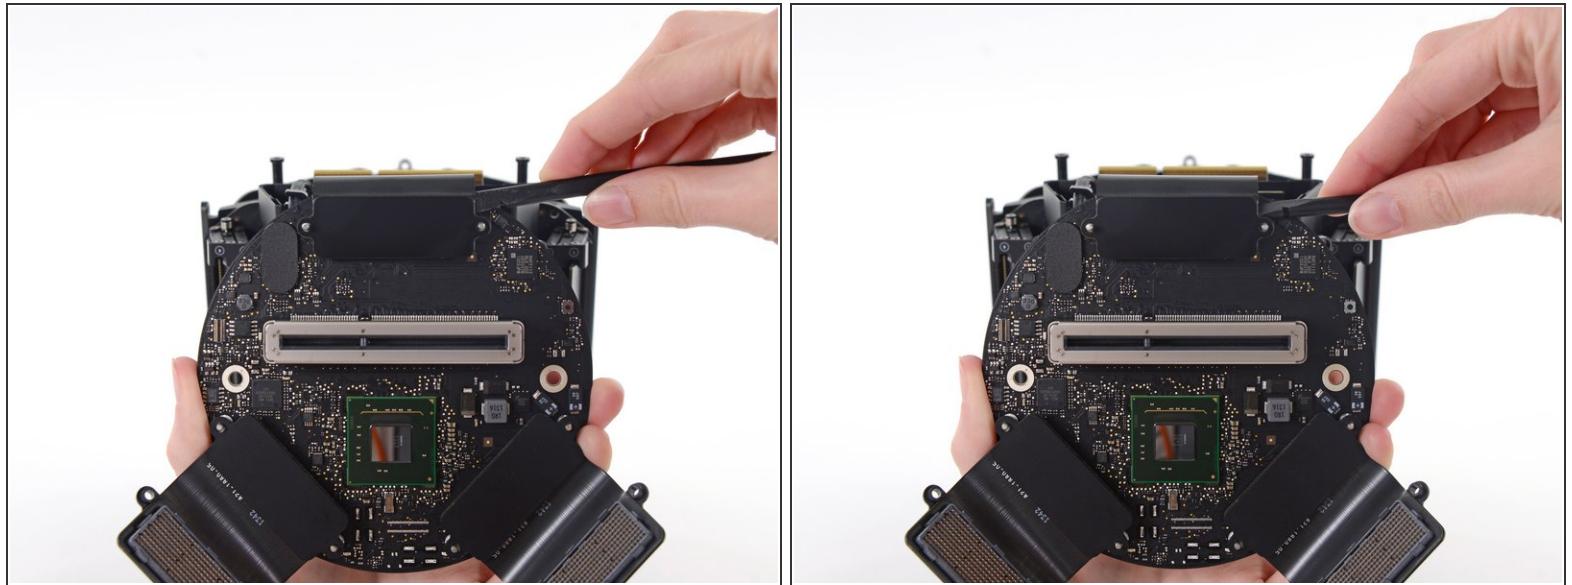

- Flip the interconnect board up and over, exposing the IO board data cable.
- Use the same sort of twisting and spreading motion with the flat end of a spudger to separate one side of the IO board data cable.

Step 16

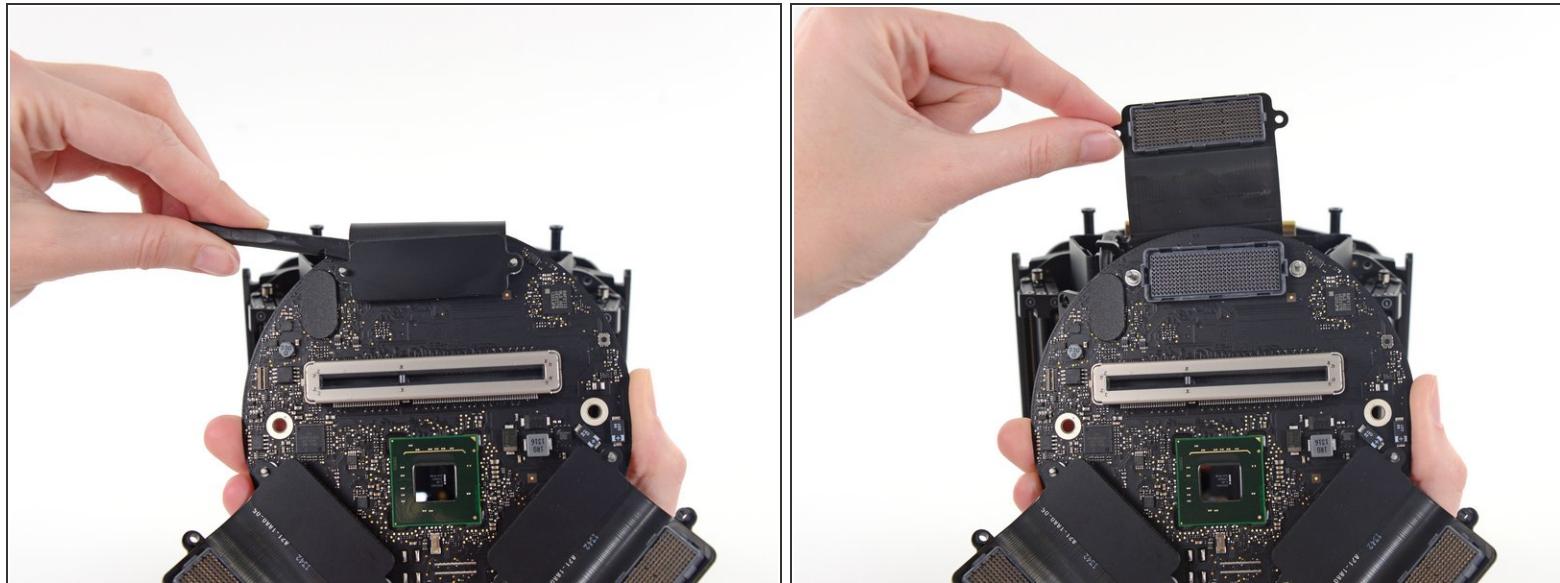

- Use the flat end of a spudger to separate the other side of the IO board data cable.
- Bend the cable out of the way and remove the interconnect board from the Mac Pro.

To reassemble your device, follow these instructions in reverse order.