



MacBook Pro 13" Retina Display Early 2015 Trackpad Cable Replacement

Prereq only



Written By: Sam Goldheart



 **TOOLS:**



- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Trackpad Cable

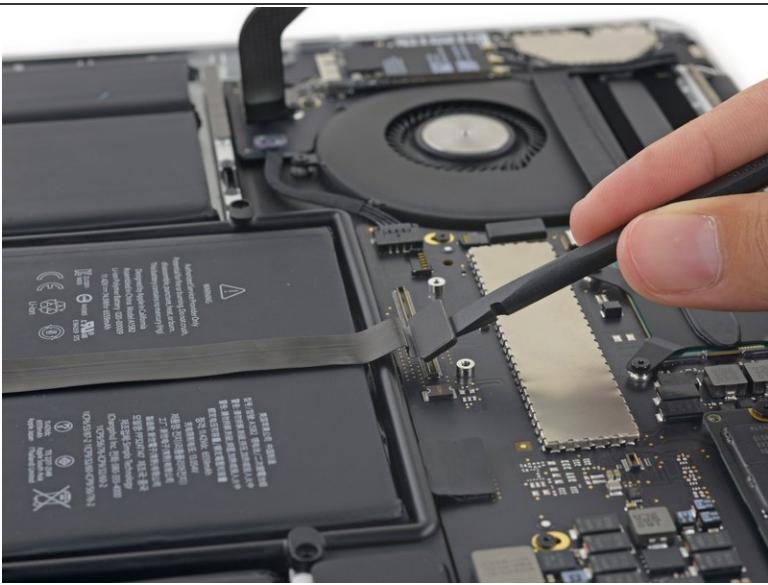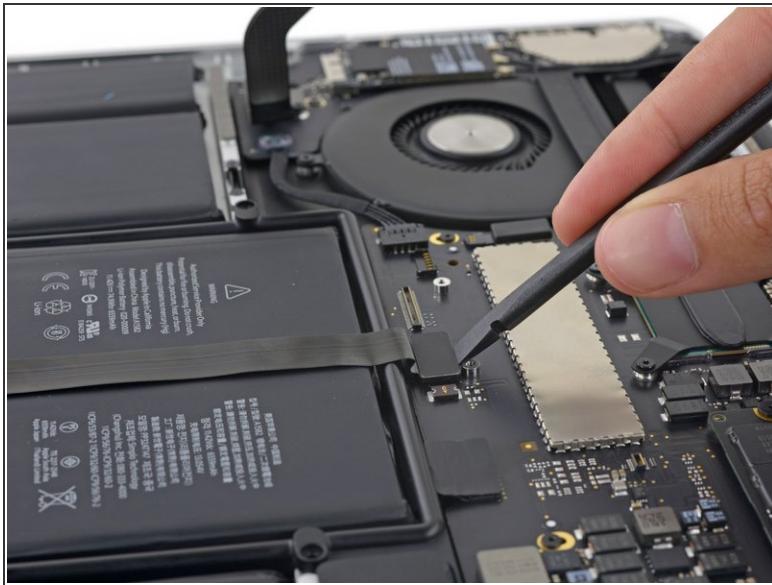

- Use the flat end of a spudger to pop the trackpad connector straight up off its socket on the logic board.

Step 2

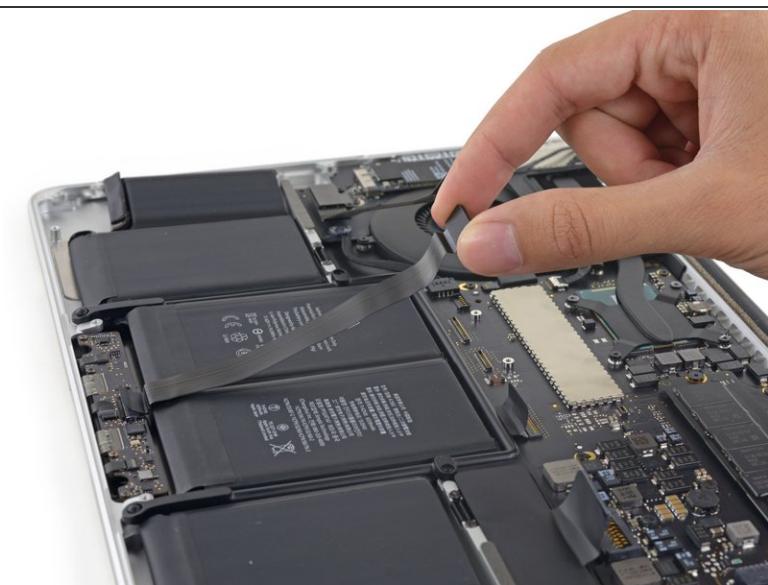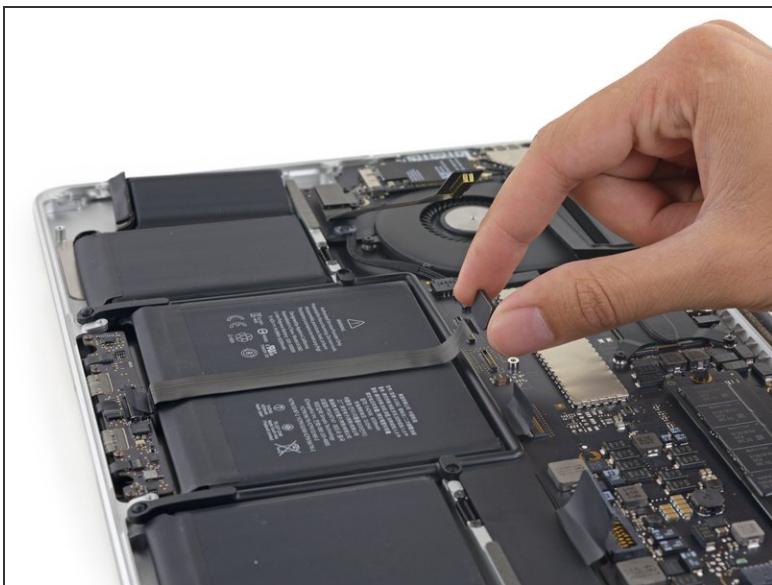

- Lift the trackpad cable up off the battery to separate it from the adhesive securing it.
⚠ Be careful not to damage the cable. If it doesn't peel up easily, apply a little heat from an iOpener, heat gun, or hair dryer to soften the adhesive, and try again.

Step 3




- ⓘ If necessary, peel back any tape covering the trackpad cable connector.
- Use the end of a spudger to flip the retaining tab on the ZIF connector.

Step 4



- Pull the trackpad cable straight out of its ZIF socket on the trackpad control board.

Step 5

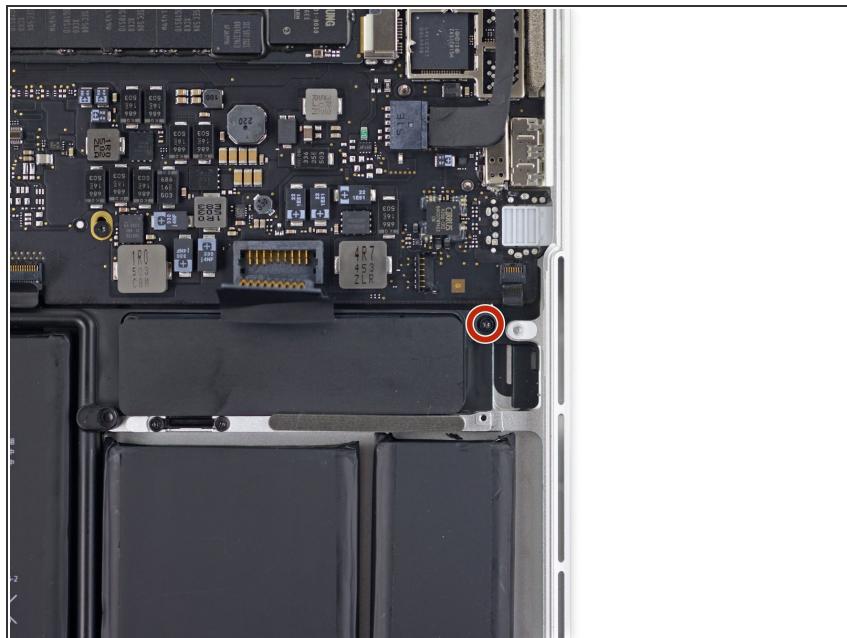

- Remove the single 3.7 mm T5 Torx screw securing the battery board to the upper case.

To reassemble your device, follow these instructions in reverse order.