



# MacBook Pro 13" Retina Display Late 2012

## AirPort Board Assembly Replacement

Prereq for removing the I/O board.

Written By: Walter Galan



## INTRODUCTION

Prereq for removing the I/O board.

### TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — AirPort Board Assembly



- Remove the single 2.7 mm T5 Torx screw securing the AirPort board to the I/O board.

## Step 2

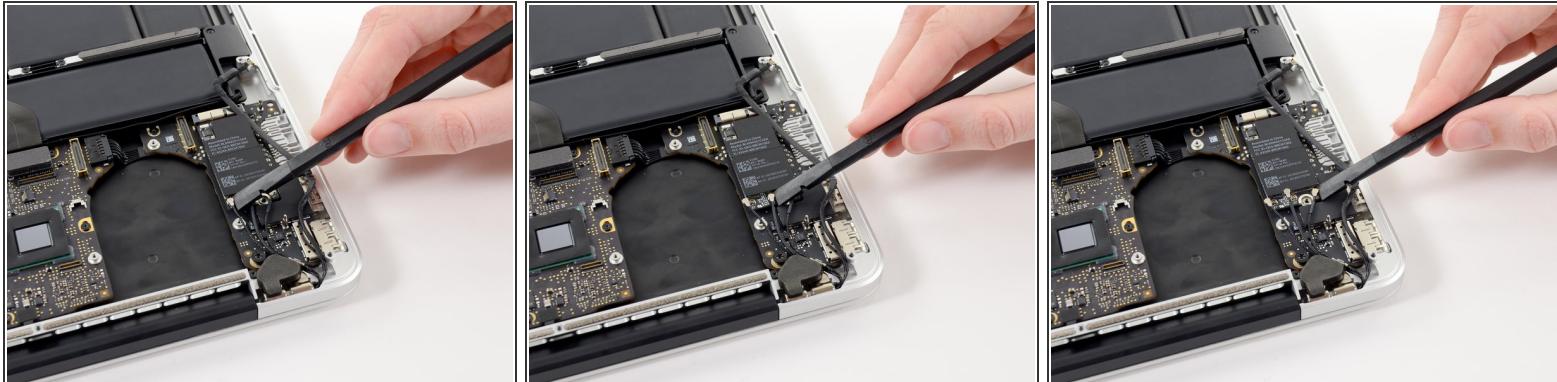


- Use the flat end of a spudger to pry and disconnect the three antenna cable connectors from the AirPort board.

 The three cables are coded with black sleeves of different lengths. During reassembly:


- Connect the long-sleeved cable to the center socket.
- The short-sleeved cable connects next to the screw.
- The remaining cable has no sleeve, and connects in the last empty socket, next to the fan.

## Step 3

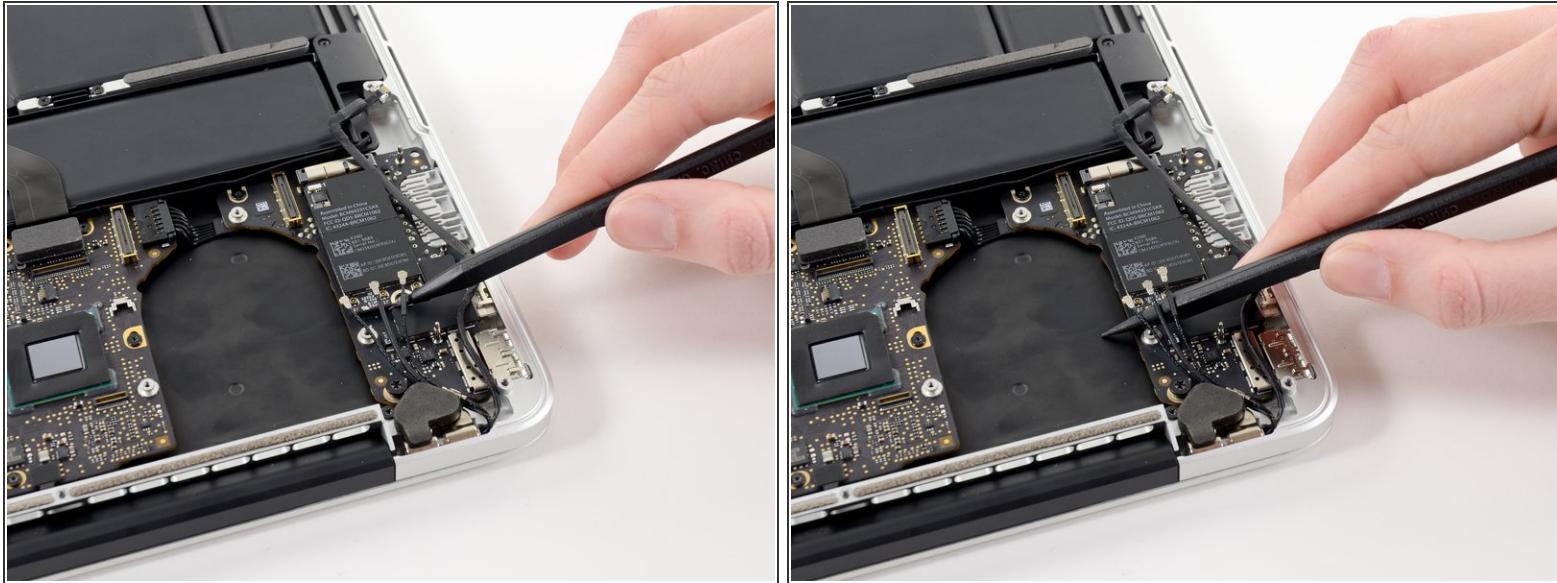

- Move the antenna cables aside, clear of the AirPort board.

## Step 4

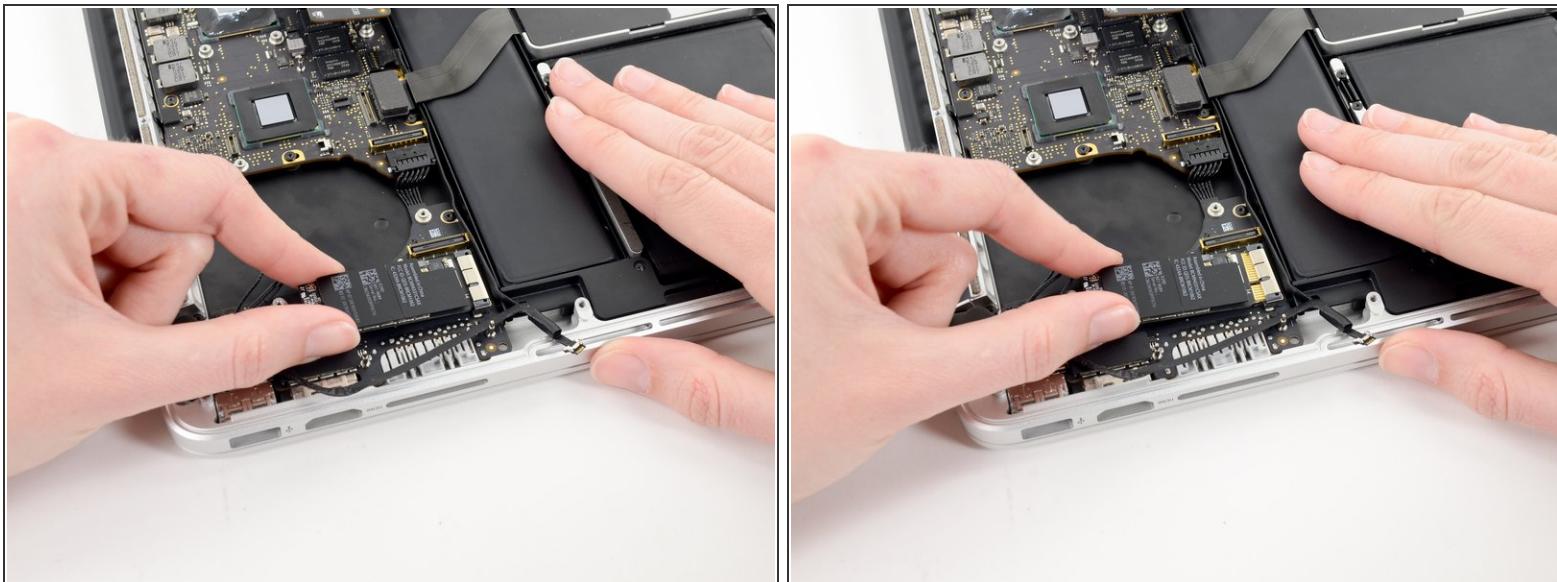

- Pull the AirPort board straight out of its socket on the I/O board.

To reassemble your device, follow these instructions in reverse order.