



MacBook Pro 13" Retina Display Late 2012

Headphone Jack Assembly Replacement

Prereq for removing the upper case.

Written By: Walter Galan



INTRODUCTION

Prereq for removing the upper case.

TOOLS:



- T5 Torx Screwdriver (1)

Step 1 — Headphone Jack Assembly



- Remove the two 3.4 mm T5 Torx screws securing the headphone jack to the upper case.

Step 2

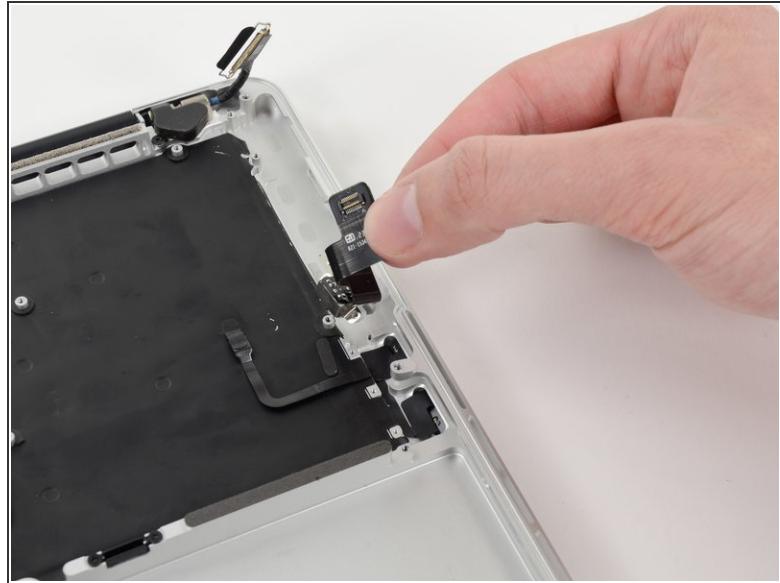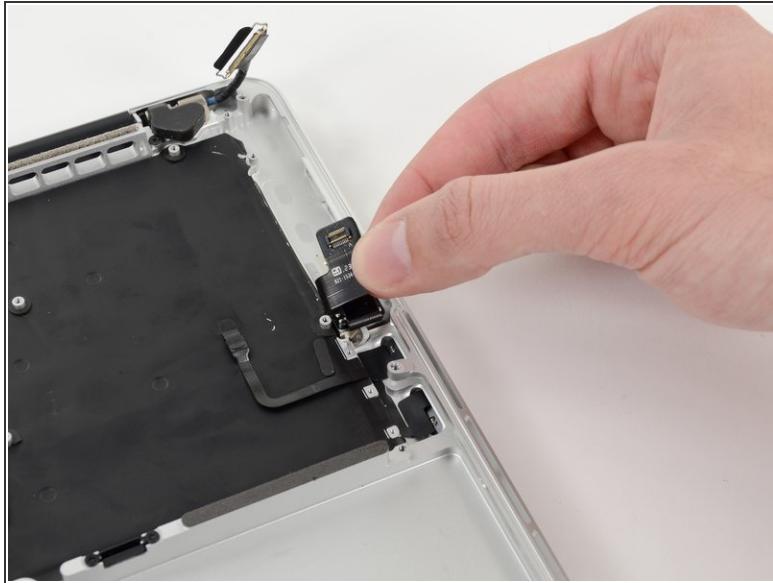

- Lift and remove the headphone jack out of the upper case.

To reassemble your device, follow these instructions in reverse order.