



MacBook Pro 15" Unibody 2.53 GHz Mid 2009

Hard Drive Replacement

Written By: Walter Galan



This document was generated on 2020-03-29 04:09:55 PM (MST).

INTRODUCTION

This guide is an internal private guide used as prereq.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Hard Drive




- Remove two Phillips screws securing the hard drive bracket to the upper case.
- *(i)* These screws are captive to the hard drive bracket.
- Lift the the retaining bracket out of the upper case.

Step 2



- Lift the hard drive by its pull tab and pull it out of the chassis, minding the cable attaching it to the computer.

Step 3

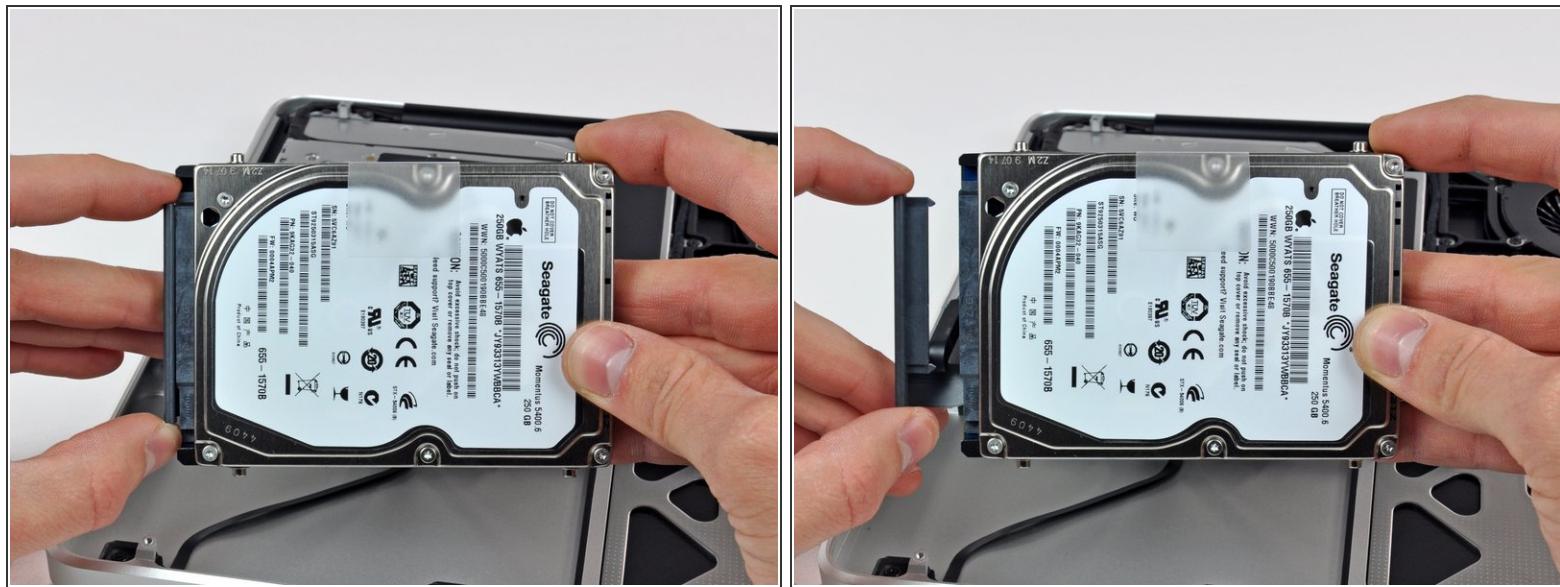

- Remove the hard drive cable by pulling its connector straight away from the hard drive.

To reassemble your device, follow these instructions in reverse order.