



MacBook Pro 15" Unibody Mid 2009 Hard Drive Replacement

Written By: Andrew Bookholt



This document was generated on 2019-09-20 05:06:44 AM (MST)

INTRODUCTION

This guide is an internal prereq that should remain unpublished.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Hard Drive




- Remove the two Phillips screws securing the hard drive bracket to the upper case.
- *(i)* These screws are captive to the hard drive bracket.
- Lift the the retaining bracket out of the upper case.

Step 2



- Lift the hard drive by its pull tab and pull it out of the chassis, minding the cable attaching it to the computer.

Step 3

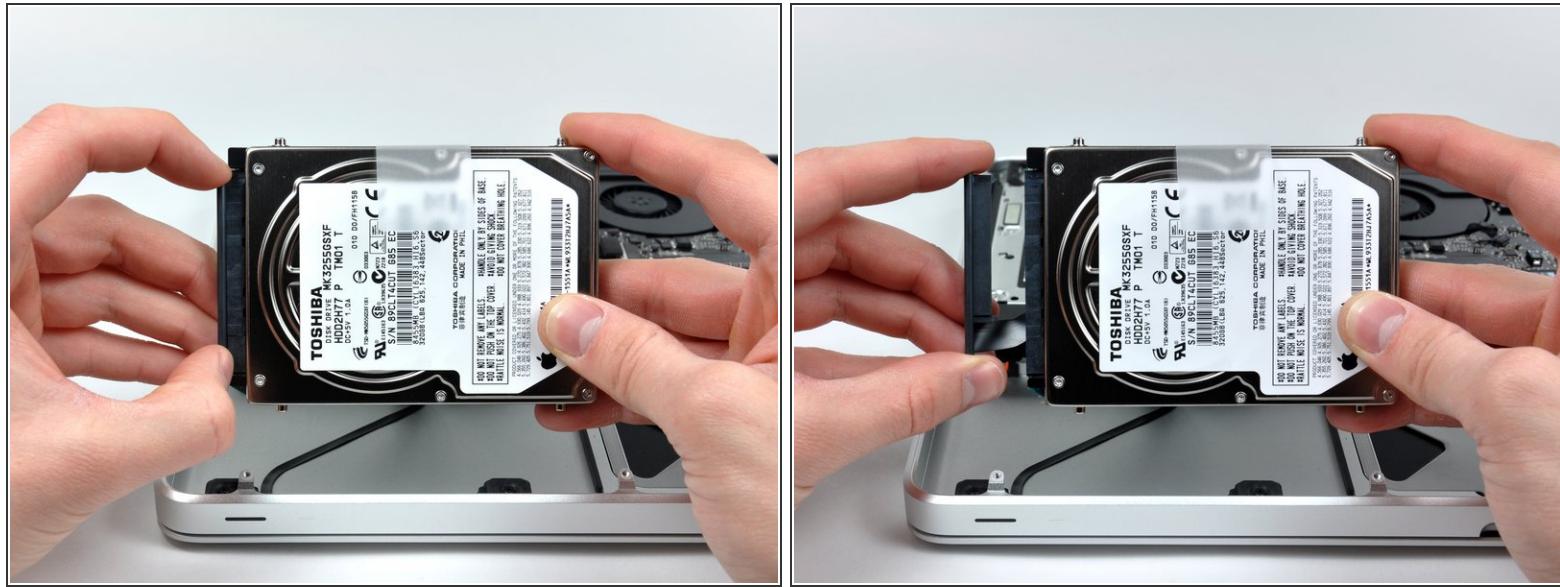

- Remove the hard drive cable by pulling the hard drive straight away from the connector. Keep the connector steady. If pulled by the connector, it can be pulled too far and accidentally tear the hard drive cable.

To reassemble your device, follow these instructions in reverse order.