




Moto X Pure Edition Back Panel Removal

== Prerequisite Only ==

Written By: Lucas Dos Santos

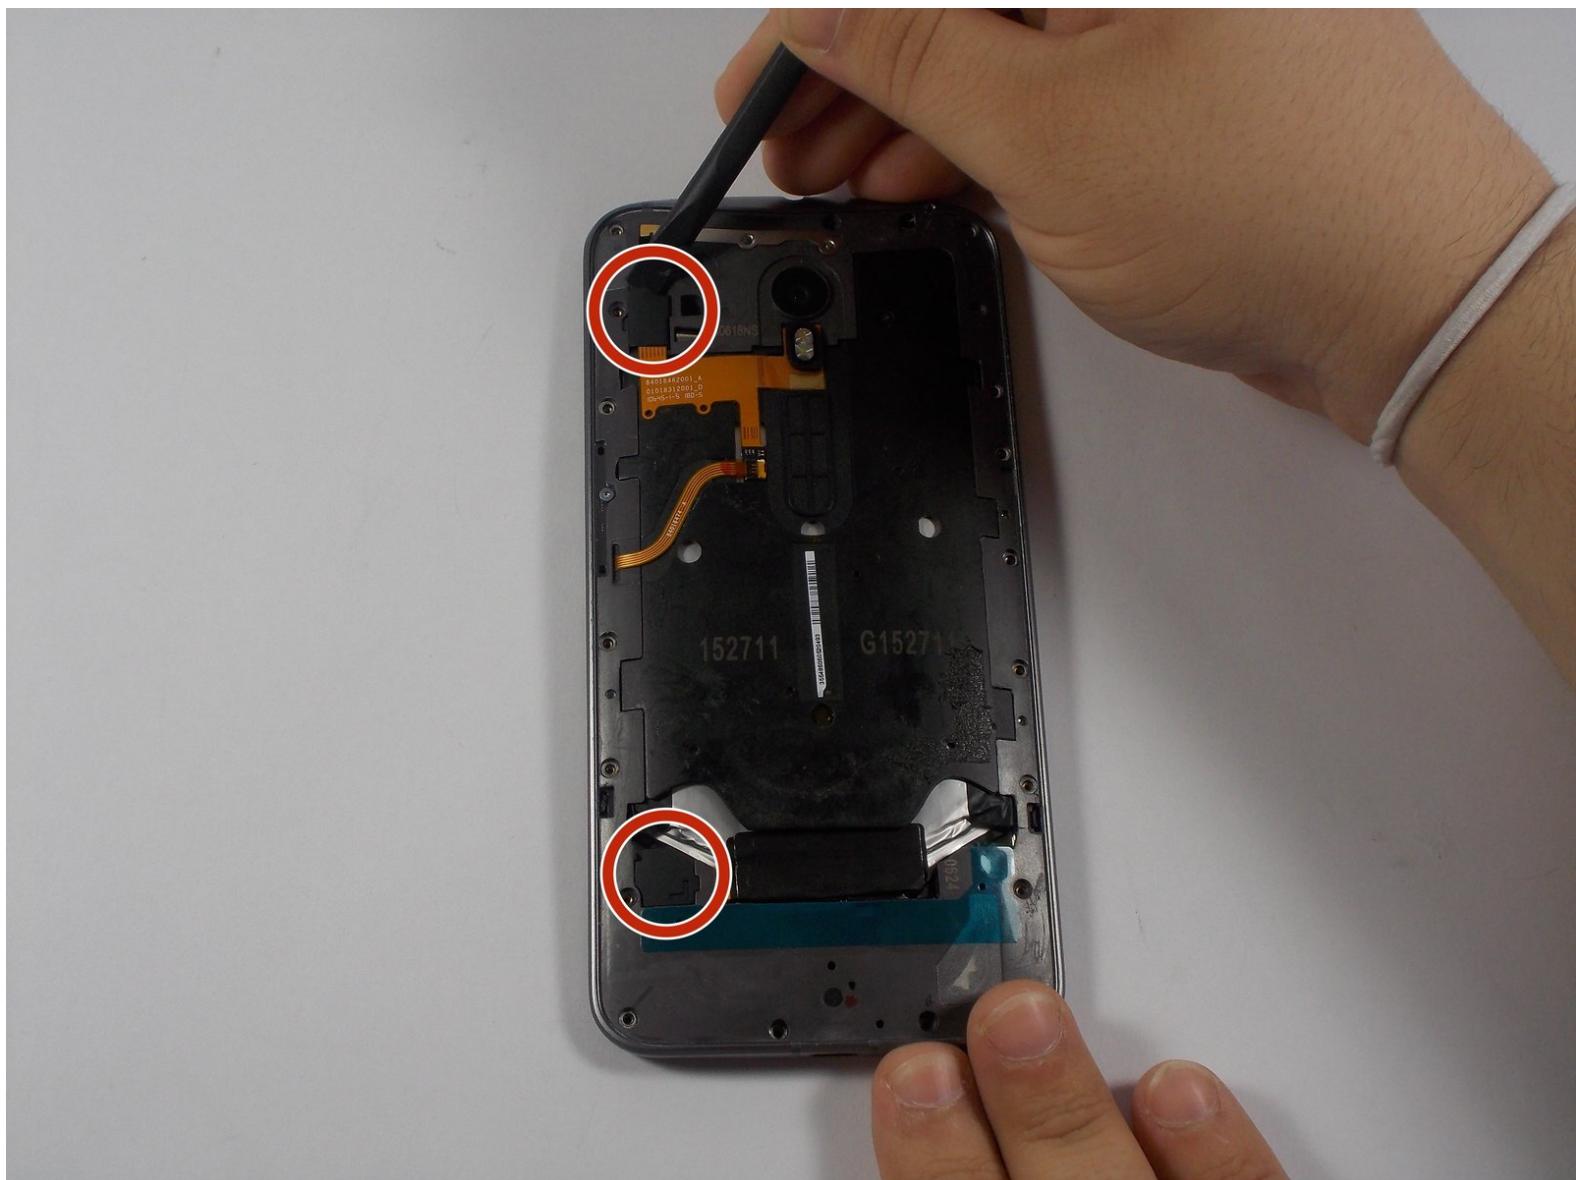


INTRODUCTION

This is an old version of this guide. See the [new version](#) for the most up-to-date process.

TOOLS:


- [SIM Card Eject Tool](#) (1)
- [Spudger](#) (1)
- [T3 Torx Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

Step 1 — Back Panel

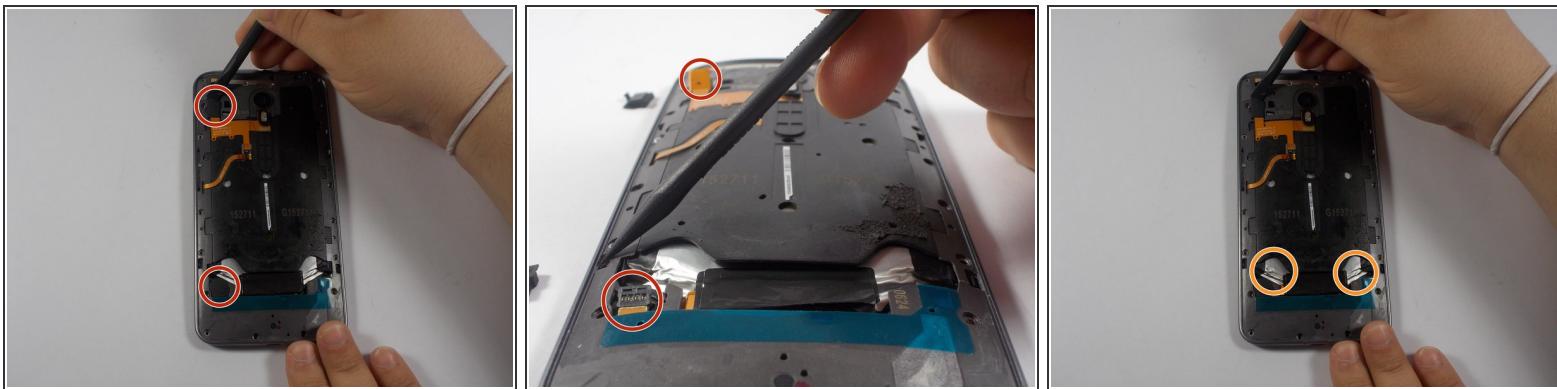

- Disconnect the two battery connections.
- Remove the two parallel black tabs by pulling on them.

Step 2

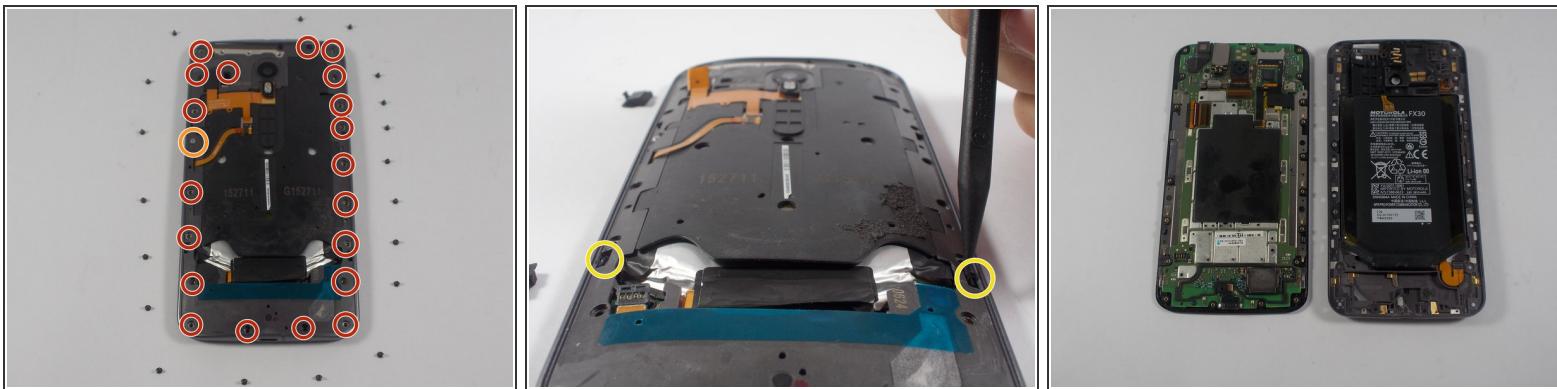

(i) All screw lengths are 2.5mm

- Using the T3 screw driver, remove all 20 T3 screws.
- Do NOT remove the silver screw circled in orange.
⚠ This holds in the Power/Volume buttons and is not necessary to remove. There are 2 very tiny springs behind the volume buttons that are easy to lose if you remove this screw.
- Using the nylon spudger, remove the two clips holding the panel in place.

To reassemble your device, follow these instructions in reverse order.

