



Motorola Moto E 2nd Generation Battery Replacement

This guide will show the necessary steps to replace a faulty battery.

Written By: Andre Romualdo



INTRODUCTION

The battery on this phone is under the motherboard and will require the removal of the display, few screws, connectors and plastic parts.

If your battery is swollen, [take appropriate precautions](#).

TOOLS:

- iFixit Opening Tools (1)
- Metal Spudger (1)
- T4 Torx Screwdriver (1)
- Heat Gun (1)

PARTS:

- Motorola Moto E2 Replacement Battery (1)


Step 1 — Display Assembly



⚠ Turn off the device before beginning your repair.


⚠ Using a heat gun, carefully apply heat around the edges of the display to soften the glue. Heat should be applied to the point where the phone isn't too hot to touch, but close enough.

Step 2

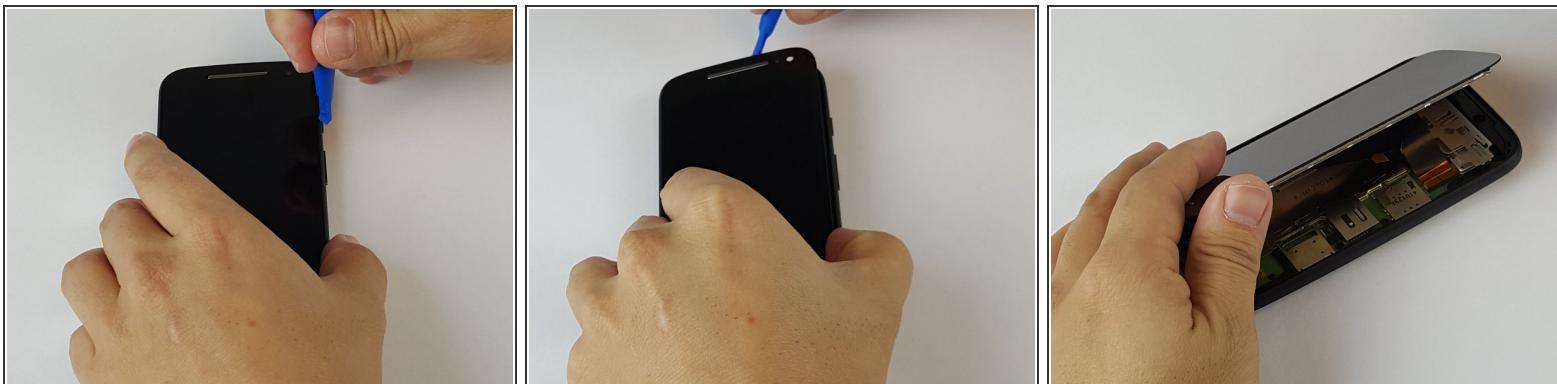

- Using the small plastic opening tool, pry and slide all the way around the phone while carefully lifting up on the display.
- ⓘ The screen is secured by two-sided tape located on the edge.

Step 3

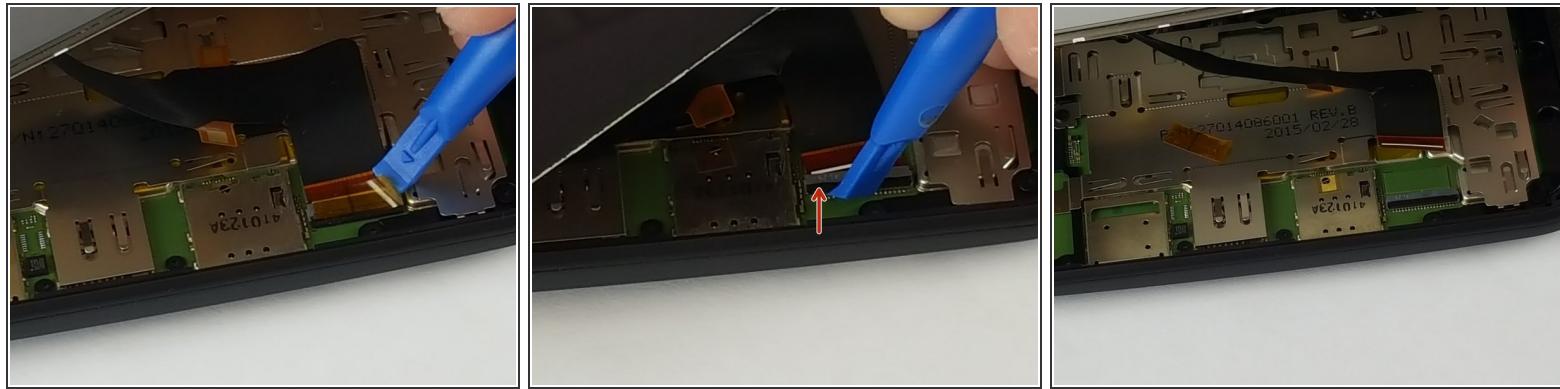

- Once display is fully unglued from the frame, carefully lift it up and locate the display connector.
- Using the same small plastic tool, carefully remove the yellow tape off the connector.
- Now carefully undo the black connector lock by lifting it up in the direction of the red arrow.
 Do not pry on the gray part of the connector.
- Lastly slide the display cable off the connector. It should easily slide off, if not make sure the black lock is fully unlatched.



Step 4 — Earpiece Speaker



- Now that the display is out, remove the aluminum shield off the motherboard.
- Unscrew the single 4mm screw located on the top using a T4 Torx bit.
- After screw is out, gently remove the aluminum shield off the motherboard.


i Working on a magnet board is recommended as the screws are small and can be easily misplaced.

Step 5

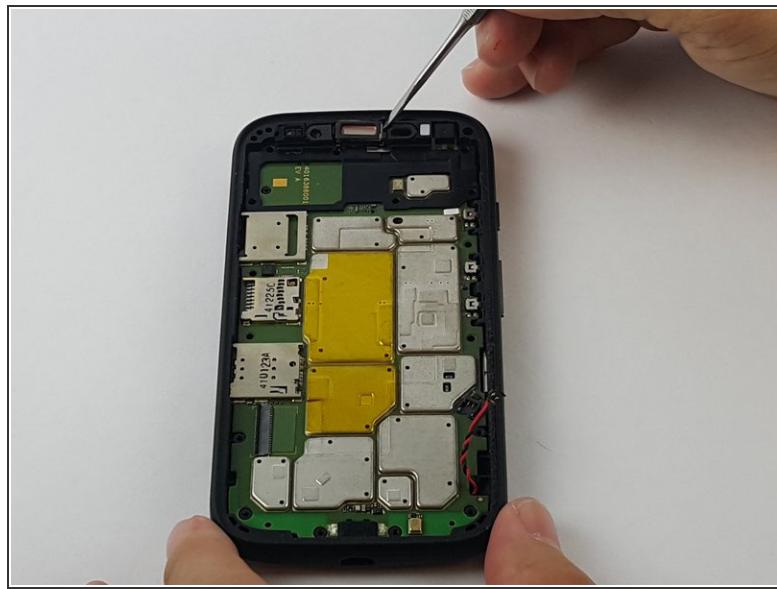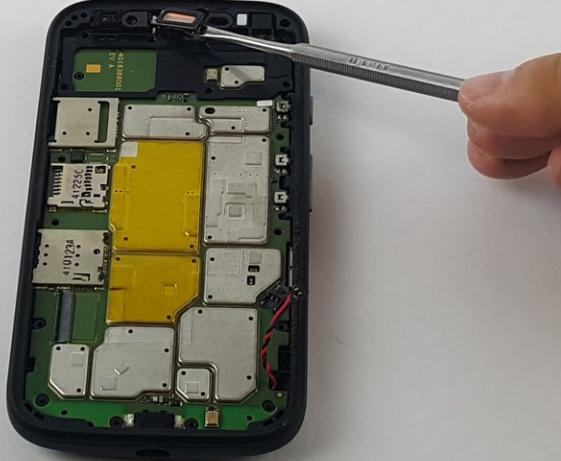


- Using the metal spudger tool, very carefully remove the speaker by first gently prying up on the right side and then the bottom.
- *(i)* The ear piece is held by double sided tape and clips to the motherboard so be very careful.

Step 6 — Motherboard

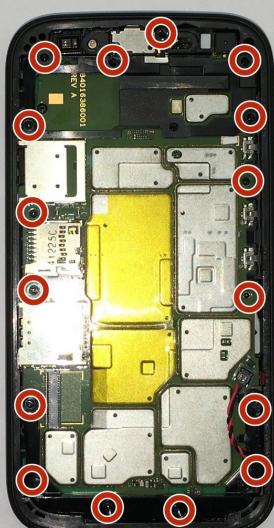


- Unscrew the remaining 16- 4mm screws using a T4 Torx bit.
- *(i)* Using a magnet board is recommended as the screws are small and can be easily misplaced.

Step 7

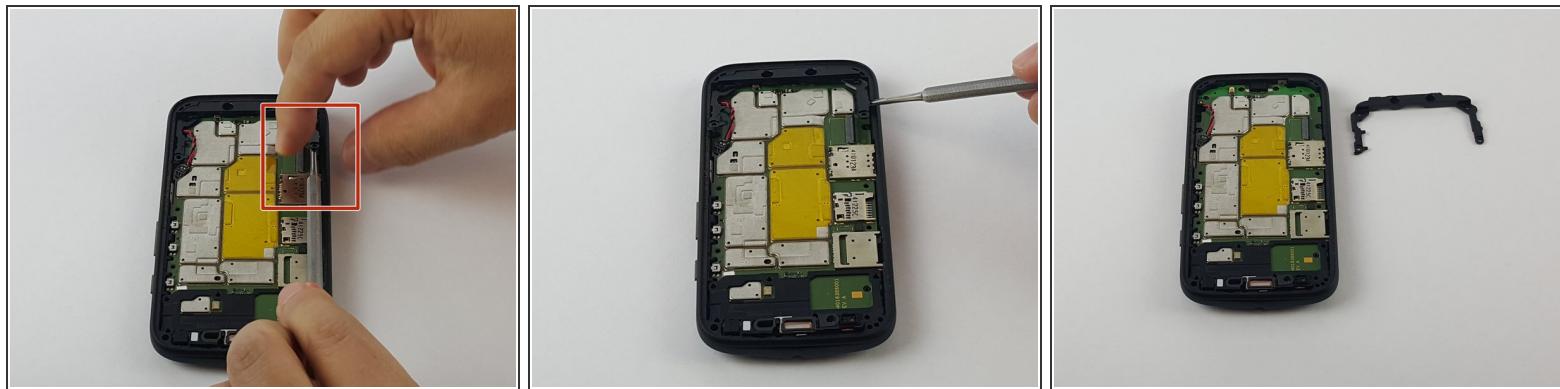


- Next remove the plastic C-shaped black plastic frame.
- Using the metal spudger tool, gently pull up the right corner as indicated and work your way around until it's off the motherboard.

Step 8

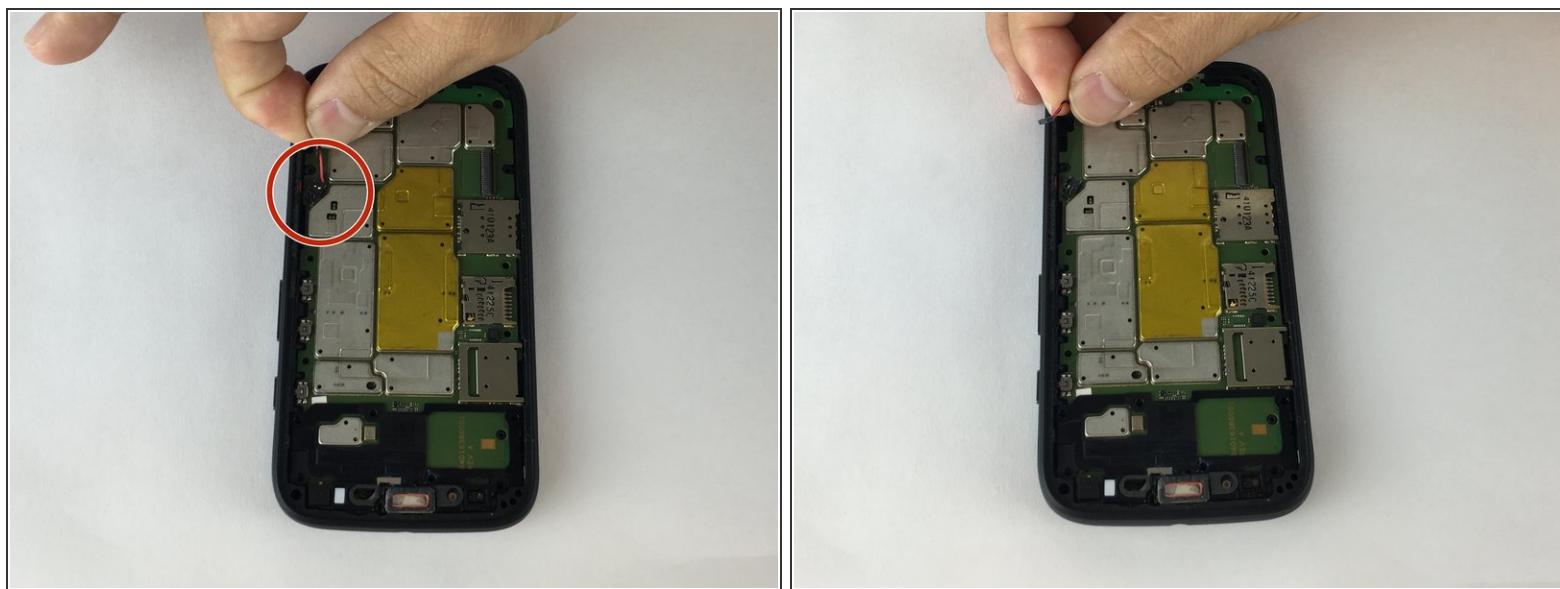

- Gently lift up the battery cable connector, it should come out very easy.

Step 9

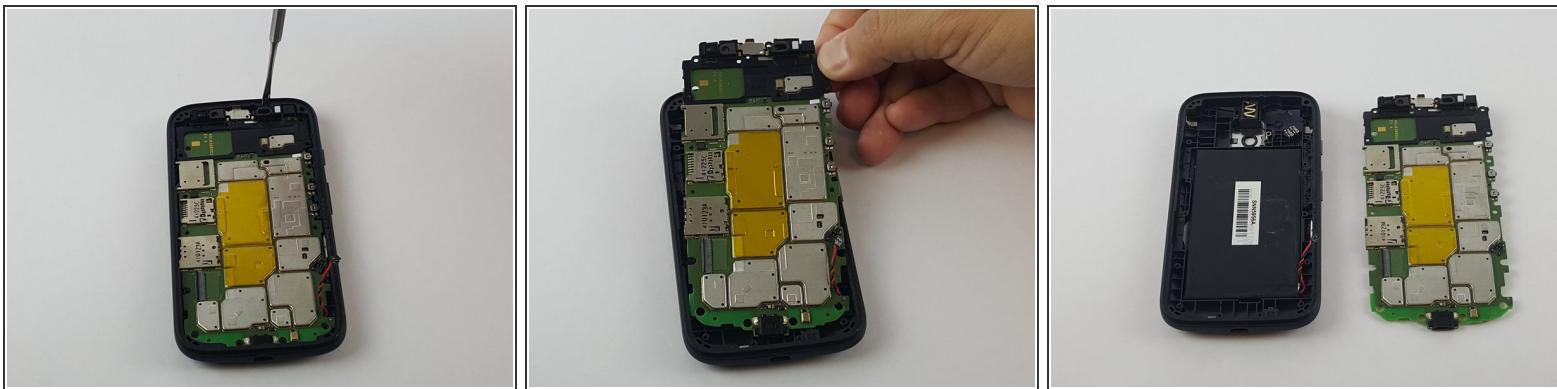

- After the battery cable is disconnected from the motherboard, use the metal spudger tool and carefully insert it in the small opening by the speaker and pry the motherboard up enough to fit your finger in between the motherboard and the phone frame.
- Now just pull the motherboard starting from the top to bottom off the phone case.

Step 10 — Battery



- Use a spudger to gently pry up the battery.

⚠ It's best to use a non-metal spudger whenever possible, as a metal spudger is much more likely to accidentally puncture/damage the battery.

i The battery is stuck to the plastic case with double sided tape.

- Obtain a new battery and place it into the plastic casing using double sided tape or whatever is provided with the new battery.

To reassemble your device, follow these instructions in reverse order.