



Motorola Moto G 1st Generation Headphone Jack Replacement

A guide for replacing the Headphone jack on your Moto G.

Written By: Radostin Lobodov



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Rear Panel



- ⓘ Before you start following any of the steps of this guide, completely turn the device off.
- Take the plastic back cover off by either using a plastic Pry tool or simply using your hands. Start from the bottom by the charging port

Step 2 — Removing the Screws




- Unscrew the 3.5mm screws, total of 14, located on the back protective cover by using a T5 Torx screwdriver.

Step 3 — Removing the Battery Cover



- Use a plastic opening tool to remove the protective cover.
- ⚠ Carefully work the plastic tool around all the edges of the phone.
- ⓘ The protective cover holds the Volume and the Home buttons which might fall off the assembly when the cover is removed.

Step 4 — Removing the Headphone Jack

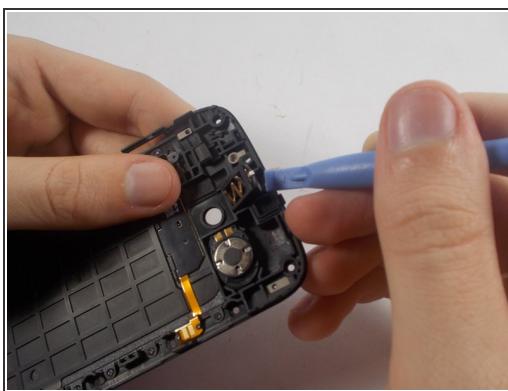

- Use the plastic opening tool to remove the Headphone Jack from the protective cover and replace it.

To reassemble your device, follow these instructions in reverse order.