



Motorola Photon 4G MB855 Headphone Jack Replacement

How to replace the Headphone Jack on a Motorola Photon 4G.

Written By: Eddie Krause



INTRODUCTION

If you are unable to use your headphones properly, the headphone jack may be faulty and needs to be replaced. Use this guide to replace your headphone jack.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [T4 Torx Screwdriver](#) (1)

Step 1 — Removing the Back Cover



- Insert a plastic opening tool into the indentation at the bottom of the phone between the front and rear covers.
- Lift the back cover from the bottom and remove it from the phone.

Step 2 — Removing the Battery



- Insert a plastic opening tool, or your finger, into the notch in between the sim card and the battery and lift the battery upward.
- Remove the battery from your phone.

Step 3 — Removing Screw Covers



- Remove all five screw covers with tweezers located in the picture.

Step 4 — Removing the Midframe




- Remove the 10 T4 Torx screws securing the midframe to the display assembly.
- Gently pry the midframe from the display assembly and remove it.

Step 5 — Locating Headphone Jack



- Locate Headphone Jack attached to Midframe.

Step 6 — Removing Headphone Jack

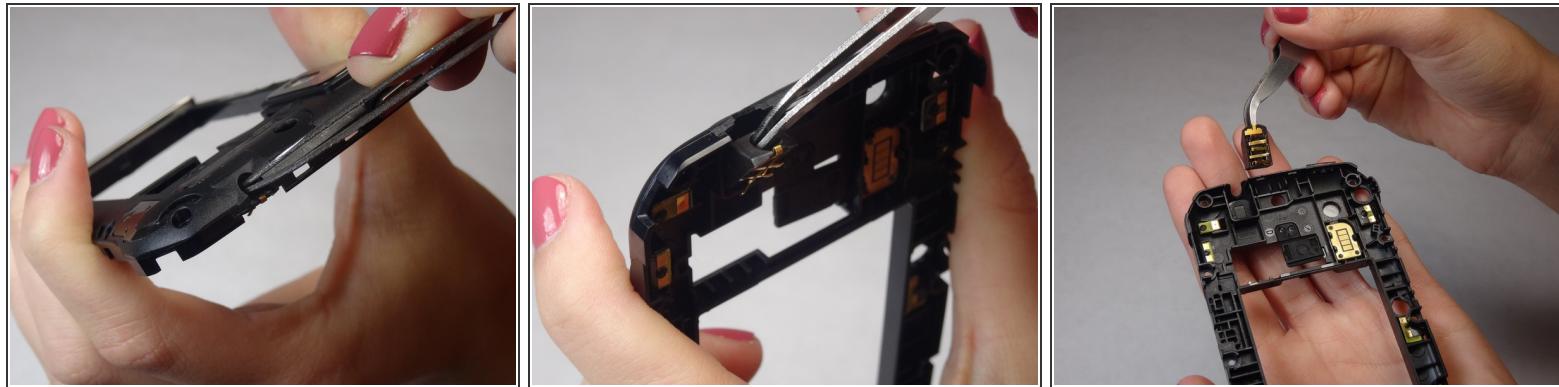

- Use Tweezers to gently remove Headphone Jack from the Midframe.

 The Headphone Jack is attached with adhesive, remove carefully.

To reassemble your device, follow these instructions in reverse order.