



Motorola Photon 4G MB855 Midframe Replacement

Replace the midframe on your Photon 4G.

Written By: Eddie Krause



INTRODUCTION

Use this guide to replace the midframe on your Photon 4G.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Removing the Back Cover



- Insert a plastic opening tool into the indentation at the bottom of the phone between the front and rear covers.
- Lift the back cover from the bottom and remove it from the phone.

Step 2 — Removing the Battery




- Insert a plastic opening tool, or your finger, into the notch in between the sim card and the battery and lift the battery upward.
- Remove the battery from your phone.

Step 3 — Removing Screw Covers



- Remove all five screw covers with tweezers located in the picture.

Step 4 — Removing the Midframe

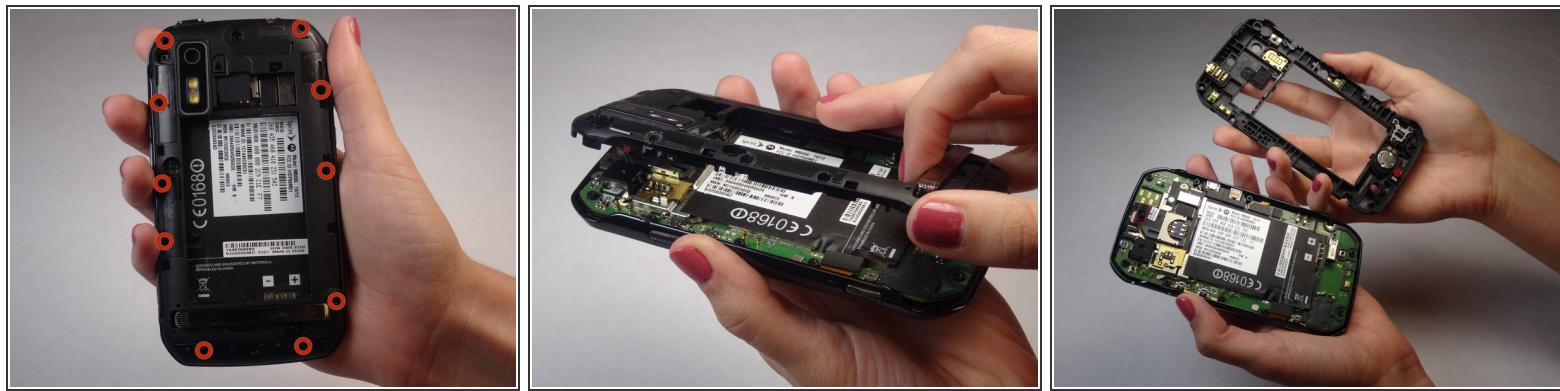

- Remove the 10 T4 Torx screws securing the midframe to the display assembly.
- Gently pry the midframe from the display assembly and remove it.

To reassemble your device, follow these instructions in reverse order.