




Motorola Razr V3c Motherboard (CDMA) Replacement

Written By: Joshua Ruehlig

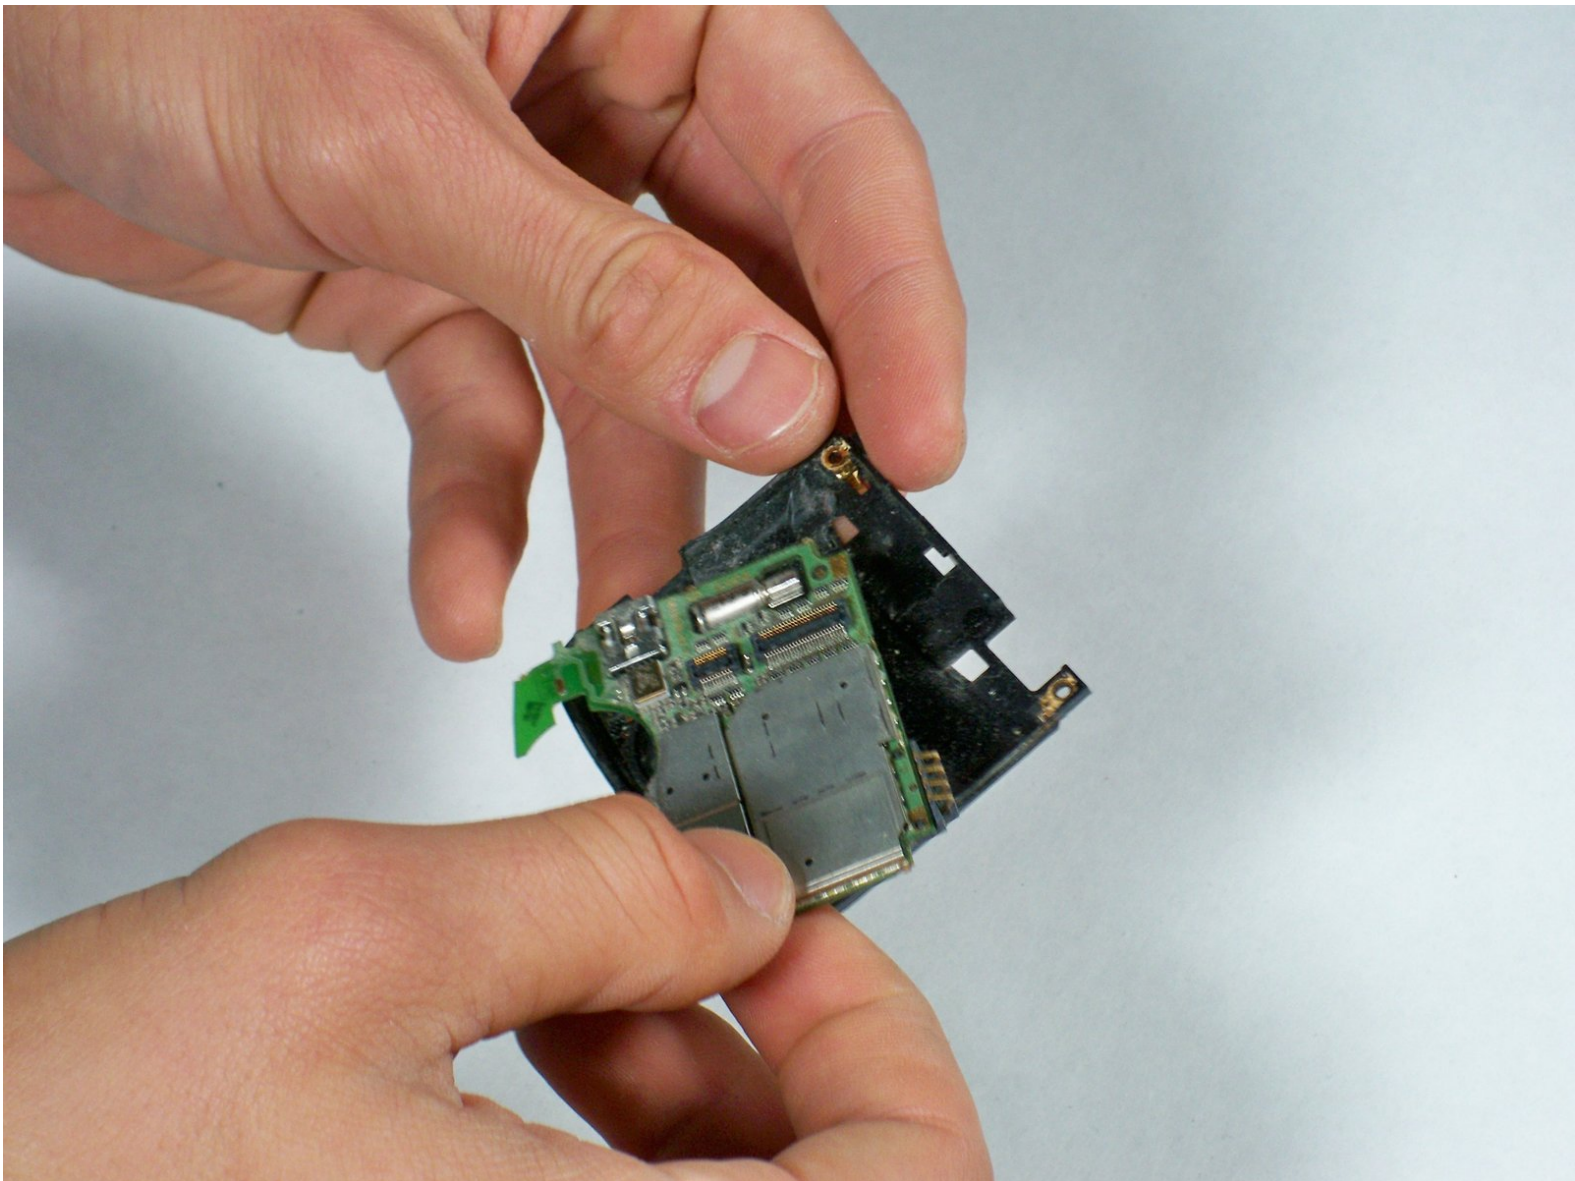

INTRODUCTION

This guide will show you how to remove the motherboard on a Motorola V3c.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery (CDMA)



- Press down on the the rear panel release button while simultaneously prying the rear panel straight away from the V3c.
- Lift and remove the rear panel away from the V3c.

Step 2




- Remove the battery by pushing in the top of the battery and lifting it away from the phone.

Step 3 — Speaker (CDMA)




- Unscrew the two screws in the back using the T6.

Step 4

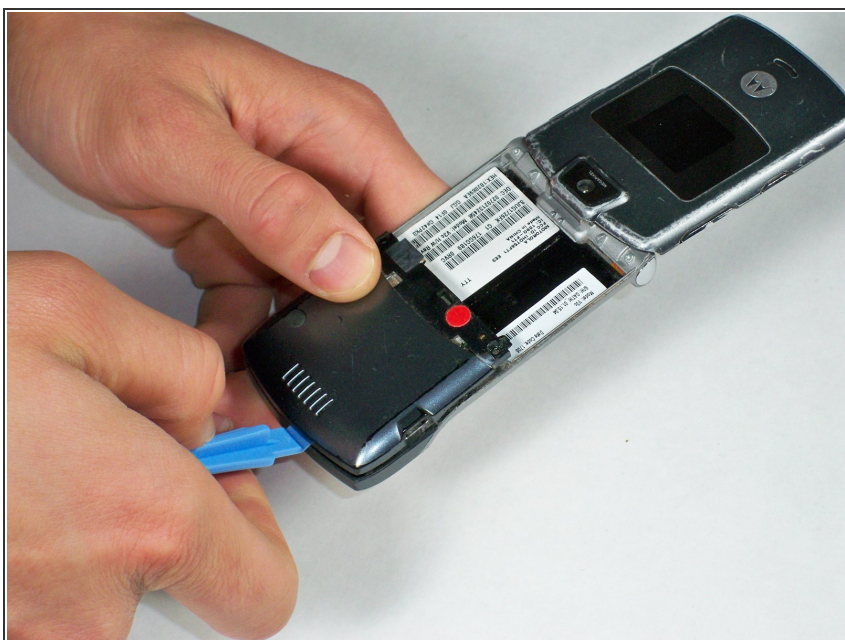



- Use the plastic opening tool to pop the bottom and the sides off the back casing.
- ⚠ Be careful not to pull the back lower cover off too far as it is connected to the phone body by a ribbon.

Step 5

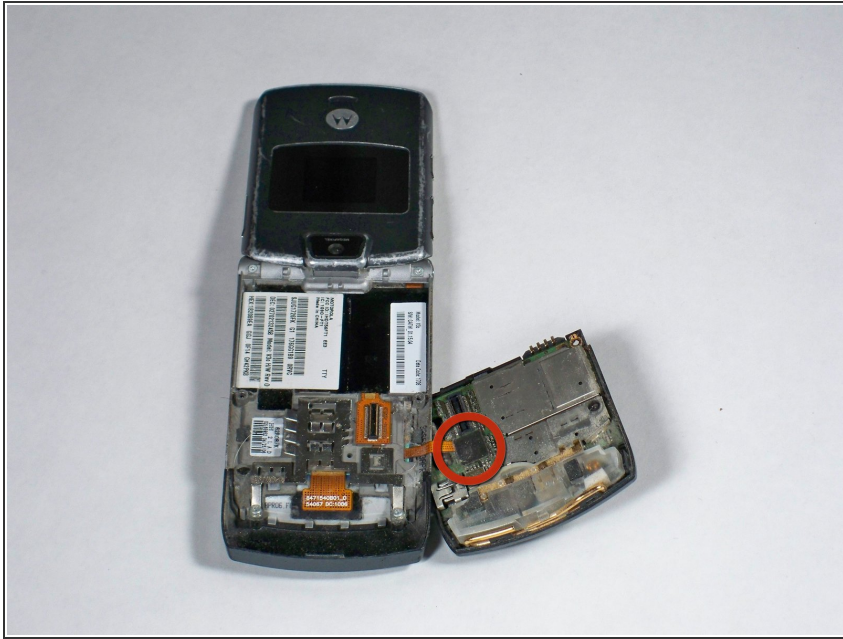

- Peel off the connector between the motherboard and the body of the phone.



Step 6

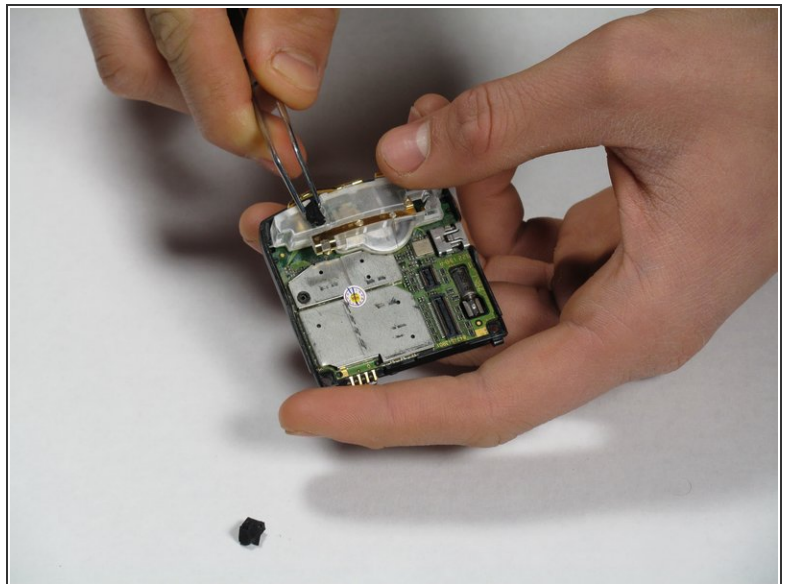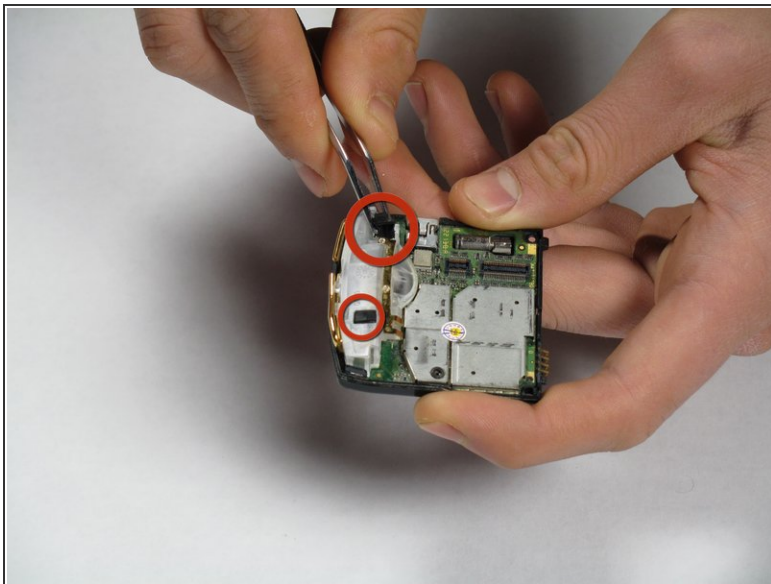

- Pull out the two black rubber covers using tweezers.


 The second rubber cover is much harder to get out.

Step 7

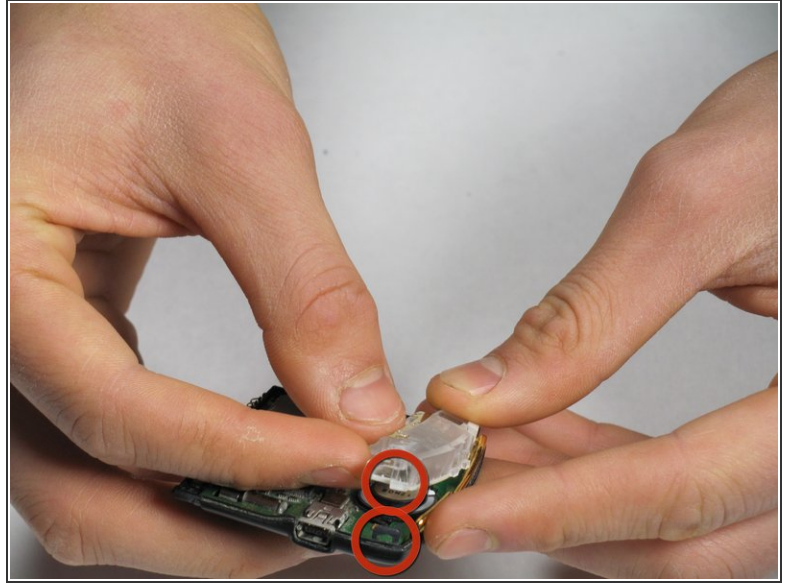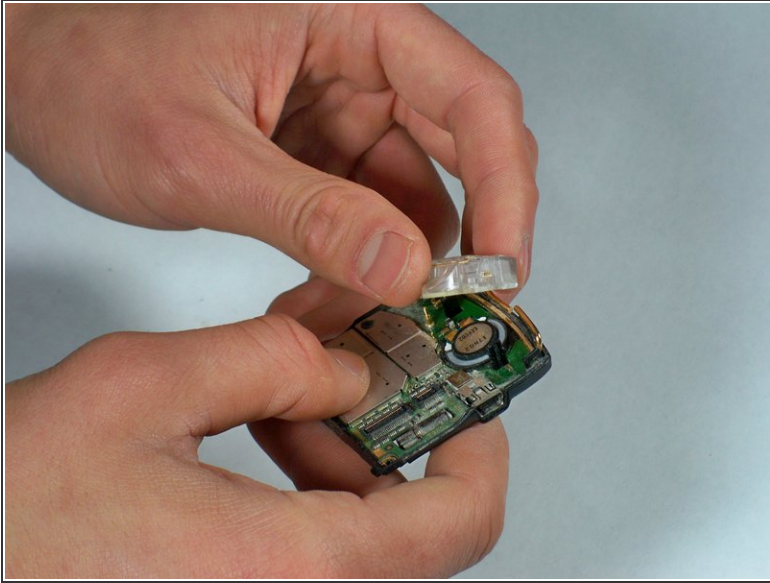



- Pull out the white plastic cover by unclipping the two plastic pieces shown.

Step 8

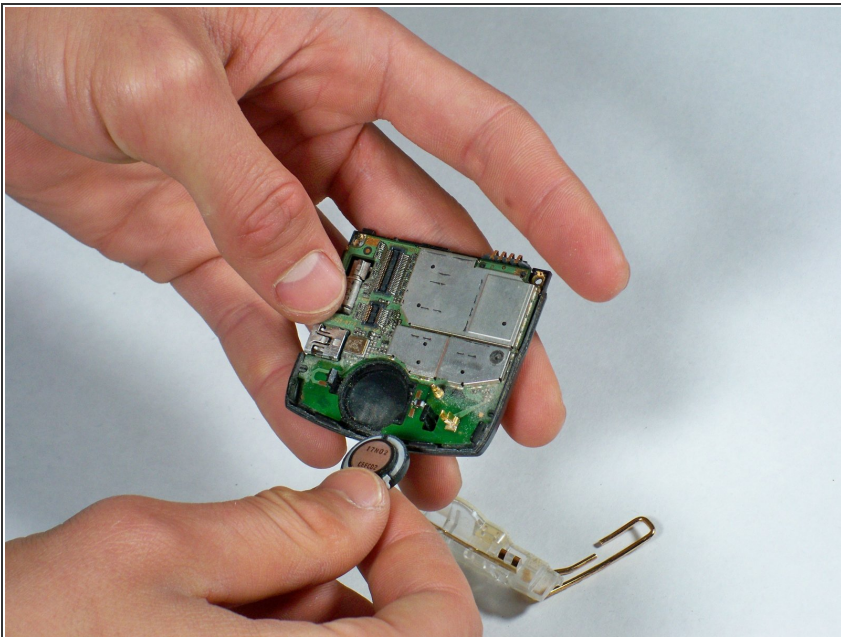

- Pull out the speaker.

Step 9 — Motherboard (CDMA)

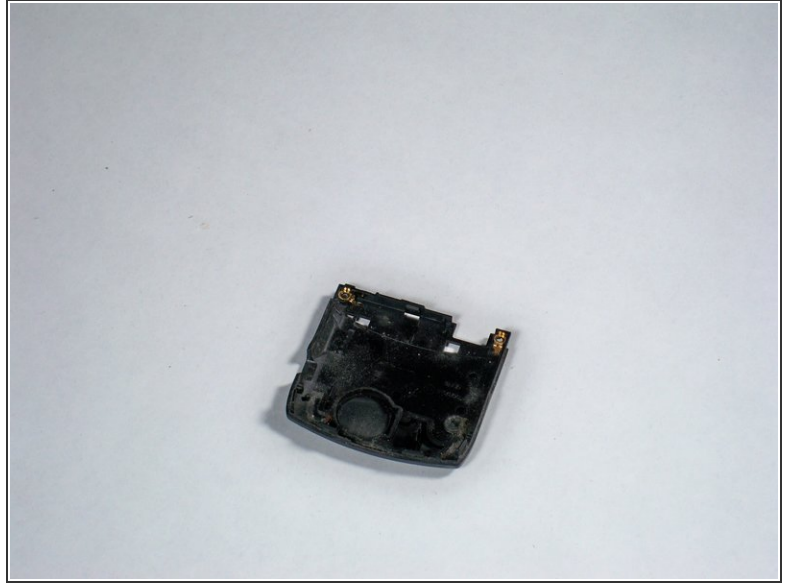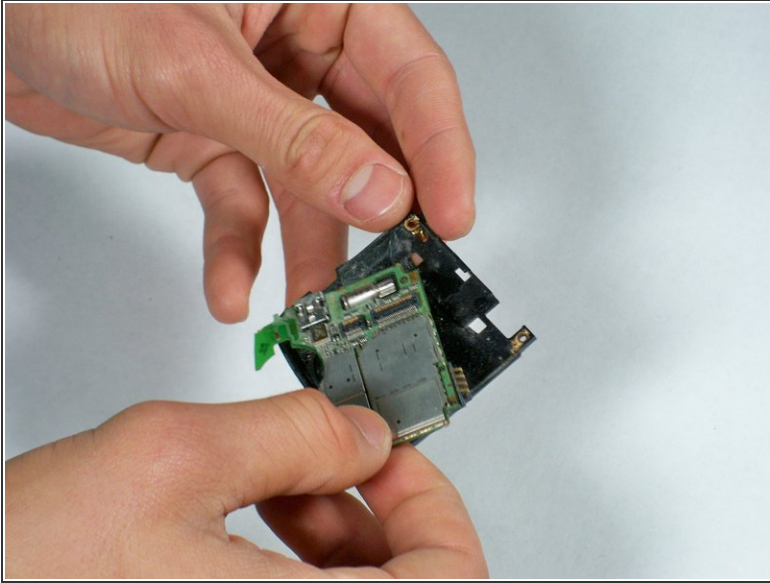

- Pull out the motherboard.
- You may also now replace the bottom lower casing

To reassemble your device, follow these instructions in reverse order.